 


# ***ELECTROLUX***

*Ovens Spare Parts Catalogue*

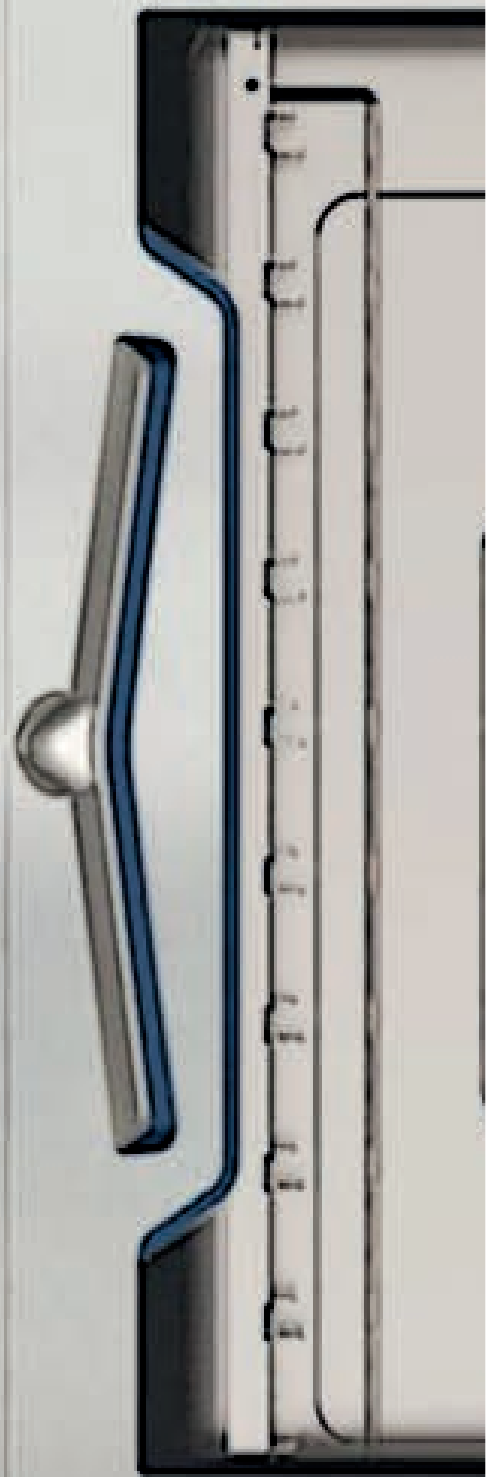

# **ELECTROLUX OVENS**

**GAS  
PARTS**

**ELECTRICAL  
PARTS**

**WATER  
PARTS**

**MECHANICAL  
PARTS**

**ELECTRONIC  
PARTS**

**GASKETS**

**CONSUMABLES**

**ACCESSORIES**

## Igniters

**310755**



**Igniter unit 2-ways 250mA**  
220/240V 50/60Hz 17VA

Electrolux 0C4105 0G5947

## Plugs

**533087**



**Spark plug - insol. Ø 9,5x30 mm**  
connection F2,8x0,8 mm - Ltot=48 mm - cable  
L=450 mm

Electrolux 0831818800 0C1771

**435505**



**Spark plug - insol. Ø 9,5x42,5 mm**  
flange 38x17 mm; cable L=700 mm

Electrolux 005920

**438208**



**Spark plug - insol. Ø 9,5x33 mm**  
flange 51x23 mm - cable L=650 mm

Electrolux 005910

**433582**



**Spark plug - insol. Ø 9,5x45 mm**  
connection Ø 6; cable L=1160 mm; faston F2,8  
mm - Ø 6 mm

Electrolux 0C1137 0C2189

**438209**



**Spark plug - insol. Ø 9,5x33 mm**  
flange 51x24 mm - cable L=450 mm

Electrolux 005911

**700382**



**Spark and detection plug AOS**  
2 x cables L=385 mm, faston 2,8 mm; 1 x  
cable L= 445 mm, faston 4,8 mm

Electrolux 0C4461\_ 0C4462\_

**433733**



**Spark plug - insol. Ø 9,5x35 mm**  
flange 38x17 mm - cable L=600 mm

Electrolux 0C1134

**310761**



**Spark and detection plug gasket**

## Plugs

**338211**



**Spark plug - insul. Ø 6x44 mm electrode  
L=8,0x2 mm**  
connection M4x1 mm

**Electrolux** 002564 004125 059380 0G2265  
0H6628 0H6708

**337983**



**Spark plug - insul. Ø 6x44 mm electrode  
L=13,0x2 mm**  
connection M4x1 mm - L=65 mm

**Electrolux** 051565 051977 056754 058135  
0C3195 0C8653 0G0083 0H6630  
0K9080 0KI377 0KQ943 0M0792

**416306**



**Spark plug - insul. Ø 6,9x44 mm  
electrode L=16,6x2 mm**  
connection Ø 4 mm; L=71,4 mm

**Electrolux** 052610 056640 056720 059988  
0G2066 0H6802 0KW911 0M0793

**416307**



**Spark plug - insul. Ø 9x60 mm electrode  
L=24x32 mm**

**Electrolux** 002344

**435188**



**Spark plug - insul. Ø 9,5x60 mm  
electrode L=21,0x3 mm**  
connection Ø 6,35x12 mm - L=110 mm

**Electrolux** 0H6803 0K2369

**416301**



**Spark plug - insul. Ø 9,5x60 mm  
electrode L=31x21x3 mm**  
connection Ø 6,35 mm; Ltot.=106

**Electrolux** 002637

**546589**



**Spark plug - isol. Ø 9,5x51 mm**  
flange 38x17 mm - connection Ø 6 mm - AOS

**Electrolux** 0C5273

**435330**



**Spark plug - insul. Ø 9,5x60 mm  
electrode L=31x31x3 mm**  
connection Ø 4 mm L=107 mm

**Electrolux** 002638

**416317**



**Control spark plug - isol. Ø 9x60 mm  
electrode L=33x25 mm**

**Electrolux** 002343

**433730**



**Spark plug - isol. Ø 9,5x50 mm electrode  
L=50x3 mm**  
flange 24x17 mm - cable L=520 mm with  
faston F5 mm

**Electrolux** 0C1049

## Plugs

**316418**



**Spark plug**

cable L= 1200 mm, faston F6.3 mm

Electrolux 0C7418

**433581**



**Spark plug - insol. Ø 9,5x35 mm**

**electrode L=35x35x3 mm**

connection faston

Electrolux 0C1068

**338347**



**Spark plug fitting M10x1 - Øint. 7x11 mm**

Electrolux 003610 056641 057960 0G2227  
0K5791

**310761**



**Spark and detection plug gasket**

for 700382

Electrolux 0C4104

## Ignition Cables

**411216**



**Ignition cable L=1000 mm**

faston F2,8-Ø 4 mm

Electrolux 003755

**546592**



**Ignition cable L=580 mm**

F2.8xØ 6 mm - for spark plug oven AOS

Electrolux 0C5327

## Ignition Cables

**546591**



**Ignition cable L=900 mm**  
F2.8xØ 6 mm - for spark plug oven AOS

Electrolux 0C5329

**519246**



**Cables for spark plug (KIT)**

Electrolux 0C0759

**546590**



**Ignition cable L=1040 mm**  
F2.8xØ 6 mm - for spark plug oven AOS

Electrolux 0C5328

**435503**



**Cables for spark plug (KIT)**

Electrolux 003083 006024 0K0788 0K0791

**435177**



**Ignition cable L=1650 mm**  
faston Ø 2,4-Ø 4 mm

Electrolux 0A5295 0C7190 0G4357

**411215**



**Cables for spark plug (KIT)**

Electrolux 003082

**411348**



**Cables for spark plug (KIT)**

Electrolux 005384

**411339**



**Cables for spark plug (KIT)**

Electrolux 006397

**441011**



**Cables for spark plug (KIT)**

Electrolux 0C0760

**411212**



**Cable for spark plug (KIT)**

Electrolux 006023 0KC469

## Ignition Cables

**426379**



Cable HT in coated-copper 2,5 sq.mm  
(sold by meter)

Electrolux 0K0006 0K0762 0K3274 0KC054  
0KC240

---

**459575**



Faston

Electrolux 0C8151

---

**411353**



Sheath Øext 8 mm (sold by meter)

Electrolux 051864

---

## Pilot Burners

**435415**



Pilot burner 3-way

**338025**



Pilot burner 2-way Target  
flange 71x29 mm

Electrolux 054032

Electrolux 003527 003635 004124 004283  
0C3193 0C9672 0G2266 0G2418

**441561**



Pilot burner nozzle 2 x Ø 0,45 mm L=11,50 mm

**438399**



Pipe fitting M10x1 Øint. 4 mm

**435414**



Pilot burner nozzle 2 x Ø 0,25 mm GN  
L=11,50 mm

**338347**



Spark plug fitting M10x1 - Øint. 7x11 mm

**435366**



Pilot burner nozzle 1 x Ø 0,20 mm GPL  
L=11,50 mm

**338218**



Pilot burner nozzle Ø 0,27 mm GN

**338211**



Spark plug - insul. Ø 6x44 mm electrode  
L=8,0x2 mm



## Pilot Burners

**338208**



Pilot burner 3-way

Electrolux 057411

**338211**



Spark plug - insul. Ø 6x44 mm electrode  
L=8,0x2 mm

**338109**



Pilot burner nozzle Ø 0,51 mm GN

**338108**



Pilot burner nozzle Ø 0,25 mm GPL

**338107**



Pilot burner nozzle Ø 0,30 mm GPL

**337989**



Pilot burner 3-way

Electrolux 058146 058502

**338211**



Spark plug - insul. Ø 6x44 mm electrode  
L=8,0x2 mm

**338109**



Pilot burner nozzle Ø 0,51 mm GN

**338108**



Pilot burner nozzle Ø 0,25 mm GPL

**338107**



Pilot burner nozzle Ø 0,30 mm GPL

**337987**



Pilot burner 3-way  
type multigas with nozzle Ø 0,35 mm; with 3  
positions bracket; connection for Ø 4 mm pipe

Electrolux 002572 050812 050813 051976  
058329 0C8652 0H6331 0K7809

**338309**



Pilot burner body with nozzle Ø 0,35 mm

Electrolux 052686

## Pilot Burners

**438399**



**Pipe fitting M10x1 Øint. 4 mm**  
for gas pipe Ø 4 mm - L=10,5 mm

**Electrolux** 046755 052125 0G2219 0G2958  
0K5753 0KE882 0KL495

---

**338335**



**Double cone Ø 4 mm**

**Electrolux** 053666 0HB433

---

**338007**



**Double cone Ø 4 mm**  
for TARGET pilot burner

**Electrolux** 059161 0G2262

---

**338070**



**Double cone Ø 4 mm**  
for pilot burner

**Electrolux** 053665 0G2291

---

## Nozzles



### Gas nozzle M10x1 CH12

<b>440884</b>	Ø 1,35 mm GPL	<b>0A2533</b>
<b>438494</b>	Ø 1,45 mm GPL	<b>0A2091</b>
<b>441138</b>	Ø 1,55 mm GN	<b>0A2103</b>
<b>411966</b>	Ø 1,65 mm GPL	<b>0A2141</b>
<b>438603</b>	Ø 1,80 mm GPL	<b>056793</b>
<b>441136</b>	Ø 1,95 mm GN	<b>0C0141</b>
<b>441139</b>	Ø 2,00 mm GN	<b>0A2102</b>
<b>438288</b>	Ø 2,20 mm GN	<b>0A2083</b>
<b>441133</b>	Ø 2,25 mm GN	<b>0A2475</b>
<b>441142</b>	Ø 2,30 mm GN	<b>0A2081</b>
<b>583621</b>	Ø 2,35 mm GN	<b>0A5356</b>
<b>441137</b>	Ø 2,40 mm GN	<b>0A2104</b>
<b>459537</b>	Ø 2,45 mm GN	<b>058980</b>
<b>438658</b>	Ø 2,50 mm GN	<b>059382</b>
<b>440651</b>	Ø 2,55 mm GN	<b>059529</b>
<b>441289</b>	Ø 2,70 mm GN	<b>056795</b>
<b>441422</b>	Ø 2,80 mm GN	<b>059383</b>
<b>441363</b>	Ø 2,85 mm GPL	<b>059358</b>
<b>442160</b>	Ø 3,40 mm GN	<b>002782</b>
<b>440988</b>	Ø 3,50 mm GN	<b>0A5170</b>
<b>438697</b>	Ø 3,60 mm GN	<b>059359</b>
<b>520393</b>	Ø 3,70 mm GN	<b>0A2299</b>
<b>442059</b>	Ø 3,80 mm GN	<b>002979</b>
<b>441134</b>	Ø 4,00 mm GN	<b>0A2306</b>
<b>442156</b>	Ø 4,35 mm GN	<b>002863</b>
<b>442155</b>	Ø 4,50 mm GN	<b>002864</b>
<b>436641</b>	Ø 5,00 mm GN	<b>0A2106</b>



### Gas nozzle M10x1 CH12

<b>438656</b>	Ø 1,30 mm GPL	<b>059364</b>
<b>338050</b>	Ø 1,45 mm GPL	<b>056470</b>
<b>442157</b>	Ø 1,50 mm GN	<b>002862</b>
<b>526701</b>	Ø 1,55 mm GN	<b>003722</b>
<b>441349</b>	Ø 1,65 mm GPL	<b>054127</b>
<b>440714</b>	Ø 1,75 mm GN	<b>003723</b>
<b>441500</b>	Ø 1,80 mm GN	<b>054631</b>
<b>441563</b>	Ø 1,90 mm GPL	<b>054033</b>
<b>441258</b>	Ø 2,20 mm GPL	<b>055018</b>
<b>441430</b>	Ø 2,25 mm GN	<b>056471</b>
<b>518421</b>	Ø 2,30 mm GN	<b>002865</b>
<b>442082</b>	Ø 2,45 mm GN	<b>002267</b>
<b>442107</b>	Ø 2,55 mm GPL	<b>003997</b>
<b>442143</b>	Ø 2,75 mm GN	<b>003371</b>
<b>441562</b>	Ø 3,00 mm GN	<b>054034</b>
<b>441558</b>	Ø 3,20 mm GN	<b>054084</b>
<b>441243</b>	Ø 3,30 mm GN	<b>055388</b>
<b>526545</b>	Ø 3,55 mm GN	<b>003987</b>
<b>441253</b>	Ø 3,80 mm GN	<b>055133</b>
<b>526538</b>	Ø 4,10 mm GN	<b>003993</b>



### Gas nozzle

<b>411977</b>	Ø 1,05 mm GPL	<b>050501</b>
<b>411968</b>	Ø 1,20 mm GPL	<b>026213</b>
<b>411946</b>	Ø 1,50 mm GN	<b>025954</b>
<b>411969</b>	Ø 1,80 mm GPL	<b>025867</b>
<b>411944</b>	Ø 1,85 mm GN	<b>025868</b>
<b>411942</b>	Ø 2,00 mm GN	<b>026720</b>
<b>411948</b>	Ø 2,20 mm GN	<b>026214</b>
<b>411951</b>	Ø 2,25 mm GN	<b>051472</b>
<b>411954</b>	Ø 3,15 mm GN	<b>057650</b>



### Pilot burner nozzle

<b>338218</b>	Ø 0,27 mm GN	<b>059215</b>
<b>338136</b>	Ø 0,75 mm GC	<b>059381</b>



### Pilot burner nozzle

<b>338108</b>	Ø 0,25 mm GPL	<b>054593</b>
<b>338107</b>	Ø 0,30 mm GPL	<b>053667</b>
<b>338109</b>	Ø 0,51 mm GN	<b>053668</b>
<b>338336</b>	Ø 0,80 mm GC	<b>053803</b>



### Pilot burner nozzle

<b>435366</b>	1 x Ø 0,20 mm GPL	<b>054286</b>
<b>435414</b>	2 x Ø 0,25 mm GN	<b>054037</b>
<b>441561</b>	2 x Ø 0,45 mm	<b>054038</b>

## Thermocouples

**338315**



**Thermocouple M9x1 L=1200 mm**  
mounting sleeve special S332 - serie 200 -  
alluminized tip

<b>Electrolux</b>	002579	004123	020094	059816
	0G2382	0K2943	0K5728	727757

**338206**



**Thermocouple QUICK M9x1 L= 600 mm**  
mounting sleeve smooth S332 - serie 290

<b>Electrolux</b>	004942	057781	058133	059283
-------------------	--------	--------	--------	--------

**338325**



**Thermocouple extension M9x1 L=600 mm**  
female nut M9x1

<b>Electrolux</b>	055032	0A2405	0K2956
-------------------	--------	--------	--------

**435413**



**Interrupted thermocouple M9x1 L=1000 mm with cables L=650 mm**  
alluminized tip

<b>Electrolux</b>	054055
-------------------	--------

**338053**



**Nut M8x1 mm**  
for thermocouple and thermostat

<b>Electrolux</b>	055033
-------------------	--------

## Gas Valves and Accessories

**439850**



**Gas valve Honeywell VK4105A - FF Ø 3/4" - 230V 50Hz**  
pressure range 5-50 mbar; working temperature 0+60°C; fast opening with regulator

Electrolux 005925

**338207**



**Gas valve 810 ELETTROSIT Ø 3/4"FF - 230V 50Hz**  
thermocouple connection M9x1 mm; max gas inlet pressure 50 mbar; outlet pressure 3+18 mBar - side pilot and thermocouple connections

Electrolux 053643 054538 057543 0K7815

**440132**



**Gas valve Honeywell VK4105P - FF Ø 3/4" - 230V 50Hz**  
pressure range 8-50 mbar; working temperature 0+60°C; fast opening with Hi/Low regulator

Electrolux 006596

**337960**



**Gas valve 820 NOVA Ø 1/2"FF - 230V 50Hz**  
thermocouple connection M9x1 mm; max gas inlet pressure 60 mBar; with drilled flow regulator plug

Electrolux 003719

**338032**



**Elbow connection 1/2" for 820 NOVA**  
with screw and O-ring

Electrolux 0A5398

**338166**



**Gas valve 820 NOVA Ø 1/2"FF - 220V 60Hz**  
thermocouple connection M9x1 mm; max gas inlet pressure 60 mBar; max outlet pressure 3+30 mBar; slow ignition device 3+5 mBar

Electrolux 006182

**614000**



**Support for coil gas valve Ø 13 mm**  
with magnet Ø 11 mm

Electrolux 0L1095

**352049**



**Rectifier with cable L=1000 mm**

Electrolux 002715

**338192**



**Gas valve 810 ELETTROSIT 3/4"FF - 230V 50Hz**  
thermocouple connection M9x1 mm - pressure range 3-18 mBar - work temp 0-60°C; lower pilot and thermocouple connections

Electrolux 0A2035

**338044**



**Electric ignition contact with cables L=880 mm**  
suitable for 820 NOVA and ELETTROSIT S2

Electrolux 004217 056601 0H6997

## Gas Valves and Accessories

**338317**



**Valve microswitch without cables**  
suitable for 820 NOVA and ELETTROSIT S2

Electrolux 054539

**582294**



**Gas valve 848 SIGMA Ø 3/4"MM - 220V 60Hz**  
Pi max 1/2psi; Po 0,2"-5" WC

Electrolux 0C1879

**442133**



**Knob for NOVA valve**

Electrolux 003704 056452



**Gas nozzle**

- 324756** Ø 4,75x18 mm - H=1 mm **0C4384**
- 536531** Ø 5,50x18 mm - H=1 mm **0C2442**
- 436355** Ø 5,70x18 mm - H=1 mm **0C1140**
- 459607** Ø 5,80x18 mm - H=1 mm **0C2446**
- 536535** Ø 6,00x18 mm - H=1 mm **0C2445**
- 526301** Ø 6,25x18 mm - H=1 mm **0C4386**
- 436354** Ø 7,00x18 mm - H=1 mm **0C1139**
- 536534** Ø 7,50x18 mm - H=1 mm **0C2444**
- 436377** Ø 7,80x18 mm - H=1 mm **0C1163**
- 436356** Ø 8,00x18 mm - H=1 mm **0C1141**
- 583793** Ø 8,50x18 mm - H=1 mm **0C1143**

**310673**



**Plug for gas outlet M10x1**  
for NOVA gas valve

Electrolux 059474

**337958**



**Gas valve 830 TANDEM Ø 1/2"FF - 230V 50Hz with PR**  
max gas inlet pressure 60 mBar; max outlet pressure 3+50 mBar; working temperature 0+60°C

Electrolux 002340 0K1416 0K1416

**338034**



**Gas valve 840 SIGMA - 230V 50Hz**  
inlet-outlet fittings Ø 3/4"MM; Pmax gas inlet 60 mbar; Pmax gas outlet 2+50 mbar; temperature range 0+60°C

Electrolux 005757 0C7600

**337972**



**Gas valve 836 TANDEM Ø 1/2"FF - 230V 50Hz**  
230V RAC, max gas inlet pressure 50 mBar; max outlet pressure 2+45 mBar; working temperature 0+60°C

Electrolux 002714 0K2200

**433587**



**Gas valve 848 SIGMA - 230V 50Hz**  
inlet-outlet fittings Ø 3/4"MM; pressure range regulation 0,5+12 mbar; with slow ignition device 2+4 mbar

Electrolux 0C1057

**337981**



**Double coil 230V 50Hz**  
for gas valve TANDEM

Electrolux 002452

## Gas Valves and Accessories

**338184**



Gas safety valve, D3 1/2"FF

Electrolux 050106

**526452**



Flange for gas valve 3/4"  
dim. 32x32 mm

Electrolux 006430

**440605**



Double cone Ø 16 mm

Electrolux 052671 0A2547

**441650**



Pipe fitting for gas valve Ltot=52 mm  
16.2-14.9

Electrolux 052059 052718

## Gas Pipes

**316215**



Flexible gas hose Ø 1/2" MF L=500 mm -  
EN14800  
AISI 304

Electrolux 0S0695 0S0757 0S1025

**522421**



Flexible gas hose Ø 1/2" MF L=1000 mm -  
EN14800  
AISI 304

Electrolux 0S0559 0S1006



## Gas Pipes

**522422**



Flexible gas hose Ø 1/2" MF L=1500 mm -  
EN14800  
AISI 304

Electrolux OS0758 OS1007

**522429**



Flexible gas hose Ø 1/2" MF L=2000 mm -  
EN14800  
AISI 304

Electrolux OS0560 OS1015

**436164**



Pilot gas pipeline

Electrolux OC0924

**435533**



Gas pipe Ø 10x12 mm L=335

Electrolux OC1084

**438839**



Gas manifold 4 branches 395x270 mm  
connection 1" M

Electrolux OC1342 806815600

**526452**



Flange for gas valve 3/4"

**440605**



Double cone Ø 16 mm

**440132**



Gas valve Honeywell VK4105P - FF Ø 3/4" -  
230V 50Hz

**411937**



Double cone for hose Ø 18 mm  
H=7,5 mm

Electrolux 029321

**441617**



Double cone for hose Ø 20 mm

Electrolux 052007



## Gas Burners

**442063**



Venturi 220x120x70 mm

Electrolux 002636 0K1149

**341932**



Bar burner Ø 50x300 mm

Electrolux 056451

**526718**



Bar burner Ø 50x270 mm

Electrolux 003677

**438626**



Gasket Ø 10,5x14x1,5 mm

Electrolux 054029

**442131**



Bar burner Ø 50x343 mm

Electrolux 003709

**435541**



Burner gasket Ø 148 mm  
dim. 13x63 mm, holes Ø 6 mm

Electrolux 0C1048

**341935**



Bar burner Ø 50x525 mm

Electrolux 054028

**529193**



Burner 190x60x100 mm  
flange Ø 155 mm

Electrolux 0C1082

**437881**



Bar burner Ø 60x572 mm

Electrolux 003992 004831

## Gas Burners

**317686**



**Burner AOSQ 101-102-201-202**

Electrolux 0C4289

**700382**



**Spark and detection plug AOS**

**324916**



**Flange Ø 18 mm**

**310751**



**Gasket for radial fan Ø 34x78x6 mm**

**310412**



**Radial fan RG128 70W 230V 50Hz**

**415628**



**Burner 525x126 mm**

Electrolux 002824

**533101**



**Burner boiler [Kit]  
for AOS061 - AOS101 - AOS102**

Electrolux 0C1065 0C1865 0C4787

**433584**



**Burner gasket 124x130 mm**

**345152**



**Flame control device 579DBC**

**310755**



**Igniter unit 2-ways 250mA**

**441564**



**Nozzle holder Øext 15 - 20 mm Øint 9 mm**

Electrolux 054030

**441555**



**Nozzle support M15x1 mm L=20 mm**

Electrolux 054118

**410315**



**Pipe fitting M15 mm**

Electrolux 020988 051948

## Gas Burners

**438627**



**Aerator Ø 10x40 mm**  
thread for grub screw M5

Electrolux 054039

**526456**



**Burner box**  
dim. 270x145x175 mm

Electrolux 006402

**615980**



**Back panel combustion chamber**

Electrolux 0C3786

**441965**



**Burner box**

Electrolux 006403

**533035**



**Burner box**

Electrolux 0C1630

**526457**



**Burner box**

Electrolux 006401 0C0952 0C1092

**526319**



**Burner box**  
dim. 245x115x185 mm

Electrolux 005907 006621

**438393**



**Air regulator Ø 17x22xh42 mm**  
flange Ø 28 mm

Electrolux 051389

**441976**



**Burner box**  
dim. 272x180x150 mm

Electrolux 006239

**582475**



**Air regulator Ø 20x22 mm - H=42 mm**

Electrolux 002842 004050 004455

## Gas Burners

**438345**



Air regulator Ø 19x22/28 mm - H=42 mm

Electrolux 052207

**438397**



Air regulator Ø 23x26/32 mm - H=42 mm

Electrolux 051774 0G2064

**324916**



Flange Ø 18 mm  
dim. 110x83 mm, threaded rods M4 L= 16 mm

Electrolux 0C4110

## Flame Control Devices

**347962**



Flame control device S4560A-1008  
TW=0 sec. - TS=10 sec. 220/240V 50Hz  
10VA

Electrolux 002351 0C0921 0E1499 0K2372

**435504**



Flame control device S4565C-1033  
TW=- sec. - TS=5 sec. 230V 50/60Hz 4VA

Electrolux 005924

**435329**



Flame control device S4560M-1010  
TW=10 sec. - TS=5 sec. 220-240V 50Hz  
10VA

Electrolux 002641 0K1525

**435237**



Flame control device transformer  
220/240V 2VA 50/60Hz

Electrolux 003602 003603

## Flame Control Devices

**338172**



**Flame control device 537ABC**

TW=1,5 sec. - TS=5 sec. 220/240V 50/60Hz  
12VA

Electrolux 005908

**433586**



**Flame control device 577DBC**

TW=1,5 sec. - TS=6 sec. 220/240V 50/60Hz  
20VA

Electrolux 0C1059 0C1878

**345152**



**Flame control device 579DBC**

TW=1,5 sec. - TS=3,5 sec. 220/240V 50/60Hz  
12VA

Electrolux 0C4260

**317345**



**Flame control device 579DBC**

TW=1,5 sec. - TS=6 sec. 220/240V 50/60Hz  
12VA

Electrolux 0C8189 0G5948

## Heat exchangers

**325268**



**Gasket Ø 130x162x4,7 mm**

Electrolux 0C4095

**441711**



**Gasket 73,5x73,5x2,6 mm**  
Øint. 53.5 mm

Electrolux 005760

## Heat exchangers

**441807**



**Gasket 85x80x4 mm**  
Øint. 51 mm; for heat exchanger 441813

Electrolux 005754

**415719**



**Gasket 110x110x3 mm**  
Øint. 70; for heat exchanger 343341

Electrolux 002746 0K2502


**412519**



**Gasket 100x100x2,5 mm**  
Øint. 77 mm; for heat exchanger 343338

Electrolux 002629

 **412520**

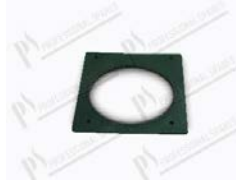

**Gasket 119x108x2,5 mm**  
Øint. 88 mm; for heat exchanger 343341

Electrolux 002745

**435308**



**Gasket 100x100x5 mm**  
Øint 77 mm; for heat exchanger 438218

Electrolux 003873 0G5209

**435305**



**Gasket 140x135x5 mm**  
Øint 90 mm; for exchanger 442116

Electrolux 003882 0K2116 0K2117

**415720**



**Gasket 100x100 mm**  
Øint. 55 mm; for heat exchanger 343338

Electrolux 002704

**435386**



**Gasket 150x270 mm**  
Ø 90 mm

Electrolux 003883

**435307**



**Gasket 110x110mm**  
Øint. 70 mm; for heat exchanger 438218 e 442116

Electrolux 003875

**442117**



**Gasket 165x291 mm**

Electrolux 003874

## Heat exchangers

**436175**



**Gasket 184x184x4 mm**  
Ø 130 mm

Electrolux 0C1036

**310628**



**Heat exchanger AOSQ gas 20 2/1**  
dim. 645x810x170 mm

Electrolux 0C4327

**581820**



**Exchanger AOSQ Gas 10 2/1**  
dim. 750x750x170 mm

Electrolux 0C4299

**436175**



**Gasket 184x184x4 mm**

**581821**



**Gasket Ø 64x97x3,5 mm**

**581821**



**Gasket Ø 64x97x3,5 mm**

**436175**



**Gasket 184x184x4 mm**

**343338**



**Exchanger FCV/G10 (s.n. ...741)**  
flange with 4 holes

Electrolux 002703

**582420**



**Heat exchanger AOSQ gas 10 1/1**  
dim. 740x600x145 mm

Electrolux 0C4318

**442117**



**Gasket 165x291 mm**

**415720**



**Gasket 100x100 mm**

**436175**



**Gasket 184x184x4 mm**

**412519**



**Gasket 100x100x2,5 mm**

**433731**



**Gasket Ø 51x86,5x3 mm**



## Heat exchangers

**438218**



**Exchanger FCV/G10 1/1 (s.n. 742...)**  
flange 100x100 mm with 4 screws joined

Electrolux 003881

**442117**



 
**Gasket 165x291 mm**

**435308**



**Gasket 100x100x5 mm**

**435307**



**Gasket 110x110mm**

**442116**



**Exchanger for FCV/G10-20 (s.n. 747...)**  
flange 145x135 mm with 5 screws joined

Electrolux 003884

**435386**



**Gasket 150x270 mm**

**435307**



**Gasket 110x110mm**

**435305**



**Gasket 140x135x5 mm**

**343341**



**Exchanger FCV/G20 (s.n. ...746)**  
flange 120x110 mm with 2 holes + 2 screws joined

Electrolux 002744

**435386**



**Gasket 150x270 mm**

**415719**



**Gasket 110x110x3 mm**

**412520**



**Gasket 119x108x2,5 mm**

**441813**



**Exchanger FCV/G6**

Electrolux 005753

**441807**



**Gasket 85x80x4 mm**

**441711**



**Gasket 73,5x73,5x2,6 mm**

**519474**



**Heat exchanger support**

Electrolux 0C0246



## Heat exchangers

**433731**



**Gasket Ø 51x86,5x3 mm**

**Electrolux** 0C1132

**581821**



**Gasket Ø 64x97x3,5 mm**

**Electrolux** 0543833200 0C2208

## Switches, Push Buttons, Selectors

**415726**



**Momentary push switch red backlit  
22x30 mm**  
16A 250V; faston 6,35x0,8 mm - with switch cover

**Electrolux** 054547 055014

**415729**



**Green double-pole backlit switch 22x30 mm; I-II**  
16(4)A 250V; faston 6,35x0,8 mm - with pilot lamp and switch cover

**Electrolux** 053837

**415724**



**Green double-pole backlit switch 22x30 mm; 0-I**  
16(4)A 250V; faston 6,35x0,8 mm - with splash cover

**Electrolux** 050491 053810 056702 056703  
081680 085609 085634 089013  
0C7900 0HA083 0K0035 0K3925  
0KF921 0KX213 0PE186

**415727**



**Green double-pole backlit switch 22x30 mm**  
16A 250V; faston 6,35x0,8 mm - with switch cover and fan serigraphy

**Electrolux** 054552

**420600**



**Protecting cover for button 22x30 mm**

**Electrolux** 083565

## Switches, Push Buttons, Selectors

**425576**



**Green double-pole backlit switch 25x25 mm; 0-I**

**Electrolux** 0G8415 0H9723 0H9811 0K4925  
0K8029 0K8090 0KE475

**338905**



**Momentary push switch black Ø 25 mm - (flash) 16(6)A 250V Tmax 120°C**

**Electrolux** 053978

**435241**



**Red push-button Ø 16 mm 3A 260V; T 125°C; faston 2,8x0,8 mm**

**Electrolux** 002418 006848 0G2313 0G2314  
245887 245891

**435417**



**Cover for push button Ø 25 mm**

**Electrolux** 053979 0K3030

**338587**



**Push button with lamp holder Ø 16 mm**

**Electrolux** 005137 0H6285

**438170**



**Push button 16A 250V - ROLD**

**Electrolux** 003766 0K3391

**442039**



**Cover 15x15 mm Ø hole 8 mm**

**Electrolux** 005139 0H6288

**583047**



**Push button holder Ø 24/28xh21 mm Øint. 21,5 mm**

**Electrolux** 003767

**435361**



**Push switch green Ø 25 mm 16(6)A 250V - terminals 6,35x0,8 mm- 2 NO**

**Electrolux** 054518 082446 0K2150 0K3029

**416720**



**Green rotary switch Ø 22 mm - 2 pos. 0-1 with led 240V stable - 2 auxiliary contacts NO + 1 auxiliary contact led**

**Electrolux** 0H2641 0K9113 767110401

## Lamps and Lamp Holders

**432653**



Lamp 2,6W 130V BA9S

Electrolux 0H2639 0K9109 0KC506

**612514**



Pilot lamp Ø 6 mm 230V yellow - cable L= 260 mm  
lens Ø 7,7 mm; faston F6,3 mm

Electrolux 0C3300

**427658**



Lamp 15W 240V E14  
Tmax 300°C

Electrolux 0A2883 0H7035 0K6585 0K6588  
0KS867

**340409**



Fluorescent pilot lamp Ø 6 mm 230V  
without lens  
L=59 mm

Electrolux 054150 0HB138 0K2894

**312452**



Lamp 25W 230-240V  
with lamp holder

Electrolux 0U3038

**340403**



Green pilot lamp Ø 9 mm 240V  
lens Ø 10 mm, L=55 mm - faston 6,3x0,8 mm  
Tmax 120°C

Electrolux 058544 0K2965

**614362**



Lamp 40W 230V E14  
for refrigeration and ovens; Tmax 300°C

Electrolux 081696 0S0596

**340420**



Orange pilot lamp Ø 9 mm 240V -  
self-locking  
lens Ø 10 mm, L=55 mm - faston 6,3x0,8 mm  
Tmax 120°C

Electrolux 058522 0KF692

**610847**



Halogen lamp 10W 12V G4 300°C special  
oven

Electrolux 002956 007056 0660806500 0660808300  
0C4396 0C9877 0CB661 0H7038  
0K2984 0K5979 0K8586 0KE767  
0S1116 0W1780

**438201**



Yellow lamp Ø 10 mm L=31 mm  
cable L=600 mm

Electrolux 005215 0C4182

## Lamps and Lamp Holders

**417968**



**White pilot lamp Ø 13 mm - 240V - L=60 mm**  
lamp Ø 9 mm, with lock washer and silicon O-ring

Electrolux 0H2633 0K9096 763100102

**352656**



**Lamp holder round Ø 35,5 mm - E14 25W 230V**  
dim. Ø 38,5 mm; faston 90° 6,3 mm; Tmax. 300°C

Electrolux 002625 0C5508

**318084**



**Green lamp cap Ø 6 mm - L=10 mm**

Electrolux 054151 0HB189 0K2899 0K9373

**435545**



**Lens Ø 44x3,3 mm**

**435360**



**Lamp 25W 240V E14**

**459567**



**Lamp holder Ø 35 mm with lamp 10W 12V G4 300°C) [Kit]**

Electrolux 0C5334

**435332**



**Flange lamp holder**

**427658**



**Lamp 15W 240V E14**

**410161**



**Gasket for oven lamp**

## Lamps and Lamp Holders

**532361**



Lamp holder Ø 35,5 mm cable 350 mm with plug  
dim. Ø 38,5 mm; for halogen lamp G4 20W 12V 300°C

Electrolux 002709 006106 0C1555

**610847**



Halogen lamp 10W 12V G4 300°C special oven

**526640**



Flange

**435545**



Lens Ø 44x3,3 mm

**435332**



Flange lamp holder

**410161**



Gasket for oven lamp

**310269**



Lamp cap Ø 40 mm H=15 mm

**433987**



Lamp holder Ø 35,5 mm cable 2400 mm dim. Ø 38,5 mm; with faston F6,3 mm and terminal Ø 0,8 mm; for halogen lamp G4 20W 12V 300°C

Electrolux 007055

**610847**



Halogen lamp 10W 12V G4 300°C special oven

**435545**



Lens Ø 44x3,3 mm

**435332**



Flange lamp holder

**410161**



Gasket for oven lamp

**310269**



Lamp cap Ø 40 mm H=15 mm

## Lamps and Lamp Holders

**433753**



Lamp holder Ø 35,5 mm cable 3500 mm  
dim. Ø 38,5 mm; with faston F6,3 mm and  
terminal Ø 0,8 mm; for halogen lamp G4 20W  
12V 300°C

Electrolux 007105 0C1200

**347769**



Lamp holder Ø 35,5 mm cable in silicon  
4000 mm  
lamp GY 6,35

Electrolux 0F0016 0K8369 0K8370

**610847**



Halogen lamp 10W 12V G4 300°C special  
oven

**610847**



Halogen lamp 10W 12V G4 300°C special  
oven

**526640**



Flange

**435545**



Lens Ø 44x3,3 mm

**435545**



Lens Ø 44x3,3 mm

**435332**



Flange lamp holder

**435332**



Flange lamp holder

**410161**



Gasket for oven lamp

**410161**



Gasket for oven lamp

**347136**



Lamp holder round complete Ø 35,5 mm  
- E14 25W 230V  
dim. Ø 38,5 mm; faston 90° 6,3 mm - Tmax  
300°C - with lamp 25W

Electrolux 006847

**310269**



Lamp cap Ø 40 mm H=15 mm

**435360**



Lamp 25W 240V E14

**352656**



Lamp holder round Ø 35,5 mm - E14 25W  
230V

## Lamps and Lamp Holders

**427900**



**Lamp holder Ø 35 mm E14, 25W 250V**  
lamp 15W TMax 300° 230-240V, gasket and lens Ø 33/42 mm

Electrolux 0E3681 0KB663 0KQ907

**427658**



**Lamp 15W 240V E14**

**320125**



**Lamp holder round Ø 35,5 mm G9 40W 230V**  
dim. Ø 38,5 mm; lamp and lens - minicombi

Electrolux 0C9428

**320320**



**Lens Ø 35 mm**

**311520**



**Halogen lamp 40W 230V G9 300°C**

**317381**



**Round lamp holder Ø 48 mm E14**  
with glass - Tmax 270°

Electrolux 0C3043 0C4178 0C7999

**435360**



**Lamp 25W 240V E14**

**427679**



**Halogen lamp 5W 12V Ø 29 mm**  
with cable 450 mm

Electrolux 0H7040 0K3358

**438669**



**Lamp holder Ø=54 mm - L=50 mm**  
for lamp connection E14

Electrolux 054320

**435360**



**Lamp 25W 240V E14**

**433829**



**Lens**

**427682**



**Lamp holder 75,5x50 mm - E14 max. 40W 240V**  
without glass; Tmax 300°C

Electrolux 0H6577 0H6580 0K2044

**614362**



**Lamp 40W 230V E14**

**341781**



**Lamp 40W 230V E14**



## Lamps and Lamp Holders

**427680**



**Lamp holder 70x55 mm - E14 25W 240V**  
faston connection 6,3x0,8 mm

Electrolux 0K3363 0K3364 350116

**435385**



 
**Lamp holder 70x55 mm (without lamp)**

**427657**



**Frame+glass+gasket [Kit]**

**435385**

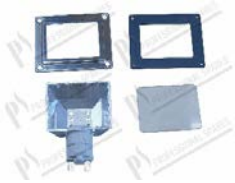

**Lamp holder 70x55 mm (without lamp)**  
framework, glass and gasket included; for  
lamp conn. E14 max 30W 240V; faston 6,3x8  
mm; centre distance 70x55 mm

Electrolux 003956

**200011**



**Lamp holder 101x55 mm - E14 25W 240V**  
faston connection 6,3x8 mm

Electrolux 0H6617

**435360**



**Lamp 25W 240V E14**

**427696**



**Lens 110x65x4 mm**

**421017**



**Lamp holder fixing frame 118x71 mm**

**412563**



**Lamp holder gasket 120x75x13 mm**

**410196**



**Lamp holder set 101x55 mm with lamp 25W  
240V E14**



## Lamps and Lamp Holders

**410196**



**Lamp holder set 101x55 mm with lamp 25W 240V E14**  
framework, glass and gasket included; for lamp conn. E14 max 30W 240V; faston 6,3x8 mm

**Electrolux** 054991 055021 0G3691 0H2272  
0K7521 478040100

**435360**



**Lamp 25W 240V E14**

**427696**



**Lens 110x65x4 mm**

**421017**



**Lamp holder fixing frame 118x71 mm**

**412563**



**Lamp holder gasket 120x75x13 mm**

**200011**



**Lamp holder 101x55 mm - E14 25W 240V**

**412563**



**Lamp holder gasket 120x75x13 mm**  
red silicone rubber

**Electrolux** 055022 0H2410 0H6672 0K7946

**377156**



**Lamp holder complet 70x55 mm - E14 25W 230V**

**Electrolux** 0KL472 491452600

**435360**



**Lamp 25W 240V E14**

**427680**



**Lamp holder 70x55 mm - E14 25W 240V**

**417448**



**Frame+glass+gasket [Kit]**

**Electrolux** 0K7522 478040102

**530741**



**Lens 29x29x3,5 mm [kit]**

**Electrolux** 0C5340 0G5738 0H6898 0K3033

**438607**



**Glass frame 35x35 mm**

**Electrolux** 057382 0H6890 0K3035 0KC541

## Lamps and Lamp Holders

**438609**



**Glass gasket**

Electrolux 057402 0H6716 0K3034

**427657**



**Frame+glass+gasket [Kit]**  
gasket 95x80 mm

Electrolux 0H7041 0H7042

**435332**



**Flange lamp holder**  
Ø 38x76 mm

Electrolux 002628 0508840801 0F0150 0K8376

**433829**



**Lens**

Electrolux 054318

**616284**



**Lamp holder 51x51 mm**  
Ø hole 36 mm

Electrolux 0C4062

**427694**



**Lens Ø 34 mm**  
for Juno serie 56

Electrolux 0H6582

**526640**



**Flange**

Electrolux 004072

**320320**



**Lens Ø 35 mm**

Electrolux 0C9430

**421017**



**Lamp holder fixing frame 118x71 mm**

Electrolux 0H7118

**435545**

 


**Lens Ø 44x3,3 mm**  
Tmax 490°C

Electrolux 002627 0574804900 0F0071

## Lamps and Lamp Holders

**438608**

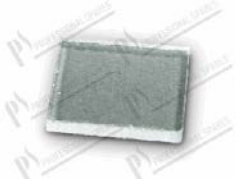

**Inspection glass 29x29x3,5 mm**  
Tmax 490°C

Electrolux 057400

---

**427696**



**Lens 110x65x4 mm**  
Tmax 500°C

Electrolux 0H6989

---

**410161**



**Gasket for oven lamp**  
Øext./int. 74/38x23 mm

Electrolux 002626 0F0075 0K8368 0KE752

---

**310269**



**Lamp cap Ø 40 mm H=15 mm**  
hole for lamp Ø 13 mm

Electrolux 0509803900 0C4459

---

**315355**



**Gasket Ø 74x50 mm**

Electrolux 0C5451

---

## Contactors and Relays

**435316**



**Green auxiliary contact 1NO HN10 10A 690V**  
dim. 10x17x43,5 mm

**Electrolux** 046995 0C4704 0E0418 0H7043  
0K9119 0KA929 0KE890 H58194500

**435315**



**Red auxiliary contact 1NC HN01 10A 690V**  
dim. 10x17x43,5 mm

**Electrolux** 047046 059086 0E0888 0H7044  
0KC515

**426301**



**Red auxiliary contact 1NC**  
dim. 10,5x42x31,5 mm

**Electrolux** 0K8700

**435165**



**Mini contactor K1-09D10 230V**  
4kW 3P; 220-230V 50Hz 240V 60Hz - 3 cont.  
NO + 1 aux NO - dim. 49x45x57,5 mm

**Electrolux** 088557 0G3401 0G3524 0G3801

**426214**



**Contactor K2-09A01 230V**  
4kW 3P; 220-240V 50Hz 240V 60Hz - 3 cont.  
NO + 1 aux NC - dim. 65,5x45x60 mm

**Electrolux** 005170 0H7049

**426168**



**Contactor K2-23A00-40 230V**  
11kW 3P 400V; 220-240V 50Hz, 230-264V  
60Hz - 4 cont. NO - dim. 85x57x74 mm

**Electrolux** 005238 0K3385

**536254**



**Contactor K2-30A00-40 230V**  
15kW 3P; 220-240V 50Hz 240V 60Hz - 4 cont.  
NO - dim. 85x55x74 mm

**Electrolux** 0C2247

**611562**



**Contactor K3-10NA00-40 230V**  
4kW 400V, 220-240V 50Hz 240V 60Hz - 4  
cont. NO - dim. 65,5x45x60 mm

**Electrolux** 0C2480 0C7622 0E1743 0E3751  
0W02E5 0W2702

**435166**



**Contactor K3-10ND10 230V**  
4kW 3P; 220-240V 50Hz 240V 60Hz - 3 cont.  
NO + 1 aux NO - dim. 65,5x45x60 mm

**Electrolux** 003027 045981 045982 048519  
053116 054544 057896 075796  
088477 0KL557

**426261**



**Contactor K3-14NA00-40 230V**  
5,5kW 3P; 220-240V 50Hz 240V 60Hz - 4  
cont. NO - dim. 65,5x45x60 mm

**Electrolux** 005171 0H7051 0KK107

## Contactors and Relays

**434968**



**Contactor K3-14ND10 24V**

5,5kW 3P; 24V 50Hz - 3 cont. NO + 1 aux NO - dim. 65,5x45x60 mm

**Electrolux** 046994 054259 058004 075723  
0E1291 0K3968 0K8545 0K9127  
0L0360 0W1T99

**426262**



**Contactor K3-14ND01 230V**

5,5kW 3P; 220-240V 50Hz 230-264V 60Hz - 3 cont. NO + 1 aux NC - dim. 65,5x45x60 mm

**Electrolux** 0H7050 0K3383 0KE713

**435384**



**Contactor K3-18ND10 180V**

7,5kW 3P; 180-210V 50Hz 200-240V 60Hz - 3 cont. NO + 1 aux NO; dim. 65x45x60 mm

**Electrolux** 004012 0E5568 0K6151 0K9123

**435427**



**Contactor K3-18ND10 230V**

7,5kW 3P; 220-240V 50/60Hz - 3 cont. NO + 1 aux NO - dim. 65,5x45x60 mm

**Electrolux** 002168 003598 006437 006438  
058805 072881 072882 0K9125  
0KC417 0L2057 0W0632 0W5271

**328529**



**Contactor K3-18ND10 180V**

7,5kW 3P; 180-210V 50Hz 200-240V 60Hz - 3 cont. NO + 1 aux NO, dim. 65x45x60 mm; 1 aux cont NO+1 aux cont NC

**Electrolux** 0K9131 0KC512 0W1ZGR 0W1ZGW  
0W2266 767513110

**426298**



**Contactor K3-22ND01 220/240V**

11kW 3P; 220-240V 50Hz 240V 60Hz 400V - 3 cont. NO + 1 aux NC - dim. 65x45x65 mm

**Electrolux** 0H7052 0K3384 0K9307

**518594**



**Contactor K3-24A00 230V**

11kW 3P; 220-240V 50/60Hz - 3 cont. NO - dim. 87,5x45x74 mm

**Electrolux** 0L0355 0L0678

**321420**



**Contactor K3-24A00 230V**

11kW 3P; 220-240V 50Hz 240V 60Hz - 3 cont. NO + 1 aux NO - dim. 87,5x45x74 mm

**Electrolux** 0C9763 0K9129 0KE717

**435495**



**Contactor K3-32A00 230V**

15kW 3P; 220-240V 50Hz 240V 60Hz - 3 cont. NO - dim. 87,5x45x74 mm

**Electrolux** 003305 007080 0H6549 0HN634

**433658**



**Contactor K3-40A00 230V**

18,5 kW 3P; 220-240V 50Hz 240V 60Hz - 3 cont NO - dim. 87,5x45x74 mm

**Electrolux** 007104 0K3375 0K3479

## Contactors and Relays

**335529**



**Contactor K3-50A00 230**

22kW 3P; 220-240V 50Hz 240V 60Hz - 3 cont.  
NO - dim. 95x60x110 mm

Electrolux 059993 0C2244 0H6550 0H7054

**521028**



**Relay 100-120V 25A 2NO**

Electrolux 088086

**426215**



**Thermal overload relay 1,8÷2,7A - contact 1NC**  
(automatic reset)

Electrolux 047133 075667

**416379**



**Relay 3 contacts 16A 230/250V**

Electrolux 046001 053737 081261

**426263**



**Thermal overload relay 6,0÷9,0A - contacts 1NO + 1NC**  
(automatic reset)

Electrolux 047134

**435271**



**Relay 2 contacts 230V 50/60Hz 10A 250V**  
faston 6.3x0.8 mm

Electrolux 031295 031314 031609 031610  
058857 069882 069924 083215  
0KW986

**416591**



**Contactor TP3250-40**

1,5kW 3P; 220/230V 50Hz 400V - cont. 4 NO;  
faston 6,3 mm

Electrolux 0H6541

**438597**



**Relay 3 contacts 230V 50/60Hz 10A 250V**  
faston 6.3x0.8 mm

Electrolux 056466 085296

**438457**



**Relay 25A 200-240V**

Electrolux 088267

**336813**



**Relay 3 contacts 24V 50/60Hz 10A 250V**  
faston 6.3x0.8 mm

Electrolux 056510



## Contactors and Relays

**416603**



**Thermal-magnetical switch 3P 8,5A**  
**240V 50/60Hz**  
 Icu 20kA

**Electrolux** 0E5452 0KT674

## Microswitches

**435262**



**Snap action microswitch 16A 250V**  
**T125°C**  
 thread M10x1, H=14 mm

**Electrolux** 002785 005031 046063 058926  
 0H6565 0K2018 0K2969

**435219**



**Magnetic microswitch**  
 NO contact 250V 50VA 0,04A - rast 5

**Electrolux** 037260 049621 0KB775

**415440**



**Snap action microswitch 20A 400V T85°C**  
 dim. 50x18 mm

**Electrolux** 0H2312 0K7633

**438337**



**Magnet 63x18x11 mm [Kit]**  
 with self threading screw Ø 2,9x9,5 mm

**Electrolux** 049627

**435424**



**Snap action microswitch with lever 5x60 mm**  
 16(6)A 250V; T85°C; terminals 6,3x0,8 mm

**Electrolux** 053671 054550 057580 058405  
 0E0209 0G6357 0K7559 478061400

**440844**



**Insulating plate for microswitch 46x26x1 mm**

**Electrolux** 045404

**342133**



**Snap action microswitch with lever 7x60 mm**

**Electrolux** 007050

## Terminal Boards

**435420**



**2-pole steatite terminal board**  
for cable max 10 sq.mm; capacity 57A/450V;  
dim. 26x22xh18 mm

Electrolux 053805 053806 OKB778

**427859**



**Terminal 3P**

Electrolux 0C9508 OKB654

**439516**



**4-pole steatite terminal board**  
for cable max 10 sq.mm; capacity 76A/450V;  
dim. 40x30h23 mm

Electrolux 054042

**336554**



**Terminal board 3-poles sq.mm. 6**  
capacity 450V 40A; Tmin-max -5/+150°C;  
faston 6,3x0.8 mm

Electrolux 046357 0KE877

**411750**



**Terminal board**  
dim. 56x36 mm

Electrolux 020599

**336547**



**Terminal board 7-poles 96,5x31 mm**  
capacity 400V; Tmax85°C; faston 6,3x0,8 mm

Electrolux 078026 0E5174 0K6833 0KG207

**441467**



**Terminal board 2P [Kit]**  
25A 450V

Electrolux 058873 0C9000 0C9052

**526404**



**Terminal board 4-poles cable sq.mm 35**  
DIN rail L=100 mm

Electrolux 006238 0639812401 0C4820  
B

**519256**



**Terminal**

Electrolux 0E5567

**433974**



**Terminal board 5-poles cable sq.mm 6**  
for cable max 10 mmq; capacity 750V/65A;  
-30+100°C

Electrolux 058875



## Terminal Boards

**439423**



**Terminal board 5 poles cable sq.mm 6  
with fuse holder  
DIN rail**

Electrolux 059794

**439566**



**Terminal board 5 poles sq.mm 10  
DIN rail**

Electrolux 005173 059239 0F0035

**438970**



**Terminal board 5 poles cable sq.mm 16  
DIN rail**

Electrolux 002691 0E5850 0F0112 0KT397

## Pressure Switches

**338181**



**Air pressure switch 1 level APS 0,8/0,6  
mbar horizontal**  
1,5A 250V for pipe Ø 6 mm On.P=0,8  
mbar/Reset.P=0,6 mbar

Electrolux 006536

**433926**



**Water pressure switch 0,2±6 bar**  
deltaP REG: 0,1±0,8bar - NC 15/250~ NO  
8/250~ / μ TA: 120°C 0823 - dim Ø 34x52 mm

Electrolux 007014

**338194**



**Air pressure switch 1 level APS 1,5/1,2  
mbar horizontal**  
1,5A 250V for pipe Ø 6 mm On.P=1,5  
mbar/Reset.P=1,2 mbar

Electrolux 005746

**434965**



**Water pressure switch Ø 15 mm 200  
mbar**  
delta P.reg. 0,2 bar

Electrolux 0C1126

## Pressure Switches

**435236**



**Air pressure switch 0,80-0,44 mbar**  
pressure test point connection Ø 6,4 mm;  
Pmax 10 mbar

Electrolux 002640 003772 0K2020

**337978**



**Gas adjustable pressure switch 5-20 mbar**  
G 1/4", Pmax 500 mbar

Electrolux 002635 0K2021

**338204**



**Gas adjustable pressure switch 10-50 mbar; G1/4" M**  
Pmax 500 mbar; Tmax 85°C

Electrolux 005029

**322521**



**Pressure switch 0,2-3bar, 250V 10(2)A**  
connection Ø 8x21 mm, faston 6,3x0,8 mm

Electrolux 0C6217

## Timers

**430476**



**Timer chambers 2**  
60 min; 250V 50Hz

Electrolux 0KU798

**435310**



**Timer chambers 2**  
0÷120 min; 2 microswitches 16A 250V; motor  
230V 50/60Hz 2,5W 500/600 rpm; D-shaft Ø  
6x4,6 mm

Electrolux 003833 0C8731 0C8755 0K2302

## Timers

**347751**



**Timer chambers 2**

120 min 50Hz; D-shaft Ø 6x4,6 mm - for oven  
C7E4/200-230/400 - C7E6/400 - C7PT4/400

Electrolux 003836 0CA538 0F0091

**435456**



**Timer 0÷120 min with alarm**

switch 2P 16A-250V; D-shaft Ø 6x4,6 mm;  
complete with sign plate; (to replace  
AVE/EATON timer)

Electrolux 003432 029920 053817 056547

**347748**



**Timer camme 2**

0÷144 min; motor 230V 50/60Hz; D-shaft Ø  
6x4,6 mm; cable L=250 mm

Electrolux 055366 0CA557 0K2301 0K2961

**435457**



**Timer 0÷120 min with alarm**

switch 2P 16A-250V; D-shaft Ø 6x4,6 mm;  
Tmax 125°C

Electrolux 003431 0C6345

**417441**



**Timer 0÷5 min; 10A 250V 1/3 HP**

0÷5 min; 10A 125V 1/8 HP

Electrolux 0H2327 0K7662

**419705**



**Timer 230V 50Hz**

2h

Electrolux 0K1405

**427881**



**Timer 5 min.**

16(4) A - 250V; faston 6,3 mm; D-shaft Ø  
6x4,6 mm

Electrolux 0E3690 0KB676 325629420

**416259**



**Timer 230V 50Hz**

D-shaft Ø 6x4,6 mm

Electrolux 0H2511 0K7663 0K8222

**427829**



**Timer 0÷60 min**

mod. MS65 WT6501; 230V 50Hz

Electrolux 0H6117 0K0484

**419540**



**Timer with cable for AR170**

D-shaft 6x4.5 mm

Electrolux 0K8240

## Timers

**415441**



**Timer 16A 250V 2P**  
mod. TF 120-38; D-shaft Ø 6x4,6 mm; T. 80°C

Electrolux 0K6863 0K7367 0KB560

**438599**



**Timer**

Electrolux 056485

**616517**



**Timer with buzzer 16A 250V**  
D-shaft Ø 6x4,6 mm; Tmax 125°C

Electrolux 0C3054 0C3935

**416298**



**Timer 50/60Hz 6A 250V**  
6 min 24V

Electrolux 053917

## Fans

**584347**



**Protection grid for fan Ø 217 mm**

Electrolux 091602

**439196**



**Compact fan 80x80x38 mm - 10/8W**  
220-240V 50-60Hz  
cable L=320 mm; 2700 rpm; ball bearing

Electrolux 083528 0C2420

## Fans

**435542**



**Compact fan 120x120x38 mm - 15W 230V 50/60Hz**  
cable L=300 mm; 2600 rpm; ball bearing

Electrolux 002656 002690 004000 006878

**302048**



**Tangential fan 550W 230V 4P**  
DDM 9/9; with protection grid

Electrolux 0S0709

**531364**



**Compact fan 120x120x38 mm - 20W 230V 50/60Hz**  
no cable; faston connection 2,8x0,5 mm; 2550 rpm; ball bearing

Electrolux 087945 091277 0A9495 0A9640  
0C4012 0C4106 0C4922 0CB143  
0D6787 0E2261 0K7491 0W5643

**435508**



**Fan motor 24/28W 220/240V 50/60Hz**

Electrolux 005202

**427821**



**Tangential fan Ø 42x150 mm; 17W**  
200-230V 50/60Hz

Electrolux 0E3696 0KB687

**446187**



**Fan motor 28W 220-240V 50/60Hz**  
shaft L=51 mm

Electrolux 0C4175

**438193**



**Tangential fan Ø 60x180 mm; 18/22W 230V 50Hz**  
air flow rate 165 mc/h - 1800 rpm; Tmax 60°C; DX motor; faston connection

Electrolux 005204

**419677**



**Fan motor 28W 230V 50Hz**

Electrolux 0KJ865

**419726**



**Tangential fan 17W 220-240V 50/60Hz**  
mod. QLZ06/0600-2513; working temperature 0-60°C; flow rate 40 m<sup>3</sup>/h - 2500 rpm

Electrolux 0H6923

**338233**



**Fan motor 38W 230V 50Hz**  
with fan blade Ø 140 mm

Electrolux 054842

## Fans

**435365**



**Fan motor 45W 220/240V 50/60Hz**  
PLASET 54879; fan blade Ø 150 mm

Electrolux 054314 054315

**310412**



**Radial fan RG128 70W 230V 50Hz**  
flange Ø 83 mm

Electrolux 0C4103

**427773**



**Fan motor 50W 220/230V 50Hz**

Electrolux 0E3684 0KB666

**338232**



**Radial fan RL148 37/43W 220-240V 50/60Hz**  
2550 rpm - class H

Electrolux 002639

**442025**



**Nut M6**

Electrolux 005222 0C3061 0C9434

**312300**



**Flange for gas Burner**  
hole Ø 21mm

Electrolux 0C4125

 
**433592**



**Radial fan RG100 23W 24V 50Hz**

Electrolux 0C1051 0CA077

**442113**

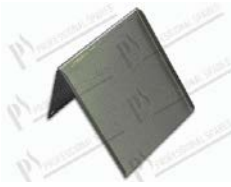

**Protection**  
Dim. 113x100x105 mm

Electrolux 003954

**436333**



**Radial fan RG128 55W 24Vdc**

Electrolux 0C1112

**442153**



**Flange for radial fan**  
dim. 152x152x1 mm; hole Ø 65 mm

Electrolux 002872 0KD442

## Fans

**433593**



**Gasket for radial fan**

int.34x44/est.68x68 mm - sp.3 mm

Electrolux 0C1050

---

**322731**



**Aerator with green ring**

Electrolux 0C4629

---

**436332**



**Gasket for radial fan Ø 85x3 mm**

Electrolux 0C1111

---

**310751**



**Gasket for radial fan Ø 34x78x6 mm**

Electrolux 0C4102

---

**436303**



**Aerator with red ring**

Electrolux 0C1045

---

**324378**



**Aerator with purple ring**

Electrolux 0C4630

---



## Fuses, Capacitors, RFI Filters

**436397**



Capacitor for power factor correction  
**31,5 µF 450V 50/60Hz**  
 Ø 45 mm; with screw M8

Electrolux 056380 0C1186

**340272**



Capacitor for power factor correction  
**16µF 450V 50/60Hz**  
 Ø 40x95 mm; screw M8; faston 6,3x0,8 mm

Electrolux 052797 0A2914

**339526**



Capacitor for power factor correction  
**4µF 450V 50/60Hz**  
 Ø 35 mm; with screw M8

Electrolux 054918 056465

**415522**



Capacitor for power factor correction  
**20µF 400V 50/60 Hz**  
 Ø 40x96 mm; with screw M8 - Tmax +46°C

Electrolux 046308 047542 047744 075900

**441189**



Capacitor for power factor correction  
**10µF 400V 50/60Hz**  
 Ø 35x77 mm; with screw M8

Electrolux 056148 057576 0F0032 0K4727  
 0KJ296 482751100

**318317**



Capacitor for power factor correction  
**25µF 450V**  
 Ø 40x115 mm - fitting M8

Electrolux 005135 0K2375

**339523**



Capacitor for power factor correction  
**12,5µF 450V 50/60Hz**  
 Ø 40x70 mm; with screw M8

Electrolux 037269 047541 054922 066235  
 0K3032

**312678**



Capacitor for power factor correction **60 µF 250V 60Hz**

Electrolux 005316 0C4812

**436398**



Capacitor for power factor correction **15 µF 450V 50/60Hz**  
 Ø 40 mm; with screw M8

Electrolux 084323 0C1187

**583646**



HV capacitor **1,15µF 2100V 50/60Hz**  
 dim. 80x52,5x33,5 mm; faston 4,8x0,5 mm

Electrolux 0D7031

## Fuses, Capacitors, RFI Filters

**427906**



**Capacitor 0.22µF 275Vac**  
faston F 6,3

Electrolux 0G2653

**438276**



**RIF filter with faston**  
2x0.010 uF (Y2) + MoHm 250V

Electrolux 046226 046227 046941 0K8386

**312498**



**Start capacitor 80 µF**

Electrolux 005332 0C4813

**435381**



**RFI filter 3 phase 250V 50/60Hz Ø 38x50 mm**  
3x(0.27 µF) + 3x(1MΩ) + 3x(2x0.10nF);  
faston 6,3x0,8 mm

Electrolux 049303 0KE945

**584141**



**Rif filter**  
dim. 65x200 mm

Electrolux 0D7635

**318487**



**RFI filter 250V 50/60Hz 16A Ø 38x50 mm**  
(0.47 µF) + (680KΩ) + (2x0.01 µF) +  
(2x1mH); with screw M8

Electrolux 0C4950

**338399**



**RFI filter 250V 50/60Hz 16A Ø 38x50 mm**  
(0.47 µF) + (0,68MΩ) + (2x0.010 µF) +  
(2x1mH); screw M8

Electrolux 059078 0K2392

**528099**



**RFI filter 250V 50/60Hz 16A Ø 38x56 mm**  
fitting M8

Electrolux 0CB477

**338358**



**RFI filter 250V Ø 38x39 mm**  
0.47 µF (x2) + 2x0.025 µF(Y2) + 1MΩ; with  
screw M8

Electrolux 046217 084035 0G2043

**518173**



**RFI filter 1uF 275 Vac + 100 Ohm**  
cable L=100 mm with faston 8 mm

Electrolux 003551

## Fuses, Capacitors, RFI Filters

**440188**



Interference suppression filter 100 OHM

Electrolux 003510

**416026**



Fuse Ø 5x20 mm 16A 250V fast

Electrolux 005136

**342145**



Fuse Ø 5x20 mm 0,315A fast

Electrolux 002170 005032 0C4996 0C5584  
0K3350 0K4542 0K4994

**435517**



Fuse Ø 5x20 mm 0,16A 250V slow

Electrolux 002820 0F0189

**435368**



Fuse Ø 5x20 mm 4A 250V fast

Electrolux 053741 057783 083602 088227  
0H0516 0KD887 0KP602 0KP604

**435516**



Fuse Ø 5x20 mm 0,25A 250V slow

Electrolux 002920

**435270**



Fuse Ø 5x20 mm 6,3A 250V fast

Electrolux 002348 005077 053534 058871  
0F0187 0K8698 0KJ931

**435523**



Fuse Ø 5x20 mm 0,4A 250V slow

Electrolux 002750 0F0188 0K8741

**435812**



Fuse Ø 5x20 mm 10A 250V fast

Electrolux 002347 058869 0W3317

**433988**



Fuse Ø 5x20 mm 0,63A 250V slow

Electrolux 007054 048786

## Fuses, Capacitors, RFI Filters

**536337**



Fuse Ø 5x20 mm 0,8A 250V slow

Electrolux 0C2301

**438578**



Resistance 100 Ohm 7W  
faston F6,3 mm

Electrolux 058872

**397484**



Fuse Ø 5x20 mm 1,6A 250V slow (10 Pcs)

Electrolux 0C6034

**427779**



Diode IN4007 - per minicombi

Electrolux 0KB697

**583543**



Fuse Ø 5x20 mm 6,3AL 250V slow

Electrolux 0C1480

**417948**



Fuse holder  
for fuse 5x20 mm

Electrolux 0E1703 0K8695 552203701

**310550**



Fuse Ø 6,3x32 mm 3,15A 250V fast (10 Pcs)

Electrolux 0C3650 0C3651

**338800**



Fuse holder Ø 12 mm 16A - 250V faston  
90° 4,8x0,5 mm  
L=44 mm for fuse 5x20 mm

Electrolux 053735 056582 069159 0G6250

**320026**



Fuse Ø 6,3x32 mm 6,3A 500V slow (10 pcs)

Electrolux 0C2230

**433800**



Fuse holder Ø 16 mm 16A 250V [Kit]  
L=49 mm - faston 6,3x0,8 mm - for fuse 5x20 mm

Electrolux 0C2228 0CB127 0CB128 0F0031  
0K8694 0KZV38 0T3933

## Motors

**342481**



Motor 1 phase 100W 240V 0,83A 50Hz

Electrolux 058807

**415792**



Spacer for fan motor

**411775**



Motor support flange Ø 16x230 mm

**411766**



Fan blade Ø 280x100 - 6 blades

**411765**



Flange Ø 260 mm

**337678**



Retaining ring Ø 12x40x20 mm

**337668**



Spacer M6 Htot=44,5 mm

**342536**



Motor 1 phase 100W 230V 0,9A 50Hz  
shaft Ø 10x35 mm - capacitor 4 µF/450V - FIR  
1092/M; 1A 1350 rpm

Electrolux 054570 054829 058587

**415792**



Spacer for fan motor

**411775**



Motor support flange Ø 16x230 mm

**411766**



Fan blade Ø 280x100 - 6 blades

**411765**



Flange Ø 260 mm

**337678**



Retaining ring Ø 12x40x20 mm

**337668**



Spacer M6 Htot=44,5 mm

## Motors

**441714**



**Motor 1 phase 190W 230V 1.3A 50Hz**  
shaft Ø 10x35 mm - capacitor 10 µF -  
1400/1700 rpm

**Electrolux** 005750

**442166**



**Fan blade Ø 280x99 mm - 6 blades**

**441908**



**Flange Ø 22x74 mm**

**438162**



**O-ring 3,53x28,17 mm VITON**

**435555**



**Gasket**

**415521**



**Motor 1 phase 190W 230V 1,3A 50/60Hz**  
shaft Ø 10x35 Ltot. =85 mm - cable L=180 mm  
- 1450/1750 rpm

**Electrolux** 002616 0F0007 0K8482 0KE545

**442166**



**Fan blade Ø 280x99 mm - 6 blades**

**441908**



**Flange Ø 22x74 mm**

**438162**



**O-ring 3,53x28,17 mm VITON**

**435555**



**Gasket**

## Motors

**437818**



**Motor 1 phase 190/60W 230V 1,5A 50/60Hz**  
shaft Ø 10x35 mm, Ltot. 86,5 mm - capacitor  
12,5 µF - cable L=180 mm; 1380/930 rpm -  
1700/1110 rpm

Electrolux 002698 005028

**442166**



Fan blade Ø 280x99 mm - 6 blades

**441908**



Flange Ø 22x74 mm

**438162**



O-ring 3,53x28,17 mm VITON

**435555**



Gasket

**526667**



**Motor 1 phase 190W 220/240V 1,3A  
50/60HZ**  
shaft Ø 10x35 Ltot=52 mm - capacitor 10 µF -  
930/1425 rpm

Electrolux 005748

**442166**



Fan blade Ø 280x99 mm - 6 blades

**441908**



Flange Ø 22x74 mm

**438162**



O-ring 3,53x28,17 mm VITON

**435555**



Gasket



## Motors

**434004**



**Motor 1 phase 60/190W 230V 1,6A 50/60Hz**  
shaft Ø 10x35 mm Ltot=87 mm - capacitor  
12,5µF/450V cable L=180 mm 890/1395 rpm

Electrolux 006998

**441908**



Flange Ø 22x74 mm

**438162**



O-ring 3,53x28,17 mm VITON

**435555**



Gasket

**433748**



Fan blade Ø 350x135 mm - 6 blades

**316027**



**Motor 1 phase 240/310W 230V 50/60Hz**  
**1,1/1,4A**  
shaft Ø 9x10 mm H12.5 mm Ltot=91 mm -  
capacitor 8µF/450V - cable L=200 mm  
1400/1700 rpm

Electrolux 0C5287

**438162**



O-ring 3,53x28,17 mm VITON

**435555**



Gasket

**433977**



Fan blade Ø 280x130 mm - 10 blades

**315240**



Flange Ø 22x74 mm

## Motors

**435524**



**Motor 1 phase 110/350W 230V 2,7A 50/60Hz**  
shaft Ø 9/10x35 mm - capacitor 16 µF; cable L=180 mm 1400/1680 rpm(4P)- 900/1080 rpm(6P) - AMM80 adattabile a LM/FB80

Electrolux 002748 005237 0K2764

**442168**



Fan blade Ø 440x153 mm - 6 blades

**442166**



Fan blade Ø 280x99 mm - 6 blades

**441908**



Flange Ø 22x74 mm

**438162**



O-ring 3,53x28,17 mm VITON

**435555**



Gasket

**435525**



**Motor 1 phase 350W 230V 2,7A 50/60Hz**  
shaft Ø 10x35 Ltot.=125 mm - capacitor 16 µF/450V - cable 180 mm 1450/1750 rpm

Electrolux 002739

**442166**



Fan blade Ø 280x99 mm - 6 blades

**441908**



Flange Ø 22x74 mm

**438162**



O-ring 3,53x28,17 mm VITON

**435555**



Gasket

**520337**



**Motor 1 phase 350W 100V 50/60Hz 5,5A**  
shaft Ø 10x35 Ltot.=87 mm cable L=170 mm

Electrolux 004083

## Motors

**436383**



**Motor 1 phase 750W 230V 2,4A 50/60Hz**  
shaft Ø 10x32 mm - condensatore 31,5/16µF  
1460/1750 (4P) - 955/1145 (6P)

Electrolux 0C1171 0C6563

**441908**



Flange Ø 22x74 mm

**438162**



O-ring 3,53x28,17 mm VITON

**436384**



Fan blade Ø 380x168 mm

**435555**



Gasket

**433748**



Fan blade Ø 350x135 mm - 6 blades

**315240**



Flange Ø 22x74 mm

**582753**



**Motor 1 phase 750W 200/240V 50/60Hz**

Electrolux 0C2674 0C6704

**586294**



**Motor 1 phase 190W 230V 50/60HZ 4/6P:**  
**USA**  
shaft Ø 10x34,80 mm; cable L=180 mm

Electrolux 0C1474

**342366**



**Motor 3 phase 190W 230V 1A 50Hz**  
220-240/380-415V; thread M6x12 mm - shaft  
Ø 9/10x35 mm 1350 rpm

Electrolux 058667 0K3026

**439363**



Atomizer

**411775**



Motor support flange Ø 16x230 mm

**411771**



Fan blade Ø 350x135 mm - 6 blades

**411765**



Flange Ø 260 mm

**337678**



Retaining ring Ø 12x40x20 mm

**428146**



**Motor 3 phase 30/200W 380-415V 50/60Hz**  
**2 speed**  
conic shaft Ø 17x65 mm; cable L=900 mm

Electrolux 0G2197 0H6930 0H6958

## Motors

**428150**



**Motor 3 phase 160/230W  
200-240/346-440V 50/60Hz**  
Shaft L=131 mm; 900/1100 rpm - for oven  
AR170/340 AR10/20

Electrolux 0H2409 0K7562 0K7945 0KB620

**430310**



Spacer

**430308**



Flange Ø 17,5x99 mm

**418560**



Disk for motor Ø 20x30x2 mm

**417725**



Shaft sealing gasket [Kit]

**416514**



Motor shaft sealing

**414196**



Shaft sealing Ø 34x57x6 mm

**428151**



**Motor 3 phase 245W 230-415V 50/60Hz**  
shaft Ø 13,5/17x73 mm

Electrolux 0H6929 0K2763

**421066**



Shaft sealing cord

**342501**



**Motor 3 phase 350W 230/400V 1,8A 50Hz**  
FIR 1093/V; 1400 rpm

Electrolux 054011 054012 054837 058607

**415792**



Spacer for fan motor

**411774**



Motor/fan blade flange Ø 6,6x230 mm

**411767**



Fan blade Ø 440x153 mm - 6 blades

**342270**



Motor cooling fan blade □Ø 108 mm

Electrolux 0K7256

## Motors

**446207**



Fan blade Ø 127 mm  
11 vanes

Electrolux 0C3060

**433748**



Fan blade Ø 350x135 mm - 6 blades  
bore Ø 9.5 mm

Electrolux 0C1129 0C6463

**442026**



Fan blade Ø 145 mm - 7 vanes

Electrolux 005221 5024085300  
7

**442069**



Fan blade Ø 350x135 mm - 6 vanes  
bore Ø 10 mm

Electrolux 002617 0C6461 0KG540 0L1796

**411766**



Fan blade Ø 280x100 - 6 blades  
bore Ø 10

Electrolux 054585 055422

**441860**



Fan blade Ø 350x135 mm - 6 vanes

Electrolux 002139 0C8309 0G1992

**442166**



Fan blade Ø 280x99 mm - 6 blades  
bore Ø 10 mm

Electrolux 002754 003560 0C6462 0F0176  
0K8507

**411771**



Fan blade Ø 350x135 mm - 6 blades  
bore Ø 9,5 mm

Electrolux 053782 054890

**433977**



Fan blade Ø 280x130 mm - 10 blades  
AOS 6

Electrolux 007000 0C7029

**434003**



Fan blade Ø 350x135 mm - 6 vanes  
bore Ø 9,5 mm - AOS10-20 1/1GN

Electrolux 007072

## Motors

**436384**



Fan blade Ø 380x168 mm  
AOS

Electrolux 0C1172 0C6464

**430308**



Flange Ø 17,5x99 mm

Electrolux 0K7620 0KB606 481623500

**526871**



Fan blade Ø 440x150 mm - 6 vanes  
bore Ø 10 mm - version motor 60 Hz

Electrolux 002138 0C8310

**315240**



Flange Ø 22x74 mm

Electrolux 0C4138

**442168**



Fan blade Ø 440x153 mm - 6 blades  
bore Ø 10 mm - version motor 50Hz

Electrolux 002740 0C8306 0KZR94

**441908**



Flange Ø 22x74 mm

Electrolux 006670

**411767**



Fan blade Ø 440x153 mm - 6 blades  
bore Ø 10 mm

Electrolux 054014 054914 055378

**411774**



Motor/fan blade flange Ø 6,6x230 mm  
thickness 2,6 mm

Electrolux 058730

**442128**



Fan blade Ø 440x155 - 6 vanes  
bore Ø 16 mm

Electrolux 003715 0C8307

**411775**



Motor support flange Ø 16x230 mm  
thickness 2,6 mm

Electrolux 058729



## Motors

**417725**



**Shaft sealing gasket [Kit]**  
for motor 481991100

Electrolux 0H2247 0K7441 477917100

**418560**



**Disk for motor Ø 20x30x2 mm**

Electrolux 0H2230 0K7389 0KB592 477837500

**416514**



**Motor shaft sealing**  
Ø 18x24x4 mm

Electrolux 0H2231 0K7390 477837700

**439363**



**Atomizer**

Electrolux 058945

**414196**



**Shaft sealing Ø 34x57x6 mm**

Electrolux 0H2229 0K7387 477837400

**430310**



**Spacer**

Electrolux 0K7584 478090200

**526848**



**Protection grid for fan Ø 245 mm**

Electrolux 002618 0F0174 0K9703

**413089**



**Spacer piece for fan motor M6 Ltot=31 mm**

Electrolux 054568

**442177**



**Protection grid for fan Ø 245 mm**

Electrolux 002676

**415792**



**Spacer for fan motor**

Electrolux 058731



## Motors

**337678**



Retaining ring Ø 12x40x20 mm

Electrolux 055339

**459554**



Rod Ø 8/12x298 mm M8

Electrolux 007049

**416210**



Gasket

Electrolux 054916

**435555**



Gasket  
int.Ø 16 mm - ext.Ø 38/22X17 mm

Electrolux 002699 0F0096 0K0447 0KE120

**412357**



Bracket 51x19x1 mm

Electrolux 005289

**435556**



**Gearmotor G02 220V 50Hz**  
for exhaust pipes, sincronic motor 2 rpm with  
cables and 2 ways connector

Electrolux 002696 0CA539

**433727**



**Gearmotor 6W 230V 50/60 Hz [kit]**  
cable L=300 mm

Electrolux 0C0883 0C5501 0C8687 0C8692

## Pumps

**316653**



**Vibration pump 32W 220-240V 50Hz [KIT]**  
F class - faston terminals 6,3x0,8 mm - suction Ø 7,75 mm; outlet 1/8"

Electrolux 007018 0C2341 0C5371

**532922**



**O-ring 1,78x6,75 mm NBR**

**436369**



**Filter**

**436337**



**Pipe fitting F 1/4"**

**584053**



**Vibration pump 35W 110-120V 60Hz**  
A class - faston terminals 6,3x0,8 mm - suction Ø 7,75 mm; outlet 1/8"

Electrolux 0C1880 0C2342

**536390**



**Vibration pump 38-54W 208/240V 50/60Hz [Kit]**  
F class - faston 6,3x0,8 mm - suction Ø 7,75 mm; outlet 1/8"; with nonreturn valve

Electrolux 0C6947 0C8347 0C9067 0CA112  
0CB698 0CB788

**436347**



**Detergent feeding hose (blue + red) - KIT**

**436347**



**Detergent feeding hose (blue + red) - KIT**

Electrolux 0C1127

**536347**



**Tank detergents assy for AOS/TOUCH**  
660x340x80 mm

Electrolux 0C1150 0C2308 0C4426

**316717**



**Fixing plate**

Electrolux 0C7924

## Heating Elements

**324150**



**Boiler heating element AOS 9000W 230V**  
L=233 mm, flange 105x87 mm; with bulb housing; faston 6,3x0,8 mm

Electrolux 0C5842

**318291**



**Boiler heating element AOS 17000W 440V**  
L=395 mm, flange 105x87 mm; connection F6,3

Electrolux 0C5846

**317349**



**Boiler heating element AOS 9000W 400V**  
L=230 mm; flange 105x87 mm; connections F6,3

Electrolux 0C5839

**324126**



**Boiler heating element AOS 17000W 230V**  
L=395; flange 105x87 mm; connections F6,3

Electrolux 0C5843

**318320**



**Boiler heating element AOS 9000W 440V**  
L=230; flange 105x87 mm; connections F6,3

Electrolux 0C5845

**533026**



**Boiler heating element AOS 20000W 230V**

Electrolux 0C1620

**319880**



**Boiler heating element AOS 16500W 240V**  
L=386 mm; flange 105x87 mm; with bulb housing L=120 mm; faston 6,3x0,8 mm

Electrolux 0C5824

**581888**



**Boiler heating element AOS 20000W 230V**  
L=460; flange 105x87 mm; connections F6,3

Electrolux 0C5844

**311676**



**Boiler heating element AOS 17000W 400V**  
L=395 mm; flange 105x87 mm; connection F6,3

Electrolux 0C5840

**316412**



**Boiler heating element AOS 24000W 400V**  
L=535 mm, flange 105x87 mm; connection F6,3

Electrolux 0C5841

## Heating Elements

**414562**



**Boiler heating element 3200W 230V**

Electrolux 0H2437 0K8034

**414937**



**Boiler heating element 17000W 220V**  
L=470 mm

Electrolux 055361 056012

**428762**



**Boiler heating element 5600W 230V**  
dim. 270x65 mm; flange 81x28 mm

Electrolux 0H6146 0K0506 0KE597 0T0012

**415120**



**Boiler heating element 1700W 240V**  
L=460 mm - cable L= 450 mm

Electrolux 055464

**414514**



**Boiler heating element, 6900/7500W**  
**230/240V**  
L=325 mm; flangia Ø 57,5 mm

Electrolux 0K7528

**414936**



**Boiler heating element 24000W 380V**  
L=590 mm; flange Ø 64 mm; cable L=450 mm

Electrolux 055384 056013

**414092**



**Boiler heating element 4500W 230V**

Electrolux 056489

**433975**



**Boiler heating element 9000W 400V**  
L=450mm, flange 83x83 mm Øint.83mm;  
connections F6,3

Electrolux 007030 0C5381

**414904**



**Boiler heating element 24000W 400V**  
L=595 mm; flange Ø 64 mm Øint. 47,5 mm;  
with bulb housing

Electrolux 002751 0C5337

**526374**



**Boiler heating element 9000W 230V**  
L=450 mm, bulb housing Øint 4,5 mm

Electrolux 007032 0C5382

## Heating Elements

**433802**



**Boiler heating element 17000W 400V**

L=450 mm; flange 90x90 mm Øint. 57,5 mm; faston F6,3

Electrolux 007076 0C5384

**414928**



**Boiler heating element 9600W 230V**

L=590 mm; flange 83x83 mm; Øint. 47,5 mm

Electrolux 0F0011 0K8361

**525965**



**Boiler heating element 17000W 230V**

L=450 mm; triangular flange 92,6x89,7 mm, Øint. 60 mm; bulb housing L=180 mm; faston 6,3x0,8 mm

Electrolux 007078

**414929**



**Boiler heating element 13000W 230V**

L=580 mm; flange 83x83 mm int.Ø 47,5 mm with bulb housing

Electrolux 0F0051 0K8362

**433659**



**Boiler heating element 24000W 400V**

L=570mm, flange 83x83 mm Øint. 57,5 mm; faston F6,3

Electrolux 007101 0C5383

**415048**



**Boiler heating element 17000W 230V**

L=580 mm; flange 83x83 mm Øint. 47,5; connection M5

Electrolux 058214 058672

**535697**



**Boiler heating element 24000W 440V**

Electrolux 0C1774

**414930**



**Boiler heating element 17000W 254-440V**

L=580 mm; flange - bulb housing

Electrolux 0F0095 0K8363 482530509

**414591**



**Boiler heating element 9000W 230V**

L=295 mm; flange 83x83 mm Øint. 47,5 mm; connections M5

Electrolux 002835 0K0538

**415101**



**Boiler heating element 17000W 208V**

L=590 mm; flange 83x83 mm

Electrolux 004073

## Heating Elements

**415042**



**Boiler heating element 17000W 230V**  
L=590 mm; flange 83x83 mm Øint. 47,5 mm;  
bulb housing

Electrolux 058995 0C5336 0H2521 0K8360

**612220**



**Heating element 1000W 230V**  
dim. 320x410 mm; flange 80x16 mm

Electrolux 0C3056 0C4184

**415046**



**Boiler heating element 17000W 240V**  
L=580 mm

Electrolux 058294 058676

**438671**



**Heating element 2000W 230V**  
dim. 314x290 mm

Electrolux 054326

**438194**



**Heating element 230V 800W 240V 1750W**  
dim. 350x335 mm - flange 120x24 mm with 2  
screw M4x19 mm

Electrolux 005205

**415043**



**Heating element 2500W 230V**  
dim. 540x350 mm; flange 70x20 mm

Electrolux 054609 054610 056945

**412198**



**Heating element 800/1750W 230V -  
870/1800W 240V**  
dim. 350x295 mm, flange 100x22mm with pin  
M4x20 - for oven 4GN

Electrolux 0C3042

**415277**



**Heating element, 3750W 232V**  
dim. 540x350x35 mm; flange 75x50 mm;  
connection F6,3

Electrolux 055430 055439 056930

**442027**



**Heating element 1000W 230V**  
dim 345x338 mm; flange 80x16 mm; faston  
6,3x0,8 mm

Electrolux 005218

**432469**

 


**Heating element 4500W 230V**  
dim. 440x350mm; flange 76x50mm

Electrolux 002757 0K0537

## Heating Elements

**427804**

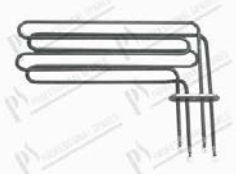

**Heating element 3000W 220V**  
dim. 335x135 mm; flange 85x30 mm for Oven  
5611/12/14-3

Electrolux 0H6166 0H6186 0K0557 0KE599

**435506**



**Heating element 2500W 230V**  
Ø est. 199x24 mm; flange 70x22 mm -  
connection F6,3

Electrolux 005217

**442418**



**Heating element 1350W 230V**  
Øext 193 mm, flange 70x22 mm

Electrolux 0E3683

**432296**



**Heating element 3000W 230V**  
Øext. 190x25 mm; flange 70x22 mm -  
connection F6,3

Electrolux 054980 055503

**322023**



**Heating element 2000W 230V**  
Ø 190 mm; flange 40x22 mm

Electrolux 0C6935

**433979**



**Heating element 3200W 400V**  
Ø 400 mm; flange 80x45 mm - with gasket in  
VITON

Electrolux 006984 0C5362 0C6500

**616283**



**Heating element 2500W 230V**

Electrolux 0C4061

**414615**



**Heating element 3200W 230V**  
Ø 400x90 mm; flange 205x43 mm - connection  
M14x1,5

Electrolux 0H2473 0H2474 0H2475 0K8119  
0KV622

**432253**



**Heating element 2500W 230V**  
Ø 190x40 mm; flange 70x22 mm

Electrolux 054317 054843 055028

**526355**



**Heating element 3200W 230V**  
Ø 400 mm; flange 80x45 mm - with gasket in  
VITON

Electrolux 006986 0C5363 0C7051



## Heating Elements

**583611**



**Heating element 5500W 240V USA**  
 Ø 490 mm; flange 80x44,5 mm; faston 6,3 mm

Electrolux 0C1500

**316091**



**Heating element 5666W 230V**  
 Ø 490 mm; flange 80x46 mm; faston 6,3 mm

Electrolux 0C5243

**415129**



**Heating element 5666W 240V**  
 Ø 465 mm; flange 76x50 mm

Electrolux 054620 054621 058197

**526360**



**Heating element, 5670W 230V**  
 flange 45x80 mm

Electrolux 007066 0C7052

**415170**



**Heating element 5666W 230V**  
 Ø 490 mm; flange 75x50 mm; screw M5

Electrolux 053838 053839 058196

**434011**



**Heating element 5670W 400V**  
 Ø 483x60 mm; flange 80x45 mm - faston 6,3 mm - AOS 10E

Electrolux 007064

**415012**



**Heating element 5666W 230V**  
 Ø 490 mm; flange 80x46 mm

Electrolux 002688

**700375**



**Heating element 5670W 400V**  
 Ø 483x60 mm; flange 80x45 mm - connection F6,3 - AOS 10E with gasket in VITON

Electrolux 0C5364 0C6501

**414985**



**Heating element 5666W 200V (Japan)**  
 Ø 490 mm; flange 46x80 mm

Electrolux 004081

**415207**



**Heating element 5670W 230V**  
 Ø 490 mm; flange 80x27 mm

Electrolux 0F0052

## Heating Elements

**535901**



**Heating element 5670W 440V**  
Ø est. 490 mm, flange 45x80 mm

Electrolux 0C1936 0C7059

**414504**



**Heating element 5000W 220V**  
H=120 mm; connection M4

Electrolux 0H2281 0K7540

**432133**



**Heating element 8000W 400V**  
Ø 567 mm; flange 46x80 mm

Electrolux 0A5330 0G2201 0K0553

**414536**



**Heating element 5000W 230V**

Electrolux 0H2480 0K8132

**320319**



**Heating element 8000W 400V**  
Ø 490 mm; flange 80x46 mm

Electrolux 0C5242

**415202**



**Heating element 8000W 230V**  
dim. 170x505 mm; flange 76x50 mm -  
connection M5

Electrolux 054050 054051 056929

**436385**



**Heating element 8000W 400V**  
Ø 580x60 mm; flange 80x45 mm - connection  
F6,3 - AOS 20E

Electrolux 0617828000 0C1173 0C6502

**415044**



**Heating element 8000W 380V**  
flange 50x76 mm

Electrolux 055481 056970

**700376**



**Heating element 8000W 400V**  
Ø 580x60 mm; flange 80x45 mm - connection  
F6,3 - AOS 20E with gasket in VITON

Electrolux 0C5365

**585326**



**Heating element gasket**  
70x22 mm

Electrolux 0C5498

## Heating Elements

**435408**



**Heating element gasket 76x49.5x3 mm**  
dim. internal 34x44 mm

Electrolux 055327

**612933**



**Heating element gasket 74x25.5x1 mm**

Electrolux 0DF003

**442125**



**Heating element gasket 45x80mm**  
dim. internal 35x40mm

Electrolux 003726

**336065**



**Heating element gasket 37x12mm**

Electrolux 0E5554 0K8134

**349460**



**Heating element gasket 50x76 mm**  
dim. internal 48x38 mm

Electrolux 053840

**615004**



**Heating element gasket AOS**

Electrolux 0C5834

**438610**



**Heating element gasket 71x24x1.8 mm**

Electrolux 057534

**427940**



**Heating element gasket 67x14 mm**

Electrolux 0H6665 0K1831

**435558**



**Heating element gasket 80x138 mm**  
in VITON

Electrolux 002689

**414110**



**Gasket**

Electrolux 0F0013 0K8491

## Heating Elements

**315349**



Mechanical components for 414904

Electrolux 0Q0003

**526202**



Bracket 95 mm

Electrolux 005775

**419844**



Nut

Electrolux 0K7985 0K8692

**526482**



Blade L=155 mm

Electrolux 006256 0K9593

**415274**



Flange

Electrolux 006112

**526201**



Support

Electrolux 005776

**412421**



Flange for heating element  
Ø 50x90; 6 hole Ø 7,5 mm e 2 hole thread M4x1

Electrolux 003362 065558 0K2022 0K2917

**526485**



Support

Electrolux 006255 0K9592

**526486**



Angle L=155 mm

Electrolux 006253

**582695**



Support  
dim. 90x154 mm

Electrolux 0C3830

## Commutators, Energy Regulators

**432329**



**Commutators 2 positions 0-1**  
16A 250V; D-shaft Ø 6x4,6 mm

Electrolux 031481 054375 058125 0C1355  
OKT763 OKW856

**318640**



**Commutators 0-5 positions**  
D-shaft Ø 6x4,6 mm

Electrolux 0F0123

**418789**



**Commutators 0-2 positions**  
D-shaft Ø 6x4,6 mm

Electrolux 0KL030 428028200

**527733**



**Commutator 0-6 positions**  
D-shaft Ø 6x4,6 mm

Electrolux 0C9467

**428778**



**Commutators 0-4 positions**  
16A 250V; Tmax 150°C; D-shaft Ø 6x4,6 mm

Electrolux 0G7663 0H6602 0H9803 0K4913

**432137**



**Commutators 0-6 position**  
16A 250V - D-shaft Ø 6x4,6 mm

Electrolux 058806

**435362**



**Commutators 0-5 position**  
270°C - D-shaft Ø 6x4,6 mm

Electrolux 054324

**427905**



**Commutators 0-6 position**  
D-shaft Ø 6x4,6 mm L=23 mm

Electrolux 0E3697 0KB688

**338445**



**Commutators 0-5 positions**

Electrolux 005138 0H6286

**616518**



**Commutators 0-7 positions**  
16A 250V - D-shaft Ø 6x4,6 mm

Electrolux 0C3051 0C3936

## Commutators, Energy Regulators

**432269**



**Commutator 0-7 positions**  
16A 250V; D-shaft Ø 6x4,6 mm

Electrolux 055017 0C6245

**435458**



**Commutators 0-7 positions**  
16A 250V; Tmax 85°C; D-shaft Ø 6x4,6 mm

Electrolux 002661 0K2019

**533018**



**Energy regulator 13A 230V**  
D-shaft Ø 6x4,6 mm; Tmax 125°C

Electrolux 003031 005270 050527 050563  
051188 051189 052042 053695  
0699801001 093124 0A2482 0C1605  
0K8611 0KJ210

## Transformers

**436645**



**Transformer 220-240/12V P=3VA 50/60Hz**  
dim. 44x47x33 mm; for 12V thermoregulator

Electrolux 0A2497

**583647**



**Transformer 400V 50Hz**  
dim. 120x120x100 mm

Electrolux 0C8153 0D6859

**417878**



**Transformer 220V/10-24V 40VA**  
input 220V 50/60Hz; output 10/24V-1,5/1,10A;  
with cable 40 cm and terminal board of 8  
poles

Electrolux 0H2455 0K8063 ST0658900

**315260**



**Transformer 230V 100VA - 10/24V  
50/50VA 50/60Hz**  
dim 85x85x80 mm

Electrolux 0C4460 0C6400 0C6882 0C6883  
0C9557

## Transformers

**526367**



**Transformer 170W 50/60Hz**

PRI- 100-200-230V - SEC- 10,5-24V; dim.  
85x90x90 mm

Electrolux 007046 0C9857 0C9865

---

**434000**



**Transformer 100VA 230/12V 50-60Hz**

Electrolux 007045

---

**349830**



**Transformer 220-240V/12-24V - 100VA**

dim. 88x85x75 mm

Electrolux 056512

---

**438161**



**Transformer for lighting 230V 50/60Hz**

SEC.: 11.5Vac, 4A, 35-50VA; dim 195x41x28  
mm

Electrolux 002856 0C9422 0F0083 0K8481

---

**437819**



**Trasformer for lighting 230V 50/60Hz**

SEC.: 11.5Vac, 8,4A, 60-105VA; dim  
240x41x28 mm

Electrolux 002749

---



## Cables

**323402**



**Wiring harness**  
for oven AOS2 10ELT

Electrolux 0C5815

**584335**



**Cable feedthrough L=34 mm**  
Ø 9 mm

Electrolux 0G3351

**323403**



**Wiring harness**

Electrolux 0C7005

**430140**



**Cable L=500 mm**  
ARS

Electrolux 0H2482 0K8143

**582546**



**Cable grommet Ø 22x37x9 mm**

Electrolux 005382

**319252**



**Cable grommet Ø 23x30/35x7 mm**

Electrolux 0C7925

## Thermostats

**438192**



**Bi-metal thermostats 10A 250V T250°C**  
1P  
ELTH 271 10A 250V T250

Electrolux 005203 0KG530

**429001**



**Operating thermostat 1P 50-250°C**  
D-shaft 6x4.6 mm, bulb Ø 3x160 mm

Electrolux 0H2403 0H2404 0K7366 0K7927

**427901**



**Bi-metal thermostats 200°C**

Electrolux 0KL023 325641970

**432157**



**Operating thermostat 1P 50-260°C**  
coated capillary L=900 mm; bulb Ø 3x230 mm;  
16A 250V; D-shaft Ø 6x4,6 mm

Electrolux 029918 057937 0K2960

**427735**



**Bi-metal thermostats klixon 125/150/65°C**

Electrolux 0KB694 0KL022

**438196**



**Operating thermostat 1P 95-280°C**  
capillary L=1240 mm (coated 350 mm); bulb Ø  
3x196 mm; 16A 250V

Electrolux 005207 0KB736

**324580**



**Operation thermostat 1P 233°C**  
capillary L=1000 mm; bulb Ø 3x195 mm;  
D-shaft Ø 6x4,6 mm

Electrolux 0C3045 0C4180

**431684**



**Operating thermostat 1P 50-296°C**  
coated capillary L=1000 mm; bulb Ø 3x220  
mm; D-shaft Ø 6x4,6 mm

Electrolux 056384 0F0088 0K0645

**527738**



**Operating thermostat 1P 274°C**  
capillary L=700 mm; bulbo Ø 4x102 mm; perno  
a mezzaluna Ø 6x4,6 mm

Electrolux 0C9470

**435363**



**Operating thermostat 1P 0-300°C**  
capillary L=1500 mm; bulb Ø 4x237 mm;  
D-shaft Ø 6x23,7 mm

Electrolux 054323

## Thermostats

**427898**



**Operating thermostat 2P 50-200°C**  
capillary L=890 mm, bulb Ø 3x158 mm, D-shaft  
6x4,6 mm

Electrolux 0E3691 0KB677 325629430

**432407**



**Safety thermostat 1P 150°C**  
coated capillary L=1700 mm; bulb Ø 6x75 mm;  
contacts capacity 20A 400V

Electrolux 002711

**427440**



**Safety thermostat 1P 80°C**  
capillary 900 mm; bulb Ø 4,5x30,5 mm

Electrolux 0H9843 0K2995 0K5039

**419719**



**Safety thermostat 1P 309°C**  
capillary L=1200 mm, bulb Ø 3x140 mm

Electrolux 0H2488 0K8150 0KE491

**432345**



**Safety thermostat 1P 126°C**  
coated capillary L=1800 mm; bulb Ø 6x129 mm  
- with manual reset

Electrolux 0E1108 0E5086 0K6886 0K6888  
0KX072 481950102

**419239**



**Safety thermostat 1P 309°C**  
bulb Ø 4x110 mm

Electrolux 0H2045 0H2393 0K6887 0K7887

**429070**



**Safety thermostat 1P 140°C**  
coated capillary L=1200 mm; bulb Ø 3x130 mm

Electrolux 0H6143 0H6245

**432303**



**Safety thermostat 2P 338°C**  
coated capillary L=900 mm; bulb Ø 6x48 mm;  
with manual reset

Electrolux 007042

**433728**



**Safety thermostat 1P 150°C**  
coated capillary L=1700 mm; bulb Ø 3x74 mm;  
with manual reset

Electrolux 005319 005681 0C1147

**428968**



**Safety thermostat 1P 350°C**  
capillary L=900 (coated L=430 mm), bulb Ø  
3x140 mm

Electrolux 0H6243

## Thermostats

**432184**



**Safety thermostat 1P 360°C**

coated capillary L=1500 mm; bulb Ø 6x74mm;  
with manual reset

Electrolux 003594 053980 057442 0G2269

**430474**



**Gland nut M12x18,5 mm**

thread H=8 mm for bulb Ø max. 6,5 mm

Electrolux 0E5033 0K7534 0KE421 478044600

**582183**



**Safety thermostat 2P 338°C**

coated capillary 900 mm; bulb Ø 11x17 mm

Electrolux 0C4702

**522239**



**Safety thermostat 3P 150°C**

coated capillar L=900 mm; bulb Ø 6x39 mm

Electrolux 006433

**612109**



**Safety thermostat 3P 140°C**

covered capillary L=900 mm, bulb Ø 6x90 mm;  
with manual reset

Electrolux 0C2983

**365271**



**Safety thermostat 3P 365°C**

coated capillar L=900 mm; bulb Ø 6x47 mm;  
gland nut M10x1; with manual reset

Electrolux 006314

## Shower units and Water columns

**536214**



Shower unit AOS 6-10 grids GN 1/1

Electrolux OC2218 OT5479

**611951**



Pipe fitting

**348472**



Gasket Ø 14x23x4 mm

**310394**



Hand shower 140 mm

**301642**



Flexible pipe Ø 6.30x13.20 mm 3/8" MF  
L=1400 mm

**536341**



Shower unit AOS 10 grids GN 2/1

Electrolux OC2303

**611951**



Pipe fitting

**348472**



Gasket Ø 14x23x4 mm

**310394**



Hand shower 140 mm

**301642**



Flexible pipe Ø 6.30x13.20 mm 3/8" MF  
L=1400 mm

## Shower units and Water columns

**348448**



**Retractable hose reel spray unit**  
dim. 305x200/245x115 mm

Electrolux 006696 OT1747 OT1757 922170

**348466**



**Hand shower 3/8\"/>**

**348315**



**Spring for automatic hose-reel**

**348258**



**Flexible pipe EPDM 6x12 mm**

**348257**



**Fitting MG 1/2\"/>**

**348118**



**Water tap 1/2\"/>**

**311593**



**Fitting MINIREel M1/2\"-M3/4\"**

**436370**



**Retractable hose reel spray unit**  
feeder hose Ø 1/2" L=100 cm; max pressure  
10 bar - Tmax 110°C

Electrolux 007039 0873826400 0C1156 OT5478

**611953**



**Flexible pipe INOX Ø 14 mm 1/2\"/>**

**348452**



**Hand shower 130 mm**

**348315**



**Spring for automatic hose-reel**

**348258**



**Flexible pipe EPDM 6x12 mm**

**436348**



**Shower unit AOS 20 1/1 and 2/1**

Electrolux 0C1128

**348452**



**Hand shower 130 mm**

## Shower units and Water columns

**311689**



Shower unit AOSQ 6-10 griglie 1/1 - 2/1

Electrolux 0C4248

**310394**



Hand shower 140 mm

**301642**



Flexible pipe Ø 6.30x13.20 mm 3/8" MF  
L=1400 mm

**348452**



Hand shower 130 mm  
connection 1/2" F

Electrolux 0L0454 0L0677

**310394**



Hand shower 140 mm  
connection Ø 12 mm

Electrolux 0C4536 0C4543 0L0673

**348259**



Hand shower 1/2" F

Electrolux 003167

**348248**



Spray cup with water spout aerator  
fitting Ø 16 mm

Electrolux 003164

**312045**



Hand shower MAXI Reel

Electrolux 0L0561

**547600**



Complete external side shower  
flexible hose L=2500 mm

Electrolux 0S0662 922171

**348259**



Hand shower 1/2" F

**348348**



Hand shower 1/2" M

Electrolux 0S0323

**348176**



Hand shower KIT  
hose L=2000 mm conn. FF 1/2" max capacity  
4 bar.

Electrolux 0S0354



## Shower units and Water columns

**348466**



**Hand shower 3/8" F**  
L=132 mm - plastic connection

Electrolux 003175 OK1055

**348315**



**Spring for automatic hose-reel**

Electrolux 003701

**611953**



**Flexible pipe INOX Ø 14 mm 1/2" F M10**  
fast-lock

Electrolux 0C2790

**336262**



**Bracket**

Electrolux 0KS117

**348258**



**Flexible pipe EPDM 6x12 mm**  
MINIReel M3/8" F3/8" 90° L=1600 mm

Electrolux 003170 OKE770

**348314**



**Fitting 90°**

Electrolux 003696

**348435**



**Head shower support - Klarco**

Electrolux 003513

**348257**



**Fitting MG 1/2"**  
quick-fitting Ø 10 mm

Electrolux 003698

**613574**



**Plastic support L=115 mm**

Electrolux 0L0737 OS0816

**311593**



**Fitting MINIReel M1/2"-M3/4"**  
Ltot=45 mm; O-ring 23x26x1.5 mm (2pcs)

Electrolux 003697

## Shower units and Water columns

**348313**



Gasket Ø 8x15x2 mm

Electrolux 003171 0C2785 0S1061

**348472**



Gasket Ø 14x23x4 mm  
"U" profile

Electrolux 003169 003700

**348428**



Piston for shower

Electrolux 003183

**348437**



Curved hose Ø 10x1 mm in  
nickel-copper

Electrolux 003699

## Dispensers and Peristaltic pump

**316302**



Stiff polyethylene grey hose Ø 4x6 mm  
(sold by meter)  
high temperature -20 + 130°C

Electrolux 0C2771

**324524**



Stiff polyethylene blue hose Ø 4x6 mm  
(sold by meter)

Electrolux 0C9798

## Dispensers and Peristaltic pump

**324521**



Hose PU Ø 4x6 mm red (sold by meter)

Electrolux 0C9797

---

**312186**



Hose PE Ø 6x8 mm blue (sold by meter)

Electrolux 0C9800

---

**378316**



Hose PE Ø 6x8 mm red (sold by meter)

Electrolux 0C9799

---

**312250**



Hose PE Ø 7x10 mm bleu (sold by meter)

Electrolux 0C2309

---

**433808**



Covering

Electrolux 007022 007023 0C0827

---

## Solenoid Valves and Reducers

**435437**



**Solenoid valve 90° - 1 way - 220/240V 50/60Hz - Ø 10,5 mm**  
with fastons; inlet Ø 3/4" with filter; Tmax 90°C

Electrolux 002613 0K1524 0KM766 0S1650

**411795**



**Solenoid valve 90° - 3 ways - 220/240V 50/60Hz - Ø 10,5 mm**  
with fastons; inlet Ø 3/4" with filter; outlet reducer 0,8 lt/min and 0,25 lt/min; Tmax 90°C

Electrolux 002712 0K1519 0K1523

**342764**



**Solenoid valve 90° - 1 way - 220/240V 50/60Hz - Ø 10,5 mm**  
with fastons; inlet Ø 3/4" with filter; outlet reducer 1,2 lt/min; Tmax 90°C

Electrolux 055350 085327 0A2064 0K2983

**411813**



**Solenoid valve 180° - 1 way - 24Vac 50Hz - Ø 10,5 mm**  
with fastons; inlet Ø 3/4" with filter; Tmax 90°C

Electrolux 058996

**435406**



**Solenoid valve 90° - 2 ways - 220/240V 50/60Hz - Ø 10,5 mm**  
with fastons; inlet Ø 3/4" with filter; outlet reducer 0,8 lt/min; Tmax 90°C

Electrolux 055444

**435409**



**Solenoid valve 180° - 1 way - 220/240V 50/60Hz - Ø 10,5 mm**  
with fastons; inlet Ø 3/4" with filter; Tmax 90°C

Electrolux 046507 046633 046655 047370  
047533 047756 053827 055132  
070312 086014 086500 0H9339  
0K8513 0KD793 0L3335

**435476**



**Solenoid valve 90° - 2 ways - 220/240V 50/60Hz - Ø 10,5 mm**  
with fastons; inlet Ø 3/4" with filter; 1 outlet reducer 2,5 lt/min; Tmax 90°C

Electrolux 005556

**435522**



**Solenoid valve 180° - 1 way - 220/240V 50/60Hz - Ø 10,5 mm**  
with fastons; inlet Ø 3/4" with filter; outlet reducer 0,8 lt/min; Tmax 90°C

Electrolux 002753

**411808**



**Solenoid valve 90° - 3 ways - 24Vac 50Hz - Ø 10,5 mm**  
with fastons; inlet Ø 3/4" with filter; Tmax 90°C

Electrolux 0A2415

**435314**



**Solenoid valve 180° - 2 ways - 220/240V 50/60Hz - Ø 10,5 mm**  
with fastons; inlet Ø 3/4" with filter and inlet reducer 12 lt/min; outlet reducer 0,25 lt/min; Tmax 90°C

Electrolux 046654 047579 057814

## Solenoid Valves and Reducers

**432685**



**Solenoid valve 180° - 2 ways - 220/240V 50/60Hz - Ø 10,5 mm**  
with fastons; inlet Ø 3/4" with filter and reducer 5,5 lt/min; outlet 2 with reducer 0,25 lt/min; Tmax 90°C

Electrolux 0H2505 0K8195 482289400

**435189**



**Solenoid valve 180° - 3 ways - 220/240V 50/60Hz - Ø 10,5 mm**  
with fastons; inlet Ø 3/4" with filter; outlet reducer with 0,25 lt/min and brown 2,5 lt/min; Tmax 90°C

Electrolux 0F0001 0H2438 0K8512 482759300

**432564**



**Solenoid valve 180° - 3 ways - 220/240V 50/60Hz - Ø 10,5 mm**  
with fastons; inlet Ø 3/4" with filter and inlet reducer 5,5; outlet reducer 0,8 lt/min and 0,25 lt/min; Tmax 90°C

Electrolux 0K8035 482085100

**427775**



**Vibration pump 5W 230V 50Hz**  
inlet/outlet Ø 3 mm

Electrolux 0E3682 0KB664 325629140

**583805**



**Solenoid valve 90° - 1 way - 220/240V 50/60Hz - Ø 10,5 mm**  
with fastons; inlet Ø 3/4" with filter; Tmax 90°C

Electrolux 002613\_ 0K1524\_ 0KM766\_

**583804**



**Solenoid valve 180° - 1 way - 220/240V 50/60Hz - Ø 10,5 mm**  
with fastons; inlet Ø 3/4" with filter; Tmax 90°C

Electrolux 047533\_ 053827\_ 055132\_ 070312\_  
086500\_ 0C0938\_+RI 0H9339\_ 0K8513\_  
DUTTORE  
AZZURRO  
0L3335\_

**442167**



**Flow control Ø 1,25 mm - dim. Ø 11x30 mm**

Electrolux 002752 0F0160

**442169**



**Flow control Ø 1,8 mm - dim. Ø 11x30 mm**

Electrolux 002728 0F0185 0KD886

**440983**



**Flow control Ø 2,0 mm - dim. Ø 11x15 mm**

Electrolux 0A5325

**439362**



**Flow control Ø 0,5 mm - dim. Ø 12x9 mm**

Electrolux 058946

## Solenoid Valves and Reducers

**440367**



Flow control Ø 0,6 mm - dim. Ø 12x9 mm

Electrolux 002091

**316119**



Solenoid valve 180° - 1 way - 220/240V  
50/60Hz - Ø 10,5 mm  
rast 5; inlet Ø 3/4" with filter; Tmax 90°C

Electrolux 003608 055529 056486 0C3254

**324145**



Solenoid valve 180° - 1 way - 220/240V  
50/60Hz - Ø 10,5 mm  
with fastons; inlet Ø 3/4" with filter; (RPE)

Electrolux 0C6170

**319534**



Solenoid valve 180° - 1 way - 220/240V  
50/60Hz - Ø 10,5 mm  
rast 5; inlet Ø 3/4" with filter; outlet reducer  
0,25 L/min; Tmax 90°C

Electrolux 0C6081

**582627**



Solenoid valve 180° - 1 way - 220/240V  
50/60Hz - Ø 10,5 mm  
with fastons; inlet Ø 3/4"; (RPE)

Electrolux 0PE675

**316889**



Solenoid valve 180° - 1 way - 220/240V  
50/60Hz - Ø 10,5 mm  
rast 5; inlet Ø 3/4" outlet reducer 0,25 L/min;  
Tmax 90°C;

Electrolux 0C5515

**616318**



Pressure reducer [Kit]  
1÷1,25 lt/min (white); 1,5÷1,85 lt/min (yellow);  
1,95÷3,5 lt/min (black); 7÷10 lt/min (orange)

Electrolux 0C6375

**315263**



Solenoid valve 180° - 2 ways - 220/240V  
50/60Hz - Ø 10,5 mm  
rast 5; inlet Ø 3/4" without filter; reducers 2,5  
l/min e 0,25 l/min ; Tmax 90°C

Electrolux 0C5516

**532921**



Solenoid valve 90° - 1 way - 220/240V  
50/60Hz - Ø 10,5 mm  
rast 5; inlet Ø 3/4" with filter and inlet reducer  
12 lt/min; Tmax 90°

Electrolux 0C1113 0C1933

**316125**



Solenoid valve 180° - 2 ways - 220/240V  
50/60Hz - Ø 10,5 mm  
rast 5; inlet Ø 3/4" with reducers 5 l/min e 0,25  
l/min ; Tmax 90°C

Electrolux 0C5517



## Solenoid Valves and Reducers

**535899**



**Solenoid valve 180° - 3 ways - 220/240V 50/60Hz - Ø 10,5 mm**  
rast 5; inlet Ø 3/4" with filter; outlet reducer 1,2 lt/min and 0,25 lt/min; Tmax 90°C

Electrolux 002859 0C1934

**436342**



**Solenoid brass valve 2/2 - NC - G3/4" - 220/230V 50/60Hz**  
L=104 mm, coil 8W; DN19; 0,2-16,0 bar; gasket NBR -10/+90°C

Electrolux 0C1121

**536355**



**Solenoid valve 180° - 3 ways - 220/240V 50/60Hz - Ø 10,5 mm**  
rast 5; inlet Ø 3/4" with filter; outlet reducer 1,2 da L/min e marrone 2,5 L/min; Tmax 90°C

Electrolux 0C2314

**435426**



**Solenoid brass valve - NC - G1/2" - 230V 50/60Hz**  
L=61 mm; Tmax 90°C

Electrolux 007015

**535837**



**Solenoid brass valve L182 - NC - G1/2" - 110V 50Hz**  
L=66 mm; delta Pres 0,35 + 16 bar; Ø 13,5 mm; NC coil 8W

Electrolux 0C1881

**436325**



**Solenoid brass valve 180° - 3/4" FF - 220V 50Hz**  
Tmax 90°C

Electrolux 0C1104

**433925**



**Solenoid valve G1/4" 230V 50/60Hz**  
L=39 mm; DN 5,5 mm

Electrolux 007016

**433924**



**Solenoid valve 180° NC 230V 50Hz 13.5 VA**  
inlet/outlet Ø 6,5 mm

Electrolux 007017

**436362**



**Solenoid brass valve 2/2 - NC - G1/2" - 220/230V 50/60Hz**  
L=66 mm, coil 8W; membrane NBR -10/+90°C; DN13; 0,2-16,0 bar

Electrolux 067356 0C1148

**425498**



**Solenoid valve 1/2" 230V 50Hz**  
N.C.; Pmax 2 bar; brass body L=71 mm; mod. SCHTE267B015

Electrolux 0H9967 0K5390 0KF575



## Solenoid Valves and Reducers

**585415**



**Water inlet assembly 3/4" 220-240V UL**  
outlet JG Ø 15-8 mm

Electrolux 0C8684

**310546**



**Water inlet assembly 3/4" 230V 8VA**  
**50/60Hz - 3 coils**  
outlet JG Ø 15-8 mm

Electrolux 0C6224 0C6372

**322520**



**Water inlet assembly 3/4" 220-240V 6.6VA**

Electrolux 0C8683

**310545**



**Water inlet assembly 3/4" 230V 50/60Hz**  
**JG - 2 coils**  
outlet JG Ø 15-8 mm - AOS 201/202

Electrolux 0C6407 0C8664

**318205**



**Water inlet assembly 3/4" 230V 6,6VA - 2 coils**  
outlet JG Ø 15-8 mm; AOS 61/62/101/102

Electrolux 0C6373 0C8665

**367493**



**Water inlet assembly 3/4" 100/120V - 230V UL**  
outlet JG Ø 15-8 mm outlet Ø 10,5 m; entrada Ø 3/4"

Electrolux 0C8667

**316313**



**Water inlet assembly 3/4" 230V 8.4VA - with 1 coils**  
outlet JG Ø 8 mm; AOS 61/62/101/102

Electrolux 0C6406 0C8663

**527307**



**Water inlet assembly 3/4" 220-240V UL**  
outlet Ø 15 mm JG; outlet Ø 10 mm

Electrolux 0C8669

**316307**



**Water inlet assembly 3/4" 230V 8.4VA - 2 coils**  
outlet JG Ø 15-8 mm - AOS 61/101/102

Electrolux 0C6225 0C6374

**416623**



**Solenoid valve 180° - 1 way - 220/240V**  
**50/60Hz - Ø 10,5 mm**  
with fastons; inlet Ø 3/4" with filter; Tmax 90°C

Electrolux 0G2089 0G2196 0H6531

## Solenoid Valves and Reducers

**416675**



**Solenoid valve 180° - 2 ways - 220/240V  
50/60Hz - Ø 10,5 mm**  
with fastons; inlet Ø 3/4" with filter; Tmax  
90°C

Electrolux 0G1981 0H6532

**315466**



**Gasket with filter for solenoid valve Ø  
26x4,2xHtot.8 mm**

Electrolux 0C4096

**536352**



**Pipe fitting 3/4"MF - Ltot. 61 mm**

Electrolux 0C2313

## Ball valves, Pipe fittings

**436345**



**T-fitting Ø 15-15-15 mm - JG**  
dim. 74,5x47 mm

Electrolux 0C1124

**436363**



**Terminal with pipe fitting Ø 15 mm - 1/2"  
- JG**

Electrolux 0C1149

**436344**



**T-fitting Ø 22-15-22 mm - JG**

Electrolux 0C1123

**436343**



**Terminal with pipe fitting Ø 22 mm - 3/4"  
- JG**

Electrolux 0C1122

## Ball valves, Pipe fittings

**615818**



**Pipe fitting Ø 6 mm 1/4" - JG**  
L=24 mm; with EPDM gasket

Electrolux 0C1118 0C3649

**611951**



**Pipe fitting**

Electrolux 0C2789

**442171**



**Nipple 1"÷1 1/2 MM - L=33 mm**

Electrolux 002716

**436337**



**Pipe fitting F 1/4"**

Electrolux 0C1116

**436161**



**Nipple 1/2"÷1/2" - L=40 mm - brass**  
CH22

Electrolux 0C0907

**436369**



**Filter**  
with connection for hose M7

Electrolux 0C1155

**441622**



**Nipple 3/4"÷3/8" - L=34 mm - brass**

Electrolux 051949

**310228**



**Rubber holder G1/4" - outlet Ø 6 mm**

Electrolux 0C4198

**436162**



**Nipple 1" - 3/4"**  
flange 65x55 mm

Electrolux 0C0908

**366952**



**Rubber holder 1/4" outlet Ø 10 mm**  
L=33 mm

Electrolux 0C5564

## Ball valves, Pipe fittings

**533031**



Rubber holder G1/4" - outlet Ø 12 mm

Electrolux OC1626

**433571**



Pipe fitting 90° 1/8" - rubber holder Ø 4,75 mm

Electrolux OH2303 OK7612

**316711**



Rubber holder 1/8" - outlet Ø 5 mm

Electrolux OC8348 OCA348

**319206**



Pipe fitting 90° Ø 3/4" FF  
dim. 41x41 mm

Electrolux OE0686 OHN504 OK9042 OKE705

**526338**



Rubber holder 3/4" - outlet Ø 30 mm  
H 52 mm, Øint 20 mm; CH32

Electrolux 007117 0516809501 OK9631 OT3689

**418294**



Pipe fitting 90° 1" MF

Electrolux OKU065 742111625

 
**436346**



Rubber holder Ø 11 mm Ltot.=50 mm  
Øint 9.5 mm

Electrolux OC1125

**436382**

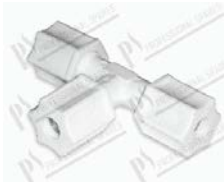

T-connection Ø 6 mm in/out

Electrolux OC1170

**441975**



Pipe fitting 90° 1/2" M/M  
Ø int 14-16 mm

Electrolux 006240 0515883200

**410244**



Y-connection Ø 10-10-10 mm - brass

Electrolux 047431 OKW990

## Ball valves, Pipe fittings

**526448**



Pipe fitting

Electrolux 006453 0K9629

**526523**



Pipe fitting 1"÷3/4"

Electrolux 005027

**418965**



Bush M20 Ø26x32 mm - brass

Electrolux 0K9020

**526372**



Pipe fitting 1"F-3/4"M  
H=32 mm

Electrolux 007040

**431858**



Nipple Ø 22 mm - 3/4"M

Electrolux 0E0151 0K9064

**584862**



Pipe fitting 3/4"÷1/2"

Electrolux 0C6506

**536522**



Nipple Ø 15-22 mm Ltot= 75 mm  
Ø int 13 mm

Electrolux 0C2436

**616065**



Pipe fitting FM 1"1/4÷3/4"

Electrolux 0C3847

**327254**



Pipe fitting Ø 3/4"-1/2" MF

Electrolux 0E5055 0K9033 0KE704

**348118**



Water tap 1/2"  
with fast lock

Electrolux 003554 0C4753

## Ball valves, Pipe fittings

**540830**



**Water tap 1/2"**  
M1/2", M3/4", Lot. 105 mm

Electrolux 003553 0S0555

**442051**



Handle Ø 19,5x25 mm

Electrolux 026822 029898

**416438**



**Ball valve 3/4" FF - PN50 - L=61 mm**  
DN20 total passage, butterfly handle

Electrolux 0G1637 0H2149 0K7222 476700200

**526793**



**Rod for ball valve L=530 mm**  
hole 18x18 mm

Electrolux 002880 0K1676

**344872**



**Ball valve MF1" - L=87,5 mm - DN25**  
lever L=93 mm

Electrolux 056617

**317715**



**Rod for ball valve 3/4" L=595 mm**  
connection 8x8 mm

Electrolux 0H2443 0K8044

**426182**



**Ball valve 1/2" FF**  
PN50 total passage; DN15 - L=60 mm - red lever

Electrolux 0H6385 0KF802 0T3680

**442151**



**Rod for ball valve L=950 mm**  
lock 18x18 mm

Electrolux 002882

**410225**



**Ball valve 3/4" FF - PN40 - L=71 mm**  
DN20 bore with bounderey locking 17x17 mm

Electrolux 056114 0F0080 0K8452

**348481**



Faucet handle

Electrolux 003160 003174

## Ball valves, Pipe fittings

**433932**



Non-return valve Ø 12 mm

Electrolux 007008

**615450**



KIT valve AOS20

Electrolux 0C3377

**436338**



Non-return valve Ø 10 mm - H=10mm

Electrolux 0C1117

**543041**



Motor-operated valve 1" FF 2,5W 230V  
L=74 mm; DN 25; cable L=920 mm with  
3-ways connector MOLEX

Electrolux 0CK193

**536351**



Non-return valve Ø 20 mm - H=22,20 mm

Electrolux 0C2312

**410194**



Motor-operated valve 1" FF 230V 50/60Hz  
cable L=250 mm with 3-ways connector

Electrolux 005026

**317140**



Non-return valve 3/4" FF  
L=103 mm; PN15; DN20; Tmax. 80°C

Electrolux 0L2980

**612078**



Motor-operated valve 1" FF 230V 50/60Hz  
2,5W  
L=77,6 mm; DN25; cable L=220 mm with  
3-ways connector INARCA

Electrolux 0C2956 0C9767

**615447**



KIT valve AOS06-10

Electrolux 0C3376

**349880**



Motor-operated valve 3/4" FF 3W 24V  
50/60Hz  
cable L=250 mm with 3-ways connector  
MOLEX

Electrolux 059004 0L0949



## Ball valves, Pipe fittings

**583580**



**Motor-operated valve 3/4"FF 230V  
50/60Hz**  
4W; L=63 mm; DN20 PN15; cable L=300 mm  
with 3-ways connector

**Electrolux** 002713 0C0882 0C5518 0CB250  
0F0171 0K1526 0K8453 0K9349

## Hoses

**348247**



**Flexible pipe INOX 1/2"MF L=2500 mm**  
plastic covering; straight connection + 90°

**Electrolux** 003166

**612360**



**Hose EPDM Ø 10x17 mm (sold by meter)**  
Pmax 10 bar; working temp. -35°C÷110°C;  
non-toxic

**Electrolux** 002707 0C3165 0C4158 0F0092  
0K8058 0K8734 55222400

**301642**



**Flexible pipe Ø 6.30x13.20 mm 3/8" MF  
L=1400 mm**  
Silicon for AOS with fiberglass gasket  
8x14.5x2 mm

**Electrolux** 0C4539 0C4541 0G5970 0L0674  
0L1161 0S1262

**441411**



**Hose EPDM Ø 12x19,5 mm L=400 mm**  
for hot water Tmax 110°C; atossic

**Electrolux** 055345 055445

**427842**



**Gasket  
MINICOMBI**

**Electrolux** 0KB679 0KB707

**436155**



**Hose EPDM Ø 30x40 mm L=1030 mm**

**Electrolux** 0C0869

**440751**



**Sleeve Ø 40x50x50 mm**

**Electrolux** 0C1344 0K8737

**441972**



**Hose EPDM Ø 30x40 mm L=860 mm**

**Electrolux** 006113 006252 0C3321 0C3322  
0C5006 0C5283

## Hoses

**436431**



Hose EPDM Ø 40x50 mm L=450 mm

Electrolux 0C0617 0C1223 0K2417

**526487**



Silicone hose Ø 20x26 mm (sold by meter)

Electrolux 006248 0F0183 0H7015 0K2441  
0K8735 0KG572

**436156**



Hose EPDM Ø 30x40 mm L=340 mm

Electrolux 0C0874 0C0943 0C3307 0C3943  
0C5284

**438343**



**Rubber feeder hose 3/4" L=1500 mm**  
straight connection + 90° plastic connection;  
nylon ring nut Ø 3/4"F; hose Ø 10x17 mm;  
Pmax 10 bar; Tmax 90°C; WRAS/VDE  
approved

Electrolux 005131 053789 0C5562 0C8316  
0S0150

**340482**



Hose polyethylene gray Ø 4x6 mm L=700 mm

Electrolux 005469 005497

**310647**



**Feeder hose**  
L=530mm

Electrolux 0C4256 0C4300 0C4329 0C4917

**335703**



Flexible hose Ø 6 mm (sold by meter)

Electrolux 0H2358 0K7750

**323879**



**Feeder hose Ø 10x18 mm**  
1 x L=1200mm + 2 x L=105 mm

Electrolux 0C4313 0C4323 0C4653

**417619**



Hose black silicone Ø 4x8 mm Ltot=100 mm

Electrolux 0K7991 0KE472

## Water conditioning

**302021**



**Filtration system PURITY C QUELL ST150  
(without flow meter)**  
Capacity 2400 lt; Ø 115x421 mm

Electrolux OS0679 OS1092 OS1628

**200280**



**Filtration system PURITY C QUELL ST300  
(without flow meter)**  
capacity 4000 lt; Ø 122x476 mm

Electrolux OS1097 OS1629

**200281**



**Filtration system PURITY C QUELL ST500  
(without flow meter)**  
capacity 6800 litri; Ø 149x554 mm

Electrolux OS1098 OS1630 920002

**582443**



**Water purifier**  
JG pipe Ø 7x10 mm, JG pipe Ø 1/4 "x 0.170"  
(Ø 4.3x6.35 mm 90 ° fitting JG MF10 mm, JG  
MF fitting 6.4 mm

Electrolux OS0718 OS1822 864026 864388

## Drain components

**427883**



**Water container**  
dim. 400x238 mm

Electrolux OCB394 OKB722

**427878**



**Lid for watertank**

Electrolux OKB684

## Drain components

**519232**



**Inlet water manifold**

Electrolux 0C0811

**311366**



**Exhaust valve actuator**  
Ltot= 330 mm

Electrolux 0C5525

**323347**



**Manifold 3/4"**  
with 2 connection for hose Ø 8 mm, L=143 mm

Electrolux 0C6370

**525963**



**Butterfly for flue condensation**

Electrolux 007081

**323352**



**Ring [Kit]**

**323348**



**Closing clamp**

**436381**



**Butterfly for flue condensation**

Electrolux 0C1169

**414572**



**Manifold 1/2"-3/4" brass**  
rubber holder Øext 12/30 mm

Electrolux 056665

**311227**



**Flue condensation L=785 mm**  
with magnet; 10 2/1 AOSQ

Electrolux 0C4298

**526685**



**Flue condensation**

Electrolux 003776

**312748**



**Flue condensation L=603 mm**  
with magnet; GN 1/1 AOSQ

Electrolux 0C4242

## Drain components

**413184**



**Flue condensation L=450 mm**

Electrolux 0F0030 0KI014

---

**435235**



**Drain condensation mechanism**  
dim. 40x91 mm

Electrolux 002648 003773

---

**434017**



**Drain condensation mechanism**

Electrolux 006979

---

**366458**



**Flue condensation Ø 14,30 mm**  
dim. 690x182 mm

Electrolux 0C4243

---

**416671**



**Drain plate Øext 64 mm with plug**  
outlet Øext 24 mm, Htot=61 mm, with gasket

Electrolux 006309

---

## Filters

**524056**



**Water filter 1/2" - L=60 mm**  
bronze body and filter in INOX

Electrolux 054450 072470 0E1983 0K9074

---

**441239**



**Drain filter Ø 75 mm**

Electrolux 005133 056444 0F0073

---

**440963**



**Drain filter Ø 80 mm**

Electrolux 0H6299 0K1043

---

**535676**



**Drain filter Ø 100 mm**

Electrolux 0C1740 0K8367

---

**611924**



**Drain filter Ø 100 mm**

Electrolux 0C2769

---

## Wash units

**319901**



**Washing arm plug 1" F**  
brass-chromate

Electrolux OE5016 OK9039

**485200**



**Manifold for oven washing system AOS**  
**10GN 2/1, 6GN 2/1**  
hose Ø 9x16,5x630 mm; Ltot. 700 mm; hoses  
Ø 4x7x220 mm

Electrolux OC4294

**433929**



**Rinse arm L=420 mm**  
Hub Øint 15 mm Øext 22 mm

Electrolux 007010 OC5503 OC8317

**310976**



**Manifold for oven washing system AOS**  
**10GN 2/1, 6GN 2/1 [Kit]**  
hose Ø 9x16,5x630 mm; Ltot. 700 mm; hoses  
Ø 4x7x220 mm

Electrolux OC5367

**485204**



**Manifold for oven washing system AOS**  
**10GN 1/1, 6GN 1/1**  
hose Ø 9x16,5x515 mm; Ltot. 585 mm; hoses  
Ø 4x7x220 mm

Electrolux OC4246 OC6202

**371555**



**Manifold for oven washing system AOS**  
**20GN 1/1**  
hose Ø 11x19x265 mm; Ltot. 330 mm; hoses  
Ø 5x12x405 mm

Electrolux OC8458

**310975**



**Manifold for oven washing system AOS**  
**10GN 1/1, 6GN 1/1 [Kit]**  
hose Ø 9x16,5x515 mm; Ltot. 585 mm; hoses  
Ø 4x7x220 mm

Electrolux OC5366

**367478**



**Manifold for oven washing system**  
L=680 mm Øint. 11,5 mm; L2=250 mm Øint. 5  
mm

Electrolux OC8185

**324431**



**Manifold for oven washing system**  
L=610mm Ø int 10 mm ; L2= 180mm Ø int 5  
mm;

Electrolux OC6203

**322872**



**Manifold for oven washing system AOS**  
**20GN**

Electrolux OC6204 OC6212



## Wash units

**310978**



Manifold for oven washing system AOS  
20GN 1/1 [Kit]

Electrolux 0C4312 0C5368

**436365**



Blue cap for tanks Ø 46 mm

Electrolux 0C1151

**310980**



Manifold for oven washing system AOS  
20 GN 2/1 [Kit]

Electrolux 0C4322 0C4328 0C5369 0C5370

**436367**



Removable rack blue  
dim. 113x23x50 mm

Electrolux 0C1153

**436340**



Manifold Ø 12 mm  
L=135 mm

Electrolux 0C1119

**436368**



Removable rack red  
dim. 113x23x50 mm

Electrolux 0C1154

**427880**



Cap cover Ø 50,5 mm

Electrolux 0E3702 0KB704

**615541**



Fixing plate Ø 110 mm

Electrolux 0C3443

**436366**



Red cap for tanks Ø 46 mm

Electrolux 0C1152

**615540**



Gasket Ø 108x7 mm

Electrolux 0C3442 0C7033

## Wash units

**367113**



**Water pipe Ø 10,30 mm**  
Ltot=1200 mm

Electrolux 0C6050

**433931**



**Oven washing jet connection support assembly**  
Ø 7,60x10,40 mm

Electrolux 007009

**440186**



**Pipe humidifier**  
Ø 12 mm L=200 mm

Electrolux 003674

**366666**



**Water pipe Ø 8 mm**  
dim. 170x65 mm

Electrolux 0C4976

**440180**



**Pipe humidifier**

Electrolux 003753

**315473**



**Pipe Ø 8 mm - L=127 mm**  
connection 1/2"

Electrolux 0C4974

**440177**



**Pipe humidifier**

Electrolux 003856

**582129**



**Pipe Ø 12 mm**  
dim. 1070x240x65 mm

Electrolux 0C6047

**584566**



**Steam pipe Ø 10 mm**  
dim. 254x205 mm

Electrolux 0C4978

**311251**



**Pipe humidifier 90°**  
AOS 061-101-201 Lev. C

Electrolux 0C4977

## Wash units

**311250**



**Water hose Ø 8x155 mm**  
thread M18

Electrolux 0C4975

**367491**



**Main pipe**

Electrolux 0C8328

**526447**



**Hose**

Electrolux 006455 0K9696

**442176**



**Hose**

Electrolux 002677

**312713**



**Water pipe Øext. 12 mm**  
with thread M16

Electrolux 0C6031

**526489**



**Hose Ø 10 mm L=610x400 mm**  
connection 9mm thread 14mm

Electrolux 006234

**519471**



**Hose**  
centre distance 365 mm

Electrolux 0C0443

**526380**



**Pipe humidifier 90° AOS 061-101-201**  
stuffing box G14; Øint. 8/ext. 10 mm; inlet hole  
Ø 4,8 mm; dim. 170x205 mm; AOS  
061-101-201 Lev. A e B

Electrolux 007012

**519247**



**Hose**

Electrolux 0C0547

**325054**



**Water pipe 90°**  
Ø10x405 mm; CH 17; M14

Electrolux 0C5543

## Wash units

**414234**



Water pipe

Electrolux 054590

**348158**



Nozzle support with rubber holder Ø 10 mm

Electrolux 002611 0F0076 482674000

**459693**



Water pipe Øint. 8/est. 10 mm  
M14; dim. 205x190 mm

Electrolux 007075

**441414**



Water nozzle

Electrolux 056679 0F0078 0K0277

**433928**



Nozzle support with rubber holder Ø 10 mm

Electrolux 007011

**441413**



Water nozzle

Electrolux 056681 0F0184 0K0276 0K1280

**436324**



Water nozzle  
H=12 mm; CH19

Electrolux 0C1103

**318046**



Nozzle 1/4" F Ø 3,5 mm - 3/8" M

Electrolux 0C4099

**433746**



Water nozzle  
H=12 mm; CH19

Electrolux 0C1039

**366218**



Nozzle ELPIS 1/4" F - 3/8" M CH19  
Ø 10 mm

Electrolux 0C3797

## Wash units

**349440**



**Water nozzle**

Electrolux 053800

**442071**



**Nozzle holder gasket 46x60x2 mm**

Electrolux 002612 0F0079

**434009**



**Nozzle Ø 4x70 mm**

Electrolux 006991 0KF109

**433927**



**Nozzle holder gasket 36x54,5x3 mm**

Electrolux 007013

**459372**



**Wash arm support**

Electrolux 007024 007025 0C4197 0C5103  
0C5372

**436341**



**Nut with ogive Ø int 6 mm**

Electrolux 0C1120

**311849**



**Pipe fitting M18  
conic with nut 27 mm**

Electrolux 0C6228

## Level Gauges

**417940**



**Level electrode**

L1=69 mm; L2=129 mm

Electrolux 0H2494 0K8161 0KE502 482219100

**418078**



**Glass cylinder Ø 47x54x83 mm**

Electrolux 0H2445 0K8047

## Hinges

**308327**



**Nut hexagonal M5 L=12 mm - INOX**

Electrolux 0C1280 0TH120

**526627**



**Door pin TE M5x15 Ltot. 21 mm**

Electrolux 003118

**415749**



**Pin Ø 11,5xhtot. 30 mm**  
M8; CH19

Electrolux 0F0028 0K8374

**415775**



**Bolt for hinge**

Electrolux 053765

**441587**



**Bolt for hinge**

Electrolux 053339 0KE988

**437908**



**Corrugated disc for hinge Ø 12,4x28 mm**

Electrolux 002653 0F0153 0G1988 0K8484

## Hinges

**348109**



Upper hinge with bolt

Electrolux 002876 0F0152 0KE543 0T3934

**442135**



Upper hinge with bolt

Electrolux 003686

**348101**



Lower hinge with bolt

Electrolux 002875 0F0151 0KE542 0K1114

**442134**



Lower hinge with bolt

Electrolux 003687

**412415**



Lower hinge with bolt

Electrolux 0F0026 0K8581 0KE575

**442127**



Upper hinge with bolt

Electrolux 003720

**442182**



Upper hinge with bolt

Electrolux 002651

**442126**



Lower hinge with bolt

Electrolux 003721

**442181**



Lower hinge with bolt

Electrolux 002652

**442110**



Lower hinge with bolt

Electrolux 003991



## Hinges

**412319**



**Upper hinge with bolt**

Electrolux 053763 055130 055316

**527008**



**Lower door hinge FCF/6**  
dim. 125x50 mm

Electrolux 0C6521

**434001**



**Hinge with bolt Ø 4,7x17 mm**  
dim. 16x35,4 mm; holes Ø 5 mm

Electrolux 007007

**611566**



**Lower hinge**  
dim. 200x90x48 mm

Electrolux 0C2483

**366387**



**Upper hinge with pin Ø 12 mm**

Electrolux 0C4234

**441918**



**Lower hinge**

Electrolux 005694

**310535**



**Lower hinge**  
dim. 60x42x68 mm Only for model after year 2016

Electrolux 0C4235 0C9574

**442152**



**Platelet**  
70x14x1,5 mm - hole Ø 3,6 mm

Electrolux 002877 0F0149 0KE574 0K1115

**366600**



**Plate 70x70x2 mm**  
holes Ø 8 mm

Electrolux 0C4857

**442041**



**Upper hinge**  
125x49x4 mm

Electrolux 005041

## Thermometers

**316127**



**Thermometer 0-120°C 1A 250V [KIT]**

bulb 8.5x20 mm, cable 1500 mm, with flange fix

Electrolux 0K1133 0KU570 0KZQ05 ST0984700

**435404**



**Thermometer Ø 52mm 50÷350°C**

coated capillary 1600 mm; bulb Ø 6x18 mm

Electrolux 053808 056383

**419731**



**Thermometer 0-120°C**

bulb Ø 8,5x34 mm; capillary 1500 mm; capacity 10A 250V; for Hot cupboard

Electrolux 0K7631 0KB607 481644200

**430234**



**Digital thermostat EWPC800/H**

220V; input: probe PT100; relay output 8(3)A 250V; 72x72 mm; throu Ø 61 mm

Electrolux 0H2420 0K7692 0K7998 0KP206

## Manometers, Safety Valves

**427586**



**Pressure sensor 412 BR**

cable 560 mm - connection 1/8"NPT

Electrolux 0G2935 0G7327 0H9972 0K5405

**435357**



**Manometer Ø 50 mm 0÷6 bar**

connection G1/4"

Electrolux 058941

## Manometers, Safety Valves

**425056**



**Manometer 0-2,5 bar**  
Ø 62 mm - connection Ø 1/4"

Electrolux 0G7380 0H9970 0K2991 0K5402

## Small Mechanical Parts

**416014**



**Radial snap ring INOX Øext. 13,8x0,9 mm**

Electrolux 061303 0C6421

**337594**



**Hexagonal nut M6 - H=11 mm INOX**  
CH19

Electrolux 053774

**434020**



**Oven glass shock absorber Ø 25xh17 mm**

Electrolux 006976

**349283**



**Hexagonal nut M8 - INOX**  
h=6,4 mm

Electrolux 027019 0W1S1T 0W5134 12010210

**322127**



**Bush Ø 10x15x14 mm**

Electrolux 0C4467

**441974**



**Hexagonal nut M14x1 - H=4 mm**  
CH22

Electrolux 006245 0K9627

**418258**



**Wedge 6x6x36 mm**

Electrolux 0KU082

**336328**



**Hexagonal nut 3/8"**

Electrolux 027414 0H2611 0H8269 0K9016

## Small Mechanical Parts

**438367**



Hexagonal nut M15x1 mm

Electrolux 041155 0G0841

**436305**



Hexagonal nut 3/4" Ø 16 mm

Electrolux 0C1058 516847000

**442173**



Hexagonal nut M15 - H=19 mm  
hole Ø 8,6 mm

Electrolux 002702 0F0157

**436308**



Hexagonal nut 1 1/4 - brass  
Ø 33,6 mm; H=12 mm; CH46

Electrolux 0C1062

**322131**



Hexagonal nut M16x1,5 - H=6 mm

Electrolux 0C4202

**438581**



Knurled nut M6 Ø 20 mm H=7,5 mm

Electrolux 054569 056150 0C1270

**441466**



Hexagonal nut M35x1,5 mm - H=14 mm  
CH46

Electrolux 058907

**337670**



Spacer Ø 2,5x8xh29/32 mm

Electrolux 055134 055443

**441532**



Hexagonal nut 1/2" CH26

Electrolux 051263 0F0147

**440291**



Spacer  
Ø 5,60x16x2.5 mm

Electrolux 003225

## Small Mechanical Parts

**438471**



Spacer Ø 8xh5 mm

Electrolux 055435

**337668**



Spacer M6 Htot=44,5 mm

Electrolux 055340

**438467**



Spacer Ø 8xh12 mm

Electrolux 055347 0C5234 0K3038

**310306**



Double wire clamp Ø 7,8÷8,3 mm

Electrolux 0C7120 0E5993 0L0082 0L0815

**439633**



Support

Electrolux 054868

**438480**



Hose clamp Ø 12÷22/9 mm - INOX

Electrolux 007019 046797 048126 049888  
065121 0835823600 0C5567 0G2046  
0KF382 0KX145

**442101**



Spacer

Electrolux 004390 0K2298

**441699**



Hose clamp Ø 25÷40/9 mm - INOX

Electrolux 047578 049446 049772 070318  
0K0198 0K8980 0KB300 0KG600  
0L2280 0L2728

**442060**



Fixing grid support pin

Electrolux 002958 0KE768

**526377**



Hose clamp CT 21÷44/14,3 mm

Electrolux 007027 0C5549 0C9201

## Small Mechanical Parts

**441517**



Pipe bracket

Electrolux 054395

**415786**



Coupling ring Ø 36,3x38/40,5x20 mm

Electrolux 055324

**321940**



Snap-on hose clamp Ø 16,5÷18xh8 mm

Electrolux 0C5385

**589449**



Bracket 27x35x25 mm

Electrolux 0KZ989 ST0342800

**441875**



Grub screw M4x6 mm

Electrolux 046258

**440163**



Vapours exhaust tub  
Ø 47,5 mm; H= 77 mm

Electrolux 005499

**441672**



Vent valve vapour for FCV

Electrolux 005364 0KD453

**324148**



Support  
dim. 370x100x5 mm; Ø5.8 mm

Electrolux 0C5426

**438672**



Plug R700

Electrolux 025255 025256 054367

**441614**



Pin

Electrolux 052126

## Small Mechanical Parts

**427877**



**Plug**

Electrolux 0E3694 0KB683

**323352**



**Ring [Kit]**

Electrolux 0C6223 0C6376 0C6377

**428144**



**Reinforcement angle for oven door gasket**  
Juno serie 56

Electrolux 0H6888 0K2603

**436273**



**Nut**

Electrolux 0K8683 0K8943 0W1777

**340033**



**Mechanical joint Ø 25.5 mm**

Electrolux 033749

**323348**



**Closing clamp**  
dim. 29x35 mm

Electrolux 0C6222

**426835**



**Protective tube L=179 mm (130+2+47)**

Electrolux 0K4359

**344813**



**Stopping**  
dim. 24x20x5 mm

Electrolux 0F0066

**442064**



**Extension Ø 88mm H= 120 mm**

Electrolux 002630

**366638**



**Buffer Ø 60 mm**

Electrolux 0C4965



## Small Mechanical Parts

**367196**



Tank support [Kit]

Electrolux 0C6467

**440828**



Clamping washer Ø 26 mm

Electrolux 075791

**415774**



Nut Øint 5 mm  
Htot 11 mm

Electrolux 053767

**308243**



Tooth lock washer Ø 5,3x10 mm

Electrolux 0Q0008 0TH044

**347080**



Pin M8 Htot=38 mm INOX

Electrolux 003346

**200028**



Tooth lock washer M10 Ø 10,5x18 mm  
DIN 6798A

Electrolux 0KS502

**322206**



Pin

Electrolux 0C6201

**612770**



Flat washer Ø 5,5x10x1 mm - INOX

Electrolux 0E1119 0K8946 0Q0012

**441955**



Pin Ø 3/5/10xh7,7 mm

Electrolux 026187

**432395**



Flat washer Ø 5,3x15x1,2 mm

Electrolux 0C5312 0TH039

## Small Mechanical Parts

**432605**



Flat washer M6 Ø 6,4x11,6x1,6 mm INOX

Electrolux 0K8947 0U2043 0W1TR8 734115309

**442170**



Conic washer Ø 22x30x1 mm INOX

Electrolux 002727

**537878**



Flat washer Ø 8,5x24x2 mm INOX

Electrolux 0W6091

**337573**



Pin M4x1 L= 20 mm

Electrolux 053341 053681 054938

**419639**



Flat washer Ø 8,6x23,6x2 mm

Electrolux 0K8949

**413274**



Roll pin Ø 3x12 mm

Electrolux 052061 060920 0H6043 0K8575

**323377**



Flat washer Ø 10,8x20 mm

Electrolux 0E1859 0K8950 0W0ZWX 0W10G7  
0W1D96 0W1JNL

**438356**



Hexagon screw TE M5x6 mm CH13

Electrolux 053759 0F0154

**440340**



Flat washer Ø 16x22,5x1,2 mm

Electrolux 002700 0F0148

**432356**



Hexagonal head screw TE M5x14 mm - INOX

Electrolux 0C5311 0C7119 0D6830 0TT030

## Small Mechanical Parts

**432850**



**Flat-headed bolts M5x28 mm**  
 Ø 9 mm - Ltot 21.5 mm

**Electrolux** 0KJ443

---

**432664**



**Flat-headed bolts M6x46 mm**

**Electrolux** 0K8911 0T0621

---

**415425**



**Screw M5x8 mm**  
 L= 13 mm, head Ø 20 mm

**Electrolux** 0F0198 0K8483

---

**427879**



**Knurled screws M6x10 mm Ø 16x15.5 mm**

**Electrolux** 0KB703

---

**335842**



**Sheet metal screws M4x9 INOX**

**Electrolux** 0H2594 0H2595 0K8930 0K8931  
 0KD931

---

## Bearings

**442109**



Bearing Ø 12 mm H=12 mm

Electrolux 003994 0G2001 0H6996

## Lockings & handles

**700383**



Door closing assy  
L=1210 mm

Electrolux 0C4119

**526535**



Door closing assy  
L=1265 mm

Electrolux 004099

**435403**



Door closing assy  
L=700 mm

Electrolux 056411

**441834**



Door closing assy  
L=1310 mm

Electrolux 005342

**518861**



Door closing assy  
L=1009 mm

Electrolux 0F0145 0K8577 490160000

**524092**



Door closing assy  
L=1350 mm

Electrolux 058204

**526488**



Door closing assy  
L= 1135 mm

Electrolux 006246

## Lockings & handles

**442121**



Central locking mechanism (left side)

Electrolux 003824 0K2718 0K8570 0K9189

**442105**



Base for closing hook

**420724**



Locking mechanism

**416130**



Locking mechanism L=175 mm

**413274**



Roll pin Ø 3x12 mm

**416041**



Central locking mechanism (right side)

Electrolux 0H6928 0K2719 0KS851

**442105**



Base for closing hook

**420724**



Locking mechanism

**416130**



Locking mechanism L=175 mm

**420724**



Locking mechanism  
dim. 42x148x29 mm

Electrolux 003822 0H6727 0K2246

**442105**



Base for closing hook

**422261**



Door catch

**416130**



Locking mechanism L=175 mm

Electrolux 056551 0K2871 0KJ908

## Lockings & handles

**416039**



**Central locking mechanism**  
dim. 26x170x22 mm

Electrolux 056550 0K3031

**700385**



**Connection rod L=345 mm**  
Ø 8x10 mm

Electrolux 0C4309

**442105**



**Base for closing hook**

Electrolux 004104 0G1982

**526680**



**Connection rod L=400 mm**  
Ø 8x10 mm

Electrolux 003823

**339392**



**Connection rod L=65,50 mm**  
Ø 8x10 mm

Electrolux 0K8572 490159300

**440057**



**Connection rod L=420mm**  
Ø 8x10 mm

Electrolux 005038

**339385**



**Connection rod L=113 mm**  
Ø 8x10 mm

Electrolux 056570 0K2955

**700384**



**Connection rod L=435 mm**  
Ø 8x10 mm

Electrolux 0C4310

**339384**



**Connection rod L=113 mm**  
Ø 8x10 mm

Electrolux 056552 0K2914

**339407**



**Connection rod L=440 mm**  
Ø 8x10 mm

Electrolux 003825 0J0002 0KD509

## Lockings & handles

**440058**



**Connection rod L=464 mm**  
Ø 8x10 mm

Electrolux 005037

**412322**



**Stopping**

Electrolux 056414

**339393**



**Connection rod L=465,5 mm**  
Ø 8x10 mm

Electrolux 0K8571 490159200

**519469**



**Door handle pin till SN. 330100..**  
Ø 19 mm

Electrolux 0C0447

**410021**



**Door magnet Ø 32xh6mm**  
M6x16 mm

Electrolux 058692 059197 0A2119 0K2982

**442124**



**Bolt for door handle**  
Ø 12,2x22x70,5 mm

Electrolux 003747

**584213**



**Door magnet**  
dim. 28x28x74 mm

Electrolux 0KZN32

**337429**



**Bolt for door handle**  
L=58,5 mm

Electrolux 053756

**584214**



**Magnet support**  
dim. 80x40,5x10 mm

Electrolux 0KZ203

**526692**



**Bolt for door handle**  
L=84 mm

Electrolux 003748



## Lockings & handles

**459788**



**Door handle pin as of SN. 331100..**  
Ø 19 mm; Ltot.=114 mm

Electrolux 0C9546

**416127**



**Oven door handle complete**  
mounting distance 150 mm

Electrolux 002278 003359

**427945**



**Handle frame**

Electrolux 0H6797 0K2347

**420720**



**Oven door handle complete**  
dim. 172x30 mm

Electrolux 005107 0H6459 0K1669

**433609**



**Oven door handle**  
black handle; dim. 138x29 mm

Electrolux 078011 0K7566 0KB600 478075500

**417370**



**Oven door handle complete**

Electrolux 0H2440 0K8038 482085700

**355459**



**Oven door handle with chrome lock**  
mounting distance 133 mm, with catch

Electrolux 0H2329 0K7679 481687000

**316180**



**Oven door handle with chrome lock**  
distance between lock bolts 133/117mm, with catch

Electrolux 093081

**414178**



**Oven door handle complete**

Electrolux 0K6864 0KJ423 466015400

**414307**



**Oven door handle without lock**  
Oven mod. AR 170/340

Electrolux 0H2207 0K7348 477724600

## Lockings & handles

**427897**



Oven door handle MINICOMBI

Electrolux OE3679 OKB660

**310680**



Oven door handle AOSQ 06-10

Electrolux OC4090

**316594**



Oven door handle Ø 34x202 mm  
shaft 8x8 mm

Electrolux OC6568

**442121**



Central locking mechanism (left side)

**324343**



Bushing Øint. 12 mm

**414197**



Oven door handle - right side  
handle L=170 mm - flange 80x69 mm - 4 holes  
Ø 6,5 mm

Electrolux OH2425 OH2519 OK8017 OK8322  
OT4381 482068400 482487800

**318322**



Oven door handle AOS  
L= 200 mm

Electrolux OC6569

**586363**



Door locking mechanism AOSQ 6-10 [Kit] -  
from wk 9/2016

**586363**



Door locking mechanism AOSQ 6-10 [Kit] -  
from wk 9/2016

**310682**



Cap for oven door handle AOSQ 06-10

Electrolux OC4091

**535545**



Oven door handle  
dim. 190x80x60 mm

Electrolux OC1616

**535565**



Door locking mechanism

**535564**



Catch AOS 20 GN 1/1 - 2/1

**582446**



Oven door handle [Kit]  
FCF/F-E 20

Electrolux OCA138

## Lockings & handles

**420722**



Oven door handle complete  
center distance holes 150 mm

Electrolux 0H6729

**325671**



Oven door handle from SN. 331100..

Electrolux 0C9549

**316292**



Oven door handle  
shaft 8x8 mm

Electrolux 0C4308 0C8719 0C9149

**519469**



Door handle pin till SN. 330100..

**518872**



Oven door handle [Kit] till SN. 330100..

**442121**



Central locking mechanism (left side)

**459788**



Door handle pin as of SN. 331100..

**324343**



Bushing Øint. 12 mm

**434018**



Oven door handle

**316481**



Oven door handle FCZ

Electrolux 0C6572

Electrolux 006978

**586363**



Door locking mechanism AOSQ 6-10 [Kit] -  
from wk 9/2016

**535565**



Door locking mechanism

**535564**



Catch AOS 20 GN 1/1 - 2/1

## Lockings & handles

**518927**



Oven door handle 220 mm

Electrolux 002717 002722 0A5320 0F0029

**437907**



Door closure

**411401**



Oven door handle  
in inox Ø 25 mm

Electrolux 055057

**412091**



Push button

**337429**



Bolt for door handle

**518872**



Oven door handle [Kit] till SN. 330100..

Electrolux 003090 003091 0A5365 0C9988  
0K8473 0K9180 0K9181

**519469**



Door handle pin till SN. 330100..

**459788**



Door handle pin as of SN. 331100..

**432356**



Hexagonal head screw TE M5x14 mm - INOX

**325671**



Oven door handle from SN. 331100..

**308243**



Tooth lock washer Ø 5,3x10 mm

**427890**



Oven door handle MINICOMBI FCV 5 GN  
1/2

Electrolux 0E3709 0KB730

## Lockings & handles

**435460**



Oven door handle Ø 26x170 mm

Electrolux 003734

**442138**



Oven door handle

Electrolux 003683

**532510**



Oven door handle  
dim. 250x125x45

Electrolux 0C1588

**586363**



Door locking mechanism AOSQ 6-10 [Kit]  
- from wk 9/2016  
dim. 126x46 mm with 4 locking holes

Electrolux 0C4089\_ 0C4477\_ 0CA733\_ 0CA757\_

**530734**



Catch nut for AOS M8

**429244**



Door catch 1-stage

**310257**



Door locking mechanism AOSQ 6-10 till  
wk 8/2016  
dim. 140x46 mm with 4 locking holes

Electrolux 0C4089 0C4477

**323912**



Torsion spring Ø 10,7x14x10 mm

**315438**



Spring for door closing device

**315438**



Spring for door closing device  
dim. 53x27,5 mm; wire Ø 3 mm

Electrolux 0C6978

**535565**



Door locking mechanism

Electrolux 007089 0C1645

**535564**



Catch AOS 20 GN 1/1 - 2/1

**535545**



Oven door handle

**434018**



Oven door handle

## Lockings & handles

**532506**



Door locking mechanism FCS

Electrolux OC1581

**415455**



Door catch L=22,5 - M5x23 mm - FCV

Electrolux 002086 OKE741

**434019**



Door locking mechanism  
dim. 65x76x60 mm

Electrolux 006977

**442137**



Door catch L=34 mm - M6x25- NCF/ZCF

Electrolux 003684

**437908**



Corrugated disc for hinge Ø 12,4x28 mm

**415405**



Door catch L=37 mm - M6x25 - FCF

Electrolux 053766

**437907**



Door closure

Electrolux 002647 OF0175 OK1663 OK8474  
OKZ752

**442129**



Door catch L=45 mm - M6x25 - JCF

Electrolux 003712

**518927**



Oven door handle 220 mm

**440926**



Support

**441301**



Door catch

Electrolux 054854

**429244**



Door catch 1-stage  
thread M8 - Ltot 51 mm

Electrolux OC4092

## Lockings & handles

**532508**



**Catch**

Electrolux 0C1584

**422261**



**Door catch**  
dim. 32x40x44 mm

Electrolux 005519 0H6728 0K1951 0K2247

**337426**



**Catch**

Electrolux 054562

**416040**



**Door catch - FCV**  
dim. 50x48x26 mm; bushing Ø 10x14 mm

Electrolux 056571 0K2873

**530734**



**Catch nut for AOS M8**

Electrolux 0C4238 0CA756

**416042**



**Door catch - C20/FCE**  
dim. 50x48x26 mm; bushing Ø 14x14 mm

Electrolux 0F0062 0K8573

**616002**



**Catch**  
dim. 48,5x32,3x57,5 mm

Electrolux 0C3802 0C4307

**414649**



**Door catch**

Electrolux 002279 003354 056581

**435543**



**Door catch**  
dim. 69x20x39 mm

Electrolux 002650 005176 0F0173 0H6568  
0K1953 0KL740

**535564**



**Catch AOS 20 GN 1/1 - 2/1**  
dim. 71x69x20 mm

Electrolux 0C1644



## Lockings & handles

**433663**



**Catch**

Electrolux 007092

**410069**



**Latch with catch, galvanized**  
holes center distance 48 mm

Electrolux 057414

**536211**



**Catch**  
dim. 69x70 mm

Electrolux 0C2215

**319788**



**Catch nut**

Electrolux 0L1528

**434015**



**Catch AOS**  
dim. 71x69x12 mm

Electrolux 006981

**440926**



**Support**

Electrolux 0C0100

**414407**



**Door catch**  
H=56 mm

Electrolux 0K8323 0KE527 0KG194 482487801

**416080**



**Flat washer**

Electrolux 055475 056416 0K2973

**532509**



**Catch holder**  
dim. 60x26x8 mm

Electrolux 0C1583

**519470**



**Fixing plate**

Electrolux 0C0446

## Lockings & handles

**345105**



**Flange for door handle**  
40x95xh28,5 mm

Electrolux 0J0006 0K1618 0K1619

**441509**



**Bushing for door mechanism Ø int. 4mm**

Electrolux 054561

**442106**



**Flange for door handle**  
40x95xh15 mm

Electrolux 004098

**442136**



**Lock nut**

Electrolux 003685

**412423**



**Plaque dim. 60x40x13 mm**

Electrolux 053768

**526306**



**Support**

Electrolux 006939

**324343**



**Bushing Øint. 12 mm**  
shaft Ø 5x4 mm

Electrolux 0C8627

**526542**



**Gasket for door handle**  
dim. 40x35x1 mm

Electrolux 003990

**442084**



**Catch for glass door**

Electrolux 004838

**583220**



**Thickness**

Electrolux 0C4122

**440718**



**Oven door glass 660x1420x6 mm**

## Lockings & handles

**529530**



Support Ø 49.5x40 mm  
hole Ø 5 mm

Electrolux 0C1457

**529531**



Support Ø 46x40 mm

Electrolux 0C1458

**526671**



Button guide Ø 20x35 mm

Electrolux 005624

**510911**



Guide Ø 32/46 int. Ø 22,5/26 H=40 mm

Electrolux 0A2413

**307357**



Door lock device

Electrolux 091228

**435416**



Push button

Electrolux 053992

**412091**



Push button

Electrolux 053761

**435416**



Push button

**415781**



Lock nut Ø int. 4mm

Electrolux 054563

**440055**



Shim 33x40x2 mm

Electrolux 005044

**526813**



Door catch 2-stage

Electrolux 0C6010 922265

## Knobs

**440613**



**Knob kit - Zoppas**  
for thermostat, energy regulator and minutes counter

Electrolux 006948 054594 054595 055434

**412122**



**Knob Ø 37 mm**  
D-shaft hole Ø 9x6 mm

Electrolux 0F0005 0K2339 0K8470

**432409**



**Knob Ø 42 mm**  
D-shaft hole Ø 6x4,6 mm

Electrolux 0E3019 0H2189 0H2338 0K7442  
0KC012

**438506**



**Knob Ø 55 mm 0-120 °C**  
D-shaft hole Ø 6x9 mm

Electrolux 003844 075543 0C3022

**412259**



**Knob Ø 55 mm**  
D-shaft hole Ø 6x4,6 mm

Electrolux 055026 056222

**526860**



**Knob Ø 61 mm**  
D shaft hole Ø 6x4,6 mm

Electrolux 0C6076

**412281**



**Knob Ø 55 mm**  
D-shaft hole Ø 8x6.5 mm

Electrolux 053815 056198

**435461**



**Knob Ø 55 mm**  
D-shaft hole Ø 8x6 mm

Electrolux 003743

**412100**



**Knob Ø 55 mm**  
D-shaft hole Ø 8x6 mm

Electrolux 053813 054415 056197

**437816**



**Knob Ø 55.3 mm**  
D-shaft hole Ø 6x4.6 mm

Electrolux 002672 0KM344 0U0821

## Knobs

**435950**



**Knob Ø 55 mm**  
D-shaft hole 6,3x4,7 mm

Electrolux 0A5324

**310569**



**Knob Ø 60 mm**  
D-shaft hole Ø 6,3x4,2 mm

Electrolux 0C3221

**438491**



**Knob Ø 55 mm**  
D-shaft hole Ø 6x4.5 mm

Electrolux 053814 055364 056128

**412226**



**Knob**

Electrolux 0F0040 0K2134 0K8469

**318187**



**Knob Ø 56 mm**  
D-shaft hole Ø 6x4,5 mm

Electrolux 003762 003764 0H6796

**323630**



**Knob Ø 60 mm**  
D-shaft hole Ø 6x4,6 mm

Electrolux 0C4875 0C5600

**532503**



**Knob Ø 52 mm**  
D-shaft hole Ø 6x4.5 mm

Electrolux 0C1587 0TTP54 0TTP55

**533085**



**Knob Ø 55 mm**  
D-shaft hole Ø 6x4.5 mm

Electrolux 002726 0C1769

**437910**



**Knob Ø 55 mm**  
D-shaft hole Ø 6x4.5 mm

Electrolux 002671 0U0796

**310571**



**Knob Ø 60 mm**  
D-shaft hole Ø 6x4,3 mm

Electrolux 007044

## Knobs

**442179**



**Bushing for knob**  
Ø 15,6x21,7/31xh14,5 mm

Electrolux 002662

**432370**



**Knob spring (10 pcs)**  
for knob with hole Ø 8 mm

Electrolux 025245 058445 0G5727 0M2312  
0U1421

## Glasses

**584187**



**Oven door glass 421x894x6 mm**  
external

Electrolux 0C6559

**433667**



**Inner glass**

Electrolux 007087

**583917**



**Oven door glass 424x895x6 mm**

Electrolux 0C4376 0C4471 0C8736

**440718**



**Oven door glass 660x1420x6 mm**

Electrolux 003087 005039 005501 0K2788

**311103**



**Oven door glass 830x677x6 mm**  
AOS 102

Electrolux 0C4504

**442084**



**Catch for glass door**

## Glasses

**316023**



**Glass 465x595 mm  
with frame**

Electrolux 0C8012

**434022**



**Inner glass 500x845 mm**

Electrolux 007061

**435447**



**Glass 483x641 mm**

Electrolux 002827 0C1262

**535571**



**Glass 530x530x6 mm**

Electrolux 0C1650

**526765**



**Glass 490x350x6 mm**

Electrolux 005346

**349868**



**Glass 575x442x6 mm**

Electrolux 0H2489 0K8157

 
**323909**



**Inner glass 495x580x6 mm**

Electrolux 0C6395

**433982**

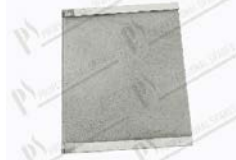

**Inner glass 595x495 mm**

Electrolux 006974

**526714**



**Oven door glass 498x357x6 mm**

Electrolux 003681 003702

**437905**



**Glass 624x519x6 mm**

Electrolux 002644 002729 003757

**526715**



**Inner door 690x504 mm**

**349836**



**Door window seals gasket 640x2000 mm**



## Glasses

**533042**



Inner glass 635x485x6 mm

Electrolux 0C1651

**436417**



Oven door glass 680x846 mm  
with connection for shaft hinge

Electrolux 0C1206

**526575**



Oven door glass 640x482x6 mm

Electrolux 003542

**585351**



Oven door glass 644x421x6 mm

Electrolux 0C6558

**438707**



Oven door glass 671x755x6 mm

Electrolux 002646 0C0942

**612444**



Oven door glass 680x420x5 mm  
(external)

Electrolux 006975 0C3250

**442141**



Glass 671x755 mm

Electrolux 003541

**531627**



Glass 756x667x6 mm

Electrolux 0C1502 0C3199

**310651**



Oven door glass 643x420x6 mm

Electrolux 0C4942

**349788**



Oven door glass 770x674x41 mm

Electrolux 006047 0K2789

**583890**



Profilo L=643 mm

## Glasses

**531710**



Glass 560x802x6 mm

Electrolux 0C1506

**615786**



Oven door glass 1577x503x5 mm

Electrolux 007088 0C3621

**312619**



Inner glass 830x495 mm

Electrolux 0C4281 0C4470

**459802**



Oven door glass 1580x65x6 mm

Electrolux 0C4488

**322207**



Oven door glass 895x420 mm

Electrolux 0C4943

**582602**



Oven door glass 1373x565x6 mm

Electrolux 0C4118 0C5083 0C9801

**322213**



Profile L=895x20 mm

**436396**



Glass 1380x715x7 mm  
with hinge

Electrolux 0C1185

**612508**



Oven door glass 930x420x5 mm

Electrolux 007062 0C3297

**582536**



Oven door glass 1575x655  
Ext: One 202

Electrolux 0C4946

**583757**



Oven door glass 505x1580x6 mm

Electrolux 0C4635

## Glasses

**533016**



**Glass 1427x659 mm**  
FCS201G4

Electrolux 0C1603 0C3815

**459803**



**Profile L=1390 mm**

Electrolux 0C4663

**312778**



**Glass 715x1375 mm**

Electrolux 0C4128 0C4870

**336807**



**Support**

Electrolux 006257

**433749**



**Fixing profile**

Electrolux 007068

**335608**



**Holder for glass panel**  
sp. 6 mm

Electrolux 0H2490 0K8158 0KE500

**433747**



**Fixing profile**

Electrolux 007067

**583890**



**Profilo L=643 mm**  
dim. 643x20,5x8,5 mm; M5

Electrolux 0C4236 0C4478

**322213**



**Profile L=895x20 mm**

Electrolux 0C4108 0C4476

## Boilers

**512012**



**Boiler electric AOS 6 e 10 GN 1/1 from SN 917..**  
AOS6 electric from S/n 917...

**Electrolux** 0C5024 0C5848 0C5851 0C9662

**437904**



**Gasket Ø 17x74x11 mm**

**437817**



**Descaling filler cap**

**315409**



**Boiler insulation ELT ONE 061-101**

**548069**



**Boiler gas assy AOS 061 [Kit]**  
6 GN1/1 - with insulation

**Electrolux** 0C4257 0C5377 0C5519 0C7025  
0C9880 0CA291

**437904**



**Gasket Ø 17x74x11 mm**

**437817**



**Descaling filler cap**

**432395**



**Flat washer Ø 5,3x15x1,2 mm**

**432356**



**Hexagonal head screw TE M5x14 mm - INOX**

**433804**



**Boiler electric AOS 6 & 10 GN 1/1 till a SN 916**  
Size 480 x 195 x 120 mm

**Electrolux** 007028 0C4139 0C5374

## Boilers

**582188**



**Boiler electric AOS 10 2/1 GN e 20 1/1 GN [Kit]**  
dim. 620x130x300 mm; hose EPDM Ø 10x17X2000 mm - blue; hose clamp Ø 16,5/18x8 mm

Electrolux 0C5849 0C9664

**582189**



**Boiler insulation**

**321940**



**Snap-on hose clamp Ø 16,5÷18x8 mm**

**433588**



**Boiler AOS 101GA 10 GN 1/1**

Electrolux 0C1056

**611632**



**Boiler gas AOS 10 GN 2/1**

Electrolux 0C2567

**321891**



**Boiler AOS E 10 2/1 GN- 20 1/1 GN [Kit] x round heating elem**  
dim. 600x275x125 mm

Electrolux 007100 0C4351 0C5375 0C5852

**437817**



**Descaling filler cap**

**436413**



**Boiler insulation 585x480x7,5 mm**

**312677**



**Boiler assy AOS 101/102/201 [KIT]**  
6 GN2/1; 10 GN1/1 2/1; 20 GN 1/1 - insulation included hose Ø 9x11 mm L=1200 mm

Electrolux 0C4288 0C5520 0C7026 0C9668

**437817**



**Descaling filler cap**

**312490**



**Boiler gas insulation AOS 101/102/201**

**536208**



**Boiler assy AOS 20 GN 2/1**  
Dimensions 1040x600x160 mm

Electrolux 0C2213

**615902**



**Boiler insulation AOS LW20**

## Boilers

**311063**



**Gas boiler assy AOS 20 GN2/1**  
1150x620x240 mm - with insulation

Electrolux 0C4330 0C5521 0C7027 0C9669  
0TTP92

**312487**



**Burner gasket 105x130x3 mm**

**311066**



**Boiler gas insulation AOS 20 GN2/1**

**343461**



**Boiler FCV 10 GN 1/1 e 10 GN 2/1**  
dim. 250x610x105 mm - 14 lt

Electrolux 002693 003945 0C5344 0K0675

**440742**



**Boiler 14 lt [KIT] FCV 10 GN 1/1 e 10 GN 2/1**  
with 9 lt boiler; included with boiler 343461 +  
kit adaptation

Electrolux 003855

**427884**



**Steam generator kit FCV 3 GN 1/2**  
dim.250x25x25 mm

Electrolux 0E3701 0E3710 0KB717 0KD922

**343531**



**Boiler electric FCV 6 GN 1/1**

Electrolux 005030

**343356**



**Boiler FCV 6 GN 1/1**

Electrolux 005763

## Boilers

**343469**



**Boiler FCS 10 GN 1/1 e 10 GN 2/1**  
dim. 700x365x190 mm; with piping

Electrolux 002631 0C5335 0K0677 0KD475  
0KD525 0KD599

**526321**



**Boiler insulation 120x280mm**

**437817**



**Descaling filler cap**

**435554**



**Insulating gasket 268x114x3 mm**

**343370**



 
**Deflector L=512 mm**

**318717**



**Boiler insulation 640x800mm**

**441838**

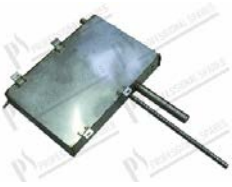

**Boiler electric FCV 20 GN 1/1 e 20 GN 2/1**

Electrolux 005234 0K0680

**343373**



**Boiler CS7**  
dim. 305x192x604 mm

Electrolux 0F0009 0K8377 482536800

**437817**



**Descaling filler cap**

**343349**



**Boiler CS20**  
dim. 605x400x120 mm

Electrolux 0F0048 0K8455

**611634**



**Burner gasket AOS**

Electrolux 0C2569

**433745**



**Gasket**  
Ø int. 70x2,5 mm - hole Ø 7 mm

Electrolux 0C1043

**433750**



**Gasket**  
Ø 43x87x3 mm

Electrolux 0C1077



## Boilers

**412574**



**Gasket Ø 68x88x3 mm**

Electrolux OK2100

**441915**



**Gasket**  
est. 115x280 mm int. 72x235mm

Electrolux 005769

**312487**



**Burner gasket 105x130x3 mm**  
hole Ø 66.5 mm

Electrolux 0C4101

**320250**



**Gasket 115x70x4 mm**

Electrolux 0C4133 0CA402

**612935**



**Gasket**

Electrolux 0DF005

**433584**



**Burner gasket 124x130 mm**

Electrolux 0C1064

**615969**



**Gasket for chimney**  
dim. 230x140x5 mm

Electrolux 0C3777

**533033**



**Gasket**  
dim. 130x125 - Ø 106 mm

Electrolux 0C1628

**441916**



**Gasket**  
ext. 165x120x2 mm int. 124x80x2 mm

Electrolux 005768

**311061**



**Gasket**  
240x100x3 mm

Electrolux 0C6060

## Boilers

**611983**



**Burner gasket 250x125x3 mm**

Electrolux 0C2209 0C2812

**312490**



**Boiler gas insulation AOS 101/102/201**

Electrolux 0C4123

**435554**



**Insulating gasket 268x114x3 mm**  
Øint. 80 mm; for boiler

Electrolux 002706 0K1836

**311066**



**Boiler gas insulation AOS 20 GN2/1**

Electrolux 0C4132

**536204**



**Gasket**  
Ø 37,5 - sp. 5 - holes Ø 7

Electrolux 0C2210

**315409**



**Boiler insulation ELT ONE 061-101**

Electrolux 0C5836

**433729**



**Burner gasket Ø 50 mm**  
L=85 mm; holes Ø 6,5 mm

Electrolux 0C1069

**436379**



**Boiler insulation**

Electrolux 0C1166

**582189**



**Boiler insulation**  
1 x 575x280x7 mm, 1 x 595x185x7 mm, 1 x 175x118x7 mm, 1 x 107x85x7 mm

Electrolux 0C5837

**535533**



**Boiler insulation ELT AOS 6 - 10**

Electrolux 0C1590 0C4109

## Boilers

**611662**



**Boiler insulation**

Electrolux 0C2589

**441712**



**Boiler insulation 290x110x3,5 mm**

Electrolux 005756

**615902**



**Boiler insulation AOS LW20**  
8 mm thick

Electrolux 0C3722

**318717**



**Boiler insulation 640x800mm**  
for boiler 343469

Electrolux 006599

**436413**



**Boiler insulation 585x480x7,5 mm**  
260x120x7 mm, 130x118x7 mm

Electrolux 0C1202 0C4352

**436154**



**Boiler insulation 795x640x30 mm**

Electrolux 0C0867

**526520**



**Boiler insulation 1050x80x60 mm**

Electrolux 005878

**536182**



**Double burner Kit**  
for AOS202

Electrolux 0C2190 0C4788 0C6411

**526321**



**Boiler insulation 120x280mm**  
for boiler 343469

Electrolux 006598

**366576**



**Deflector for boiler AOS202 gas**  
flange 240x100 mm

Electrolux 0C4799

## Boilers

**611633**



**Connection pipe Burner-fan**  
flange 90x84 mm; triangular flange 78.4x78.4 mm

Electrolux 0C2568

**440236**



**Hose 90°**  
38x1,0-29x1,5 mm; L=160/125 mm

Electrolux 006114

**321939**



**Flange**  
73x73 mm, Ø 33 mm

Electrolux 0C4821

**310538**



**Chimney**

Electrolux 0C4967

**459402**



**Flange 73x73 mm**

Electrolux 0C6449

**437817**



**Descaling filler cap**  
Ø 18x40 mm

Electrolux 002692 0F0186

**526756**



**Flange**  
Ø 33x74x1 mm - Ø 9 hole

Electrolux 005381 0K8372

**519215**



**Plug 1/8"**  
Ø 9,6 mm; h=10,7 mm

Electrolux 0E2887 0H2614 0K9034 0K9035

**368707**



**Flange 73x73x2 mm**

Electrolux 0C4856

**337543**



**Plug M 14.5 mm**  
aluminum knurled

Electrolux 054546

## Boilers

**343370**



**Deflector L=512 mm**

Electrolux 0C0840

**437975**



**Flange**

Electrolux 0C1324

## Safety groups

**615568**



**Water pressure reducer 3/4"**  
L=72 mm; DN20; 3bar

Electrolux 0C3464

**420381**



**Safety valve 1,3 bar 1/2"**  
inlet Ø 1/2"F - outlet 3/4"F; dim. 75x50 mm

Electrolux 0G0122 0K2987 0K5784 0K5785

**440737**



**Water pressure reducer 1/2"FF**  
setting range 1.0 to 4.0 bar; Maximum inlet pressure 10 bar

Electrolux 002678

**425623**



**Air valve 1/2"**

Electrolux 0G1209 0H6420 0H9729 0H9963  
0K5385 0KG799

## Springs

**435421**



Spring

Electrolux 053757 0F0155

**435324**



Torsion spring  
L=180 mm

Electrolux 054282

**348326**



Spring

Electrolux 003184

**323912**



Torsion spring Ø 10,7x14x10 mm  
wire Ø 1,6 mm

Electrolux 0C8561

**439661**



Spring Ø 15,80 mm L=46 mm  
wire Ø 1,2 mm

Electrolux 053819

**347084**



Tension spring  
wire Ø 1,5 mm

Electrolux 003338

**338815**



Torsion spring L=97 mm  
wire Ø 2,2 mm

Electrolux 054560

 
**338573**



Spring L=176 mm  
wire Ø 2,5 mm

Electrolux 0F0136 0KG188

**440053**

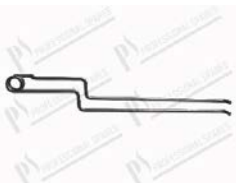

Torsion spring  
L=175 mm

Electrolux 005596

**439581**



Spring Ø 6,2x12,5x0,7mm

Electrolux 057762

## Springs

**438342**



Spring

Electrolux 053342 058444 0G2210

**324917**



Spring  
dim. 105x40x25 mm

Electrolux 0C1044

**438533**



Spring for filter AISI 304

Electrolux 054905 0F0156

**316982**



Spring for glass

Electrolux 0C6051

**435405**



Spring Ø 2x70 mm

Electrolux 055558

**615513**



Spring

Electrolux 0C3423

**433805**



Spring  
Ø 1.8 mm, L= 35.5 mm

Electrolux 007026

**340025**



Spring Ø 12 mm L=70 mm  
wire Ø 1.5 mm

Electrolux 033551



## Slide Ways - Shelf Supports

**526533**



**Runner 630x37 mm**

Electrolux 004100 004101

**526719**



**Runner**  
dim. 375x300 mm

Electrolux 003675

**441491**



**Runner 335x170x25 mm**

Electrolux 054844

 
**583338**



**Support 517xh510 mm**

Electrolux 0C5019

**427865**

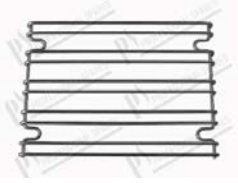

**Runner support baking sheet**

Electrolux 0E3695 0KB685

**442139**




**Runner**  
dim. 375x300 mm

Electrolux 003676

## Insulatings

 **584174**

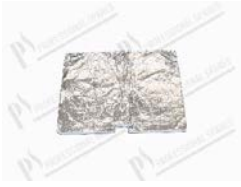

Rear insulation 475x645x30 mm

Electrolux OC0196

## Structural components

**583046**



Control panel 1472xh160 mm

Electrolux OC9597

**440321**



Rear panel  
dim. 540x690 mm

Electrolux 003056 0K9594

**441582**



Plug  
Ø 28 mm; h= 65 mm

Electrolux 053375

**526700**



Suction wall  
dim. 545x375 mm

Electrolux 003724

**585183**



Back panel combustion chamber  
dim. 343x220x355 mm

Electrolux OC0806

**586421**



Suction wall 750xh740 mm

Electrolux 0CK151

**585184**



Front panel combustion chamber  
dim. 320x150x345 mm

Electrolux OC0807

**526691**



Suction wall  
dim. 545x400 mm

Electrolux 003754

## Structural components

**525973**



**Suction wall**

Electrolux 007073 0C4615 0C4619

**442165**



**Diffuser dx**

Electrolux 002755 0KD485

**585190**



**Suction panel**  
dim. 598x1450 mm; AOSQ 201 ELT

Electrolux 0C4798

**582524**



**Leg H=730 mm**  
dim. 205x570x730 mm

Electrolux 003340

**526323**



**Panel cover**  
dim. 340x310x130 mm

Electrolux 006532

**526709**



**Diffuser dx**  
dim. 650x340x20 mm

Electrolux 003707

**436387**



**Support**

Electrolux 0C1175

**526708**



**Diffuser sx**  
dim. 650x340x20 mm

Electrolux 003708

**442164**



**Diffuser sx**

Electrolux 002756 0KD484

**526831**



**Air baffle 650x340 mm**

Electrolux 002687

## Structural components


**526818**



**Diffuser**  
dim. 650x640 mm

Electrolux 002742

 **615981**

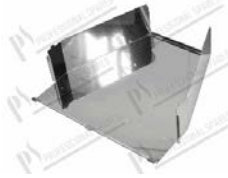

**Internal panel**  
dim: 540x540x140 mm

Electrolux 0C3787

**615983**



**Upper deflector**  
dim: 270x110x60 mm

Electrolux 0C3788

**325667**



**Panel**  
dim. 755x355x45 mm

Electrolux 0C0568

**585181**



**Upper deflector**

Electrolux 0C1401

**582535**



**Fixing profile; Left L=1580**  
one 20 X

Electrolux 0C4971

**585182**



**Deflector**  
dim. 85x315x180 mm

Electrolux 0C0805

**582534**



**Fixing profile; Right L=1580**  
one 20 X

Electrolux 0C4970

**526322**



**Combustion chamber panel**  
dim. 320x310x135 mm

Electrolux 006533

**615984**



**Shield 520x230x1.5mm**

Electrolux 0C3789

## Structural components

**441236**



**Protection**  
dim. 370x370 mm

Electrolux 053776 059620

**584547**



**Control panel 895x300x75 mm**

Electrolux 0C8711

**426695**



**Frame**

Electrolux 0G2047 0K4364 0K5413 0KG707

**615563**



**Pan holder structure**

Electrolux 007059 0C3459

**436430**



**Pipe**  
dim. 420x80 mm; flange 100x115 mm

Electrolux 0C1219

**585242**



**Bracket L=416 mm**

Electrolux 0CB418

**585765**



**Combustion chamber 735x545 mm**  
with fastening screws and insulation

Electrolux 0CB765

## Doors

**532504**



Door

Electrolux OC1579

**526715**



Inner door 690x504 mm

Electrolux 003679

**427778**



Door complete  
dim. 350x350x90 mm

Electrolux 0KB699 0KB726

**582682**



Oven door 692x505 mm

Electrolux 0C9550

**612185**



Door 570x460 mm  
with glass

Electrolux 0C3032

 
**533025**



Door 800x720x52 mm

Electrolux 0C1614

**526707**

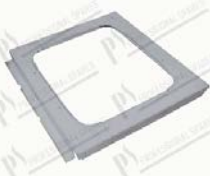

Inner door 675x800 mm

Electrolux 003711

**585404**



Inner door 28x792x438 mm

Electrolux 0C0176

**367282**



Oven door assembly  
dim. 580x895 mm

Electrolux 0C4107 0C4960 0C6601

**325408**



Door right profile L=1580 mm

Electrolux 0C4457

## Doors

**325413**



Door left profile L=1580 mm

Electrolux 0C4458

**459425**



Gasket 15x11,5 mm

Electrolux 0C4094

**582304**



Door assembly 690x505 mm

Electrolux 0C5132 OTT250

**526715**



Inner door 690x504 mm

**526714**



Oven door glass 498x357x6 mm

**519470**



Fixing plate

**519469**



Door handle pin till SN. 330100..

**518872**



Oven door handle [Kit] till SN. 330100..

**435324**



Torsion spring

## Rollers

**346852**



Roller Ø 16,8x44,5 mm  
Oven 20G

Electrolux 005165

**347081**



Roller Ø 14,5x50 mm  
Oven FCV 10

Electrolux 003345



## Printed Circuit Boards

**615952**



**Mother board COP35 ACTIVE PLUS**

Electrolux 0C0968 0C3766 0C4347

**430135**



**Mother board AR6ES**

Electrolux 0H2428 0H2483 0H2509 0K8024  
0KN808

**615946**



**Mother board Cop32 Liv. 3**

Electrolux 004105 006612 006716 0C3761

**427520**



**Mother board**  
dim. 82x225 mm; mod. S33

Electrolux 0H9793 0K4880 0K4881

**582290**



**Power board**  
dim. 350x140 mm

Electrolux 0C3740

**413118**



**Mother board**  
LEV. A/B LW - EJN102EAA - EJN102EBA -  
EJN102ECA - oven

Electrolux 0C0042 0C4890 0C5150 0CB545

**435425**



**Mother board AOS**  
EJN102EAA - EJN102EBA - EJN102ECA

Electrolux 007047

**338255**



**Mother board FCS061**

Electrolux 002684 006611 006715 0C3757

**433726**



**Power supply**  
dim. 100x120 mm; AOS061GA

Electrolux 0C1071

**338253**



**Mother board POW2 L6**  
180/254V 50/60 Hz

Electrolux 003546 006613 006717 0C3764

## Printed Circuit Boards

**338252**



**Mother board POW2 L4**  
180/254V 50/60Hz; for L4 functional level with boiler

Electrolux 004079 006517 0C3762 0KE782

**338331**



**Mother board**  
NCF/G6-0 - ZCF/G6-0

Electrolux 003763 0F0170 0K0671 0KE777

**316473**



**Mother board COP20-T**

Electrolux 0C6570 0CB546

**584023**



**Pcb**  
dim. 36x70 mm

Electrolux 0G7647

**312413**



**Pcb PSX 1P/3P SR7**

Electrolux 0D4011 0TTH96

**615948**



**Interface board**  
FCS201G4 - FCS202G4

Electrolux 0C3763

**325555**



**Pcb**  
dim. 110x55 mm; flat cable L=205 mm; FCS cleaning system

Electrolux 0C4210

**430136**



**Interface board**  
AR6ES

Electrolux 0H2449 0H2452 0K8060

**427519**



**Power board S33**  
dim. 230x125 mm

Electrolux 0H9794 0K4882 0K4883

**413117**



**Interface board**  
dim. 450x150 mm

Electrolux 0C0043

## Printed Circuit Boards

**436167**



**Interface board**  
FCS10

Electrolux 0C0964 0C0970

**338274**



**Interface board UID+MB11 L3-4**  
Gourmet, Le Chef

Electrolux 0F0181 0K1009 0K1022 0K1031  
482538900

**338362**



**Interface board L2 (UID+POW)**  
CS7

Electrolux 0F0182 0K8480 0KE544 482696600

**413116**



**User interface board**

Electrolux 0C0041

**338361**



**Pcb KS**  
FCVG6

Electrolux 002683 0C3759 0H6292

**338272**



**Interface board**  
FCVG10 - 410x110x15 mm

Electrolux 002720 0C3765 0K1017

**338360**



**Interface board PRB 133x110 mm**  
FCVG6

Electrolux 002666 0C3760

**459699**



**Mother board**  
dim. 350x140 mm

Electrolux 0C3916

**338276**



**Interface board**  
FCVG6

Electrolux 002725 0K1015

**317551**



**Interface board Lev. C da from SN. 120**  
mod FCZ-AOS 061, 062, 101, 102, 201, 202

Electrolux 0C4891 0C7350

## Printed Circuit Boards

**316476**



**User interface for Lev. Touch, K**  
COPUI40-T soft. rev. 5, per mod. FCZ e AOS  
061,062,101,102,201,202

Electrolux 0C6571 0C8805 0CA070 0CB664

**583659**



**Shielded cable L=620 mm**

Electrolux 0C6564

**435560**



**Button extension Ø 7x6,95 mm**  
for interface board

Electrolux 002670 0F0086 0G4921 0K8489

**582184**



**Button extension L=7,5 mm**

Electrolux 0C5833

**425198**



**Spacer (20 Pcs)**

Electrolux 0C3750 0C3751 0G4212 0K5832  
0K7071

**442178**



**Gasket**

Electrolux 002663 0F0082

**583485**



**Harness [Kit]**

Electrolux 0C9039 0C9040 0C9041 0C9054

**526840**



**Support**  
dim. 375x84x55 mm

Electrolux 002668

**582752**



**USB extension L=340 mm**

Electrolux 0C6566 0G5958

**367245**

 


**Cable L=730 mm**

Electrolux 0C6565

## Printed Circuit Boards

**585110**

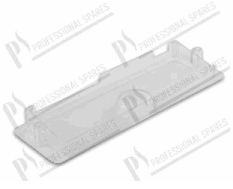

**Pcb LED support**  
dim. 50x157 mm

Electrolux 093386

**310547**



**Air filter 315x72x14 mm**  
201 "ONE"

Electrolux 0C4935

**310549**



**Air filter L=290 mm**

Electrolux 0C4930

**459585**



**Air filter 315x70x10 mm**

**310548**



**Air filter 73x415x14 mm**  
202 "ONE"

Electrolux 0C4937

**459586**



**Air filter 291x72x10 mm**  
061-101 'ONE'

Electrolux 0C4934

**459587**



**Air filter 410x70x10 mm**

Electrolux 0C9991

**459585**



**Air filter 315x70x10 mm**

**459585**



**Air filter 315x70x10 mm**

**459588**



**Air filter**  
062-102 'ONE'

Electrolux 0C4936

**459587**



**Air filter 410x70x10 mm**

**459587**



**Air filter 410x70x10 mm**

Electrolux 0C9992

## Probes

**435334**



**Level probe L=15.5 mm**  
M13

Electrolux 005765

**610836**



**Level probe Ø 2,5x68 mm [KIT]**  
Ltot=104 mm - pipe fitting M13; cable L=600 mm

Electrolux 0C5378

**435335**



**Level probe L=25 mm H=60 mm**  
M13

Electrolux 005766

**413158**



**Level probe Ø 2,5x73 mm**  
Ltot=109 mm - pipe fitting M13

Electrolux 055346 0H2444 0K2067 0K8045

**312676**



**Level probe Ø 2,5x40 mm**  
Ltot=73 mm - connection M13

Electrolux 0C1564

 
**413160**



**Level Probe Ø 2,5x85 mm**  
Ltot=120 mm - pipe fitting M13

Electrolux 0A2838 0K3039

**435331**

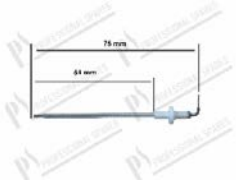

**Level probe Ø 2,5x51 mm**  
ceramic flange L=24.5 mm - Ltot=75 mm

Electrolux 002632

**435306**



**Level probe Ø 2,5x103 mm**  
Ltot=135 mm - pipe fitting M13

Electrolux 003878 0C1201 0H6627 0K2066

**434885**



**Level probe Ø 2,5x68 mm**  
Ltot=104 mm - pipe fitting M13

Electrolux 007033 0C4098

**610643**



**Level probe Ø 2,5x103 mm [KIT]**

Electrolux 0C5379



## Probes

**413157**



**Level probe Ø 2,5x104 mm**  
ceramic flange L=24.5 mm - Ltot=128 mm

Electrolux 002694 003084 0F0010 0K8460  
0KE754 482679300

**310633**



**Level probe Ø 2,5x180 mm**  
Ltot=217 mm - pipe fitting M13

Electrolux 0C7128

**435537**



**Level probe Ø 2,5x107 mm**  
Ltot=143 mm, pipe fitting M13

Electrolux 0C1086

**436326**



**Level probe Ø 2,5x183 mm**  
Ltot=220 mm - pipe fitting M13

Electrolux 0C1105

**413166**



**Level Probe Ø 2,5x118 mm**  
Ltot=155 mm - pipe fitting M13

Electrolux 053909 0C0438

**413174**



**Level probe Ø 2,5x178 mm**  
Ltot.=187 mm

Electrolux 0F0050 0K8485 482697600

**433589**



**Level probe Ø 2,5x123 mm**  
Ltot=158 mm - pipe fitting M13

Electrolux 0C1055

**438207**



**Level probe Ø 2,5x205 mm**  
Ltot=235 mm - pipe fitting M13

Electrolux 005879 0C0439

**413173**



**Level probe Ø 2,5x154,5 mm**  
ceramic flange L=24.5 mm - Ltot=175 mm

Electrolux 004891 005235 0K2064

**413162**



**Level probe Ø 2,5x238 mm**  
Ltot.=249 mm

Electrolux 0F0049 0K8459 482678500



## Probes

**427522**



**Level probe Ø 13x78 mm**  
connection M4

Electrolux 0G0209 0H9789 0K2996 0K4871  
0KC030

**428350**



**Temperature probe PT100**  
bulb Ø 5x100 mm da -100 a +450°C - cable  
2000 mm

Electrolux 0H6478 0H6482

**433632**



**Temperature probe PT100**  
bulbo Ø 3x90 mm, da -100 a +450

Electrolux 0H2430 0K8027 0K8028

**344805**



**Temperature probe PT1000**  
bulb Ø 4x70 mm; bipolar silicone cable L=1800  
mm

Electrolux 002615 0C5342 0F0087 0K0676  
0K8490 0K9704 0KE606 0KE749  
482699100

**428491**



**Temperature probe PT100**  
bulb Ø 3.5x220 mm; cable 2000 mm

Electrolux 0H6481

**615561**



**Temperature probe TCK**  
Bulb Ø 4x70 mm da -50 a +1150; cable  
L=2000 mm

Electrolux 0C3457

**411534**



**Temperature probe PT100**  
bulbo Ø 4x31 mm; cable L=1500 mm; -100 +  
+450 °C

Electrolux 058953

**433986**



**Temperature probe TCK**  
Bulb Ø 4x70 mm -50 / +1150 - cable L=500  
mm

Electrolux 0C0324 0C6538

**411533**



**Temperature probe PT100**  
bulb Ø 4x60 mm; cable 1300 mm

Electrolux 056675 058669

**433985**



**Temperature probe TCK**  
Bulb Ø 4x70 mm da -50 a +1150; cable L=800  
mm - AOS - for heating element oven AOS

Electrolux 0C0325

## Probes

**433984**



**Temperature probe TCK**

Bulb Ø 4x70 mm da -50 a +1150; cable L=1100 mm

Electrolux 0C0326 0C6539

**584095**



**Core probe single point**

bulb Ø 3,5x100 mm; cable L1=670mm - L2=1650 mm; flange 74x30 mm

Electrolux 0C4241\_ 0CB213

**317210**



**Temperature probe 90°**

Bulb Ø 4x70 mm, cable L=500 mm, connector Lumberg

Electrolux 0C7028

**584096**



**Core probe multipoint**

Bulb Ø 3,5x100 mm; cable L1=670mm - L2=1600 mm; flange 74x30 mm

Electrolux 0C4240\_ 0CB214

**436169**



**Core probe 90°**

cable L1=1000 mm - L2=1500 mm, flange 74x30 mm

Electrolux 0C0972

**584097**



**Core probe multipoint - LEV A Touch from SN 015 to 7391**

Bulb Ø 3,5x100 mm; cable L1=900 mm - L2=1770 mm; flange 74x30 mm

Electrolux 0C6574\_ 0CB236

**584092**



**Core probe single point**

bulb Ø 3,5x100 mm; cable L1=900mm - L2=1790 mm; flange 74x30 mm

Electrolux 0C6573\_ 0CB215

**344977**



**Core probe 90°**

Bulb Ø 3,5x90 mm; cable L1=1550mm - L2=1570 mm; flange 74x30 mm

Electrolux 007094

**584094**



**Core probe multipoint (from SN. 7401)**

Bulb Ø 3,5x100 mm; cable L1=900mm - L2=1800 mm; flange 74x30 mm

Electrolux 0C6574\_ 0CB216

**344989**



**Core probe 90°**

bulb Ø 3,5x90 mm; -40 ÷ +250; cable L=1600 mm; flange 39.5x20x10 mm

Electrolux 0C0225

## Probes

**345053**



**Core probe 90°**

bulb Ø 3,5x95 mm; cable L1=1000 mm - L2=1560 mm

Electrolux 006983

**436423**



**Core probe 90° multipoint**

Bulb Ø 3,5x100 mm da -40 a +250; cable L1=1045 mm - L2=1800 mm; flange 74x30 mm

Electrolux 0C1212

**344759**



**Core probe 90°**

bulb with 6 edges Ø 3,5x96 mm; cable L=1550 mm

Electrolux 007093

**433758**



**Core probe 90°**

Bulb Ø 3,5x100 mm da -40 a +250 °C; cable L1=1300 mm - L2=1840 mm; flange 74x30 mm

Electrolux 0C1404

**436424**



**Core probe 90°**

Bulb Ø 3,5x96 mm; cable L=1050 mm; external cable L = 1850 mm

Electrolux 0C1213

**316881**



**Core probe 90° single point AOSQ**

bulb Ø 3,5x100 mm; cable L1=700 mm - L2=1600 mm, flange 74x30.5 mm

Electrolux 0C4241 0CB213\_

**344752**



**Core probe 90° from sn. 250**

Bulb Ø 3,5x96 mm; cable L1=1000 mm - L2=1600 mm; flange 74x30 mm

Electrolux 007063

**433980**



**Core probe 90°**

Bulb Ø 3,5x100 mm da -40 a +250°C; cable 950 mm

Electrolux 006982

**436166**



**Core probe 90° till SN. 418**

probe Ø 3,5x110 mm; cable L1=1200 mm - L2=2000 mm

Electrolux 0C0967

**434992**



**Core probe 90°**

Bulb Ø 3,5x100 mm da -40 a +250; cable L=3300 mm

Electrolux 0C1383

## Probes

**312865**



**Core probe 90° - AOSQ T.C. Multipoint**  
Bulb Ø 3,5x100 mm; cable L1=610 mm - L2=1600 mm

Electrolux 0C4240 0CB214\_

**438252**



**Core probe 90°**  
Bulb Ø 5x100 mm da -40 a +250 °C; cable L=3200 mm

Electrolux 006527

**344766**



**Core probe 90° from SN. 250**  
Bulb Ø 3,5x100 mm da -40 a +250; cable L1=1500mm - L2=1045 mm; flange 74x30 mm

Electrolux 007109 0C0956

**615559**



**Core probe TC "K" for 20 grids oven**  
probe L=150 mm; cable L1=940 mm - L2=1700 mm; single point

Electrolux 0C3456

**436378**



**Core probe 90°**  
Bulb Ø 4x96 mm; cavo L1=1000 mm - L2=1500 mm

Electrolux 0C1164

**323427**



**Core probe multipoint**  
probe L=130 mm - bulb Ø 3,5x95 mm; cable L1=850 mm - L2=1700 mm

Electrolux 0C6574 0CB216\_Lev 0CB236\_Lev  
\_B\_C\_K\_fro \_A\_Touch\_fr  
m\_SN\_7401 om\_SN\_015\_  
to\_SN\_7391

**345049**



**Core probe 90° PT1000**  
Bulb Ø 4x96 mm - probe L=150 mm - cable L1=1200 mm - L2=1850 mm

Electrolux 002821

**323397**



**Core probe single point**  
probe L=130 mm; bulb Ø 3,5x95 mm; cable L1=850 mm - L2=1700 mm

Electrolux 0C6573 0CB215\_

**436361**



**Core probe 90° multipoint**  
bulb Ø 4x96 mm; cable L1=1400 mm - L2=2000 mm - flange 74x30 mm

Electrolux 0C1146

**533020**



**Core probe**  
probe L=152 mm; bulb Ø 3,5x95 mm; cable L1=950 mm - L2=1650 mm

Electrolux 0C1606

## Probes

**531941**



**Core probe**

probe Ø 3,5x95 mm; cable L1=460 mm - L2=1740 mm

Electrolux 0C1522

**344804**



**Core probe PT100**

bulb 103 mm - probe 1200 mm; cable with sheath 2180 mm; 2 round terminal

Electrolux 0E3423 0H2363 0H2364 0K7782  
0K7785 0K8594 0KE450

**345002**



**Core probe PT1000**

probe L=150 mm - bulb Ø 4x96 mm; cable L1=450 mm - L2=1640 mm

Electrolux 006192

**345052**



**Core probe**

bulb 96 mm - probe 1000 mm; cable with sheath 1700 mm; faston terminals

Electrolux 0K8488

**344762**



**Core probe PT1000**

probe L=150 mm - bulb Ø 4x96 mm; cable L1=1000 mm - L2=1400 mm

Electrolux 006174

**411535**



**Core probe with connection 90°**

bulb Ø 4x100 mm; cable L1=690 mm - L2=1800 mm

Electrolux 059002

**344765**



**Core probe PT1000**

probe L=150 mm - bulb Ø 4x96 mm; cable L1=1000 mm - L2=1500 mm

Electrolux 003094 003853 0F0085 0H6499

**411538**



**Core probe PT100**

bulb Ø 4x100 mm da -40 a +250 °C - connection M12

Electrolux 055472 0K2962

**344755**



**Core probe PT1000**

probe Ø 4x100 mm da -40 a +250 °C; cable L1=530 mm - L2=1550 mm; faston fem.

Electrolux 002673 0F0084 0K8487 482698600

**344994**



**Core probe**

bulb Ø 4x100 mm; cable L1=550 mm, L2=1500 mm - nut Ø 14 mm

Electrolux 0H2447 0K8050 0K8206 0K8519

## Probes

**428498**



**Core probe PT100**

bulb Ø 4,5x80 mm da -40 a +250°C; cable L1=480 mm - L2=1450 mm

Electrolux 0H6492 0H6497 0T3795

**425595**



**Temperature probe EWF1007**

L= 160 mm; M10; faston 6.3x0.8 mm

Electrolux 0H9845 0K2997 0K5047

**533021**



**Core probe**

probe L=155 mm; cable L1=510 mm - L2=1455 mm

Electrolux 0C1607

**542998**



**Lambda probe**

L=900 mm

Electrolux 0CK168

**428494**



**Core probe PT100**

bulb Ø 4,5x80 mm da -40 a +250 °C; cable L1=1080 mm - L2=2590 mm

Electrolux 0H6493 0H6498

**434005**



**Lambda probe Ø 12x48 mm**

Electrolux 006995 0C6465

**428495**



**Core probe PT100**

bulb Ø 5x100 mm da -40 a +250 °C; cable L1=460 mm - L2=1950 mm

Electrolux 0H6490 0H6494

**413967**



**Level regulator 24V 50/60Hz**

8 pin; Relay contact 10A 250V

Electrolux 004064 053266

**435337**



**Core probe PT1000 multipoint**

bulb Ø 5,5x110 mm da -50 a +150 °C- cable L1=530 mm - L2=170 mm

Electrolux 006525

**413163**



**Level regulator 24Vac 50/60Hz**

relay contact 10A 250V

Electrolux 004894 053913



## Probes

**413164**



**Level control 24V**  
relay contact 5A 250V

Electrolux 056496

**413159**



**Level regulator 230V 50/60Hz**  
RL30/3ES/F/G - RL1/RL2 5A 250V

Electrolux 004837 005048 055359 055458  
088196 0A8502 0C0937 0H6151  
0K9194 0KE598

**438594**



**Bulb fixing spring Ø 6 mm**

Electrolux 057519 066823

**586349**



**Core probe support as of SN. 7401..**  
dim. 35x35x18 mm

Electrolux 0CB144

**531709**



**Core probe support till SN. 7391..**  
dim. 30x18x25 mm

Electrolux 0C1505

**312414**



**Cable for lambda probe**

Electrolux 0C6110

**442066**



**Nipple M15**  
H=17,5 mm; hole Ø 8,6 mm

Electrolux 002623 0F0159

**323404**



**Wiring harness**  
for lambda probe; L=350/L=830 mm

Electrolux 0C6531

**437773**



**Shielded cable L=1145 mm for level probe**  
faston plain F/F 6=>8 mm

Electrolux 002763

**615840**



**Shielded cable L=600 mm for level probe**  
faston plain F/F 7 mm

Electrolux 0C3678



## Probes

**411351**



**Cable for level probe L=1200 mm  
faston F6.3 mm**

Electrolux 055360 0K2951

**310561**



**Gasket 82,5x69,5x4 mm**

Electrolux 006994

**518831**



**Bracket**

Electrolux 0K8371

**582516**



**Probe flange 70x70 mm  
Øint. 12 mm**

Electrolux 0C4244

**526492**



**Support 25x15x9.5 mm**

Electrolux 006175

**317914**



**Plug for sensor**

Electrolux 0C4872

**526838**



**Support M6 20x20 mm**

Electrolux 002674 0K2277 0K9619 0KD468

**437903**



**Spacer Ø 8xh14 mm**

Electrolux 002633 0F0161

**319650**



**Gasket 70x70x3 mm**

Electrolux 0C4093

**442174**



**Probe gasket Ø 4,5x8÷11x22,50H mm**

Electrolux 002701 0F0158

## Thermoregulators

**429736**



**Digital thermostat EWPC800T**

230V; input: TcK probe; relay output 8 (3) A  
250V; 72x72 mm; template Ø 61 mm

Electrolux OKI625

## Potentiometers

**413122**



**Potentiometer 0,6KOhm**

D-shaft Ø 6x4,5 L=14 mm; cable L=190 mm ;  
thread M9

Electrolux OC0974

**532403**



**Potentiometer bush**

Electrolux OC1560

## Membranes

**611565**



**Adhesive membrane keypads  
420x107mm  
FCS061**

Electrolux OC2482

**532090**



**Adhesive membrane keypads 680x115  
mm  
FCS201G4 - FCS202G4**

Electrolux OC1529

**535579**



**Adhesive membrane keypads**

Electrolux OC1655

**440713**



**Adhesive membrane keypads 680x130  
mm**

Electrolux 003832 OKE778

## Membranes

**526509**



**Adhesive membrane keypads 800x100 mm FCV**

Electrolux 006035

**581970**



**Adhesive membrane keypads 160x460 mm**

Electrolux 007058

**520411**



**Adhesive membrane keypads 800x111 mm FCV**

Electrolux 0A5329

**317197**



**Adhesive membrane keypads 447x107 mm FCV**

Electrolux 0C5509

**440715**



**Adhesive membrane keypads FCV**

Electrolux 002719

**310582**



**Adhesive membrane keypads 158x890 mm**

Electrolux 0C6549

**585289**



**Adhesive membrane keypads 62x160 mm**

Electrolux 0KZ179

**310578**



**Adhesive membrane keypads 640x158 mm**

Electrolux 0C6548

**433973**



**Adhesive membrane keypads 460x160 mm AOS061**

Electrolux 007057

**310584**



**Adhesive membrane keypads dim. 1545x158 mm**

Electrolux 0C6550

## Membranes

**584031**



**Adhesive membrane keypads 72x368 mm**

Electrolux 092536

**310597**



**Adhesive membrane keypads 510x160 mm**  
ONE, LIV.C

Electrolux 0C4949

## Alarms/Buzzers

**434776**



**Buzzer M4, 230V**  
65-75dB

Electrolux 0G1057 0H6572 0H6596 0K2031

**317530**



**Buzzer board**

Electrolux 055368 0675401000 0A2504 0A2505  
0CA485 0CA489 0F0169 0KN825

**459561**



**Fitting plate**  
for buzzer 317530

Electrolux 0CA260 0TTK40

## Gaskets for heated units

**433978**



**Oven door gasket 480x510 mm**  
AOS 6 GN 1/1

Electrolux 006992 0C1496

**410058**



**Oven door gasket 450x550 mm**  
for Oven C7, C7P and CS7

Electrolux 005710 0F0002 482537700

**434008**



**Oven door gasket 480x755mm**  
AOS 10 GN 1/1

Electrolux 007069 0C1477

**349817**



**Oven door gasket 430x610 mm**  
for Oven 6 GN 1/1

Electrolux 005707

**436429**



**Oven door gasket 650x750 mm**  
AOS 10 GN 2/1

Electrolux 0543835000 0C1218 0C1887

**349837**



**Oven door gasket 430x635 mm**  
for 6 GN 1/1 ovens

Electrolux 002828 004226 005713 0KE761

**435050**



**Oven door gasket 475x1470 mm**  
AOS 20 GN 1/1

Electrolux 0C0881 0C1473

**410064**



**Oven gasket 640x730 mm**

Electrolux 005706 0H6521

**535852**



**Oven door gasket 665x1470 mm**  
AOS 20 GN 2/1

Electrolux 0C1195 0C1889

**349834**



**Oven door gasket 665x730 mm**  
for oven 10 GN 1/1 and 2/1

Electrolux 002654 004227 005712 0KE753

## Gaskets for heated units

**349978**



**Oven door gasket 450x770 mm**  
for Oven C10 and CS10

Electrolux 005709 0F0069 482537701

**417313**



**Oven door gasket 450x720 mm [KIT]**  
red silicone rubber; with 2 silicone angle for side hinge

Electrolux 0H2423 0K7636 0K8015 482067711

**410091**



**Oven door gasket 660x1400 mm**  
for 20 GN Ovens 1/1 and 2/1

Electrolux 003995 005711

**349831**



**Oven door gasket 645x725 mm**  
snap-in gasket - made of black silicone rubber; width 16 mm

Electrolux 055315 0K2968

**349832**



**Oven door gasket 640x1400 mm**  
for Oven 20 GN 1/1 and 2/1 serie 57

Electrolux 003088 005705

**417314**



**Oven door gasket 450x1360 mm**  
red silicone rubber; with 4 silicone angle

Electrolux 0H2424 0K7635 0K7637 0K8016

**349833**



**Oven door gasket 450x1490 mm**  
for Oven C20 and CS20

Electrolux 005708 0F0046 482537702

**349835**



**Oven door gasket 640x1380 mm**

Electrolux 054986

**349980**



**Oven door gasket 395x585 mm**  
snap-in gasket - made of black silicone rubber; width 16 mm

Electrolux 054558 055414 0KF019

**428134**



**Oven door gasket 430x620 mm**  
Juno serie 56 - 6 GN 1/1

Electrolux 0H6668 0K2083

## Gaskets for heated units

**421469**



**Oven door gasket 620x715 mm**  
Juno serie 56 - 10 GN 1/1

Electrolux OK1833

**428141**



**Oven door Gasket 414x620 mm**  
profile 14x23,5 mm - for Juno Oven serie 5511-3

Electrolux 0H6655

**427933**



**Oven door gasket 620x735 mm**  
Juno serie 56 - 10 GN 1/1

Electrolux 0G2086 0H6669

**414390**



**Oven door gasket (sold per metre)**

Electrolux 0K7513 0K9171

**427959**



**Oven door gasket 1337x627 mm**  
Juno serie 56 - 20 GN 1/1

Electrolux 0H6641

**440304**



**Oven door gasket L=3520 mm**

Electrolux 0H2270 0K7510

**427987**



**Oven door gasket 627x1321 mm**  
lower side shaped

Electrolux 0H6657

**610926**



**Oven door gasket (sold by meter)**

Electrolux 0H2653 0K9170

**427988**



**Oven door gasket 777x1345 mm**

Electrolux 0H6660

**414116**



 
**Oven door gasket L=3000 mm**

Electrolux 0K9170\_K10



## Gaskets for heated units

**427929**

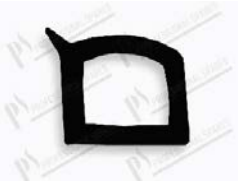

Oven door gasket (sold by meter)

Electrolux 0G1819 0H6767

**427907**



Oven door gasket 260x290 mm  
EHP - MINICOMBI

Electrolux 0E3680 0KB662

**438532**



Oven door gasket L=1133 mm  
black colour

Electrolux 054850

**527665**



Oven door gasket

Electrolux 0C9449

**417310**



Oven door gasket L=1600 mm  
in black silicone

Electrolux 0H2492 0K8159 482214100

 
**315416**



Oven door gasket 410xh340 mm  
for 4GN oven

Electrolux 0C3027 0C4159

**421530**

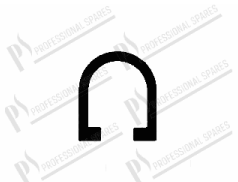

Oven door gasket 595x666 mm  
red colour - profile 11x13 mm

Electrolux 003384

**417652**



Oven door gasket 425x470 mm

Electrolux 0H2422 0K7634 0K8014

**410160**



Oven door gasket 645x715 mm  
middle edged gasket - made in black silicone  
elastomer; width 24 mm; for old ovens FCF20

Electrolux 053751

**414135**



Oven door gasket Ø 430 mm

Electrolux 056440 056480

## Gaskets for heated units

**410061**



**Door gasket**  
fv/e-4

Electrolux 053930

**427960**



**Window seals gasket L=2000 mm**

Electrolux 0H6637 0H6639

**542951**



**Oven door gasket 480x510 mm**  
for oven 6 GN 1/1

Electrolux 0CK222

**427966**



**Window seals gasket L=2200 mm**

Electrolux 0H6636


**346838**



**Gasket**  
2 x 470 mm, 2 x 585 mm; supplied with silicone

Electrolux 003256

 **349982**

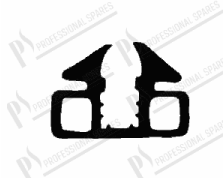

**Window seals gasket L=1405 mm**

Electrolux 054557 055412

 
**435544**



**Protection for glass door for hinge**

Electrolux 002645 0F0166 0K2944 0K8509  
0KE548

**349986**

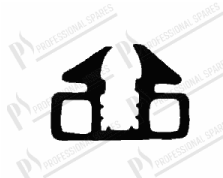

**Window seals gasket L=2200 mm**  
black silicone rubber

Electrolux 055314


**427944**



 **Window seals gasket L=1700 mm**

Electrolux 0K2082

**435367**

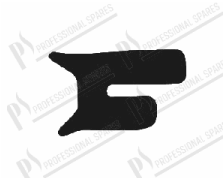

**Window seals gasket - L= 5 mt**

Electrolux 053754 057397 057529 057655  
0C1325

## Gaskets for heated units

**433679**



**Window seals gasket 0,89 mt**

Electrolux 0F0191 OK8584 OKE576

**349836**



**Door window seals gasket 640x2000 mm**  
black silicone rubber - profile 120,8x18,4 mm

Electrolux 002878 OK2279

**427936**



**Window seals gasket (sold by meter)**  
profile 20,5x15 mm

Electrolux 0H6663

**410063**



**Door glass gasket; dia 490 mm**

Electrolux 002837

**412430**



**Window seals gasket L=1685 mm**  
AR10 ES

Electrolux 0H2421 OK8006

**433661**



**Tray trolley gasket 60x610 mm**  
AOS 20 GN 1/1

Electrolux 0C0899 0C1484

**410158**



**Window seals gasket L=1500 mm**  
black silicone rubber; profile 36x14,5 mm

Electrolux 003680

 
**310989**



**Tray trolley gasket 60x657 mm**  
AOS 20 GN 1/1

Electrolux 0C4121

**410157**

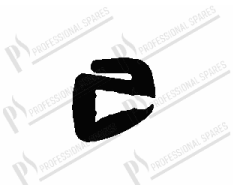

**Inner window seal gasket 640x2000 mm**  
black silicone rubber - profile 16x17,4 mm

Electrolux 003739

**436407**



**Tray trolley gasket 60x744 mm**  
for AOS 20 GN 2/1

Electrolux 0C1196 0C1890

## Gaskets for heated units

**310450**



**Tray trolley gasket 60x809 mm**  
AOS 20 GN 2/1

Electrolux 0C4131

---

**427989**



**Tray trolley gasket L=508 mm**  
Juno serie 56 - 20 GN 1/1

Electrolux 0H6661

---

**318196**



**Tray trolley gasket L=658 mm**  
FCF/G 20 GN

Electrolux 0H6662 0K2102

---

**410050**



**Tray trolley gasket L=660 mm**  
FCV/E 20 GN

Electrolux 006176

---

**585578**



**Door gasket 605x1280 mm**

Electrolux 0PE736 20206108

---

## O-rings



### O-ring

- 532922** 1,78x6,75 mm NBR
- 438348** 1,78x20,35 mm NBR
- 435418** 2,62x47,30 mm NBR
- 419124** 3,00x41,00 mm Silicone
- 416521** 3,00x79,50 mm VITON
- 438162** 3,53x28,17 mm VITON
- 525970** 3,53x29,75 mm VITON
- 438163** 3,53x31,34 mm VITON
- 318848** 3,53x40,87 mm EPDM
- 439494** 3,50x41 mm
- 438465** 5,34x37,47 mm EPDM
- 435067** 5,34x56,52 mm NBR

## Flat gaskets

**349603**



Flat gasket Ø 10x18x2 mm - Fiber

Electrolux 054283 0KJ962

**442132**



Gasket Ø 54x30x7 mm

Electrolux 003705

**348246**



Flat gasket Ø 11x18,5x2 mm - Fiber

Electrolux 003165 0S1143

**442072**



Gasket Ø 39x60x7 mm

Electrolux 002610 0F0167 0K1839 0KG585

**344379**



Flat gasket Ø 34x44x2 mm - Fiber

Electrolux 0E2240 0H2578 0K6137 0K8703

**438466**



Gasket Ø 42x59x2 mm

Electrolux 055342

**437904**



Gasket Ø 17x74x11 mm

Electrolux 002634 0C7016 0F0168 0KI011

**441572**



Gasket Ø 59x85x7 mm

Electrolux 053829 0F0163 0H2432 0K8031

## Flat gaskets

**434002**



Gasket 84x94x12 mm

Electrolux 007005

**436380**



Gasket 117x102 mm

Electrolux 0C1168

**436405**



Gasket 125x85 mm

Electrolux 0C1194

**310565**



Chimney gasket 100x135x3,5 mm

Electrolux 0C7015

**442070**



Gasket 40x60x2 mm  
Ø 20 mm

Electrolux 002614 0F0074

**349977**



Covering  
Dimensions 40x21x145 mm - sp.4 mm

Electrolux 003749

**322406**



Gasket 70x28x7 mm

Electrolux 0C4088

**349465**



Flat gasket Ø 12x24x2,5 mm - EPDM

Electrolux 061488

**433989**



Gasket 91x91x4 mm

Electrolux 007053

**367599**



Flat gasket Ø 13x24x2,6 mm EPDM

Electrolux 0CB248

## Flat gaskets

**441240**



**Gasket Ø 5,5x4 mm**

**Electrolux** 056419

---

**442112**



**Gasket Ø 6x16x1 mm**  
hole D-shaft - for knob

**Electrolux** 003955 0C3796 0F0164

---

**442065**



**Gasket Ø 15x20x1 mm (50 pcs)**

**Electrolux** 002624 0F0165

---

**410159**



**Gasket Ø 4,5x14xh3 mm**

**Electrolux** 053816 0KE998

---

**322126**



**Gasket Ø 17x22x1,5 mm**

**Electrolux** 0C4201

---



## Miscellaneous

**526914**



Gasket Ø 47x90x18,5 mm

Electrolux 0C6200

**370518**



Gasket for boiler 73x73x4 mm

Electrolux 0C4963

**413127**



Gasket

Electrolux 0H6667

**420505**



Gasket

Electrolux 0H6646

## Lubricants and sealants

**440176**



Red silicon high temperature Tmax  
300°C  
for oven gasket ; cartridge 310 ml

Electrolux 003926 0CB101 0H7010 0K3202

**427810**



Compound sealant Black SILASTIC 732  
RTV  
tube with nozzle 310 ml; temperature  
resistance -60 ° C up to 205 ° C

Electrolux 0H7009 0K9901 0KU157

## Lubricants and sealants

**441817**



**Transparent silicomic adhesive HT Tmax**  
**350C° - 100 gr**  
 with dispenser for oven door sealing

Electrolux 005866 006083 0C7023 0G0818

**440719**



**Conductive silicone compound - 100 gr**  
 for tank contact thermostat

Electrolux 005256 049196 0D7063 0G1934  
 0G2189 0G6854

**584129**



**Degreaser RAPID GREASE C41 6x1lt**  
 Product subject to some limitations of transport (ADR)

Electrolux 0S2292

## Detergents

**585498**



**Detergent powder C-23 (100 tabs)**

Electrolux 0S2392

**533571**



**Detergent Extra Strong C20 - 1 canister 5 lt**

Product subject to some limitations of transport (ADR)

Electrolux 0HB326 0S0544 0S0844 0S1192

**585500**



**Rinse aid and descaling C-25 (50 tabs)**

Electrolux 0S2394

**315536**



**Rinse aid Extra Strong C21- 1 canister 5 lt**

Product subject to some limitations of transport (ADR)

Electrolux 0S0909 0S1193 0S2283

## Detergents

**344234**



**Liquid delimer; LIME A WAY EXTRA-1 canister 5lt**  
to eliminate residual calcareous; Product subject to some limitations of transport (ADR)

Electrolux 0S0315 0S0840 0S1196 0T0110

**589392**



**Liquid delimer; C30 - 2 x canister 5 lt**  
to eliminate residual calcareous; Product subject to some limitations of transport (ADR)

Electrolux 0S2362

## Miscellaneous

**440630**



**Aluminium adhesive band Tmax 300°C; H=50 mm x 50 mt.**

Electrolux 006451 0K3254 0K4579 0T3639

## Castors

**525476**



**Swivel castor without lock Ø 100x30 mm - chrome-plated**  
fitting by screw M10+M12 mm; height 131 mm; weight capacity 80 kg; castor core in polypropilene, grey rubber anti-marking surface

Electrolux 033657 0W1XX0 432730581

**418021**



**Swivel castor without lock Ø 125x30 mm - chrome plated**  
fitting by screw M12+M10; height 160 mm; carrying capacity 100 Kg; castor core in polypropilene, grey rubber anti-marking surface

Electrolux 0E5373 0KB549 0S1427 461208700

**533036**



**Swivel castor with lock Ø 100x30 mm - Chrome plated**  
support whit pin Ø 12x30H mm; height 131 mm; carrying capacity 80 kg; castor core in polypropilene, grey rubber anti-marking surface

Electrolux 005182 0C1631

**418866**



**Swivel castor with lock Ø 125x30 mm - chrome plated**  
fitting by screw M12+M10; height 160 mm; carrying capacity 100 Kg; castor core in polypropilene, grey rubber anti-marking surface

Electrolux 0E5327 0K6717 0KE288 461208704

## Castors

**535554**



**Swivel castor without brake Ø 125x30 mm - chrome plated**  
 support whit pin Ø 12x30H mm; height 131 mm; carrying capacity 80 kg; castor core in polypropilene, grey rubber anti-marking surface

Electrolux 007107 0C1632

**200018**



**Allen screw M10x80 mm**  
 35mm threaded

Electrolux 0W1DA5 0W3274

**347453**



**Swivel castor w/pin without lock Ø 125x30 mm - chrome plated**  
 lock pin Ø 19x45H mm; screw M8/19 mm; height 162 mm; carrying capacity 100 kg; castor core in polypropilene, grey rubber anti-marking surface

Electrolux 003341 058233

**347462**



**Swivel castor with lock Ø 125x30 mm - chrome plated**  
 Lock pin Ø 19x45H mm - screw M8/19 mm; height 162 mm; carrying capacity 100 kg; castor core in polypropilene, grey rubber anti-marking surface

Electrolux 003342 058232

**440040**



**Swivel castor with lock Ø 125x30 mm - INOX**  
 fitting by screw M12÷M10; H=160 mm; weight capacity 100 Kg; castor core in polypropilene, grey rubber anti-marking surface

Electrolux 033133

**347082**



**Expanding nut for wheels with pivot Ø 19x22xh46 mm**

Electrolux 003343

## Grids and Shelves

 
**427844**



**Grill inox GN 1/2 for Oven**  
dim. 325x265 mm

Electrolux OK1040 OKD893

**412019**

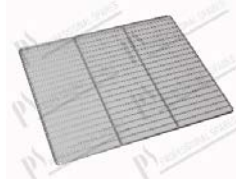

**Grill AISI 304 GN 2/1 for Oven**  
dim. 650x530 mm

Electrolux 003189 087343

**441444**



**Chrome grill for Oven**  
dim. 450x370x20 mm; for 4 grids ovens

Electrolux 005189 054297 921050

**584853**



**Chrome grid, right**  
dim. 520xHtot.750 mm; One 101

Electrolux 0C5013

**582844**



**Grill aluminum GN 1/1 for oven**  
dim. 325x530 mm

Electrolux 0C8532 0S1878

 
**582238**



**Chrome grid, left**  
dim. 530xh760 mm; One 101

Electrolux 0C4861

**300147**

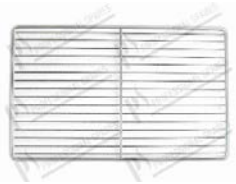

**Grill inox GN 1/1 for Oven**  
dim. 530x325 mm

Electrolux 0S0868 0TT328 922017

**582239**



**Chrome grid, right**  
dim. 516xh745 mm; One 101

Electrolux 0C4862

**412162**



**Grill AISI 304 GN 1/1 for Oven**  
dim. 530x325 mm

Electrolux 055428 921101

**586299**



**Chrome grid, Left**  
One 101

Electrolux 0C5012

## Containers

**427855**



**Baking GN 1/2**  
dim. 325x265 mm

Electrolux OKI275

**542371**



**Baking AISI 304 GN 1/1 H=40 mm**  
dim. 530x325x40 mm; capacity 6 liter

Electrolux OS0897 329244

**442472**



**Dripping-pan 370x450x35 mm**

Electrolux 005188 054296

**542372**



**Baking AISI 304 GN 1/1 H=65 mm**  
dim. 530x325x65 mm; capacity 8,8 liter

Electrolux OS0898 OTT466 329246

**427776**



**Baking GN 1/2 H=40 mm**  
dim. 325x265 mm

Electrolux OKB698

**542347**



**Baking AISI 304 GN 2/1 H=20 mm**  
dim. 650x530x20 mm; capacity 5 liter

Electrolux OS0923 329142

**427851**



**Baking inox GN 1/2 H=40 mm**  
dim. 325x265 mm

Electrolux OKI553

**542349**



**Baking AISI 304 GN 2/1 H=40 mm**  
dim. 650x530x40 mm; capacity 10 liter

Electrolux OS0925 329144

**542370**



**Baking AISI 304 GN 1/1 H=20 mm**  
dim. 530x325x20 mm; capacity 3 liter

Electrolux OS0896 329242

**542350**



**Baking AISI 304 GN 2/1 H=65 mm**  
dim. 650x530x65 mm; capacity 18 liter

Electrolux OS0927 329146

## Filters

**526469**



**Fat filter for oven**  
dim. 460x331x55 mm

Electrolux 006310 0K1033 0K9190 0KD593

**441913**



**Fat filter for oven**  
dim. 460x580x60 mm

Electrolux 005164 005918 0G2238 0K1034  
0K9193 0TT745 922178

**526687**



**Fat filter for oven**  
dim. 460x582x70 mm

Electrolux 003774 921700

**441518**



**Fat filter for oven Ø 148 mm**

Electrolux 054327 0C3058

## Feet

**440849**



**Bushing for adjustable foot Ø 56,5 mm**

Electrolux 054274

**442055**



**Foot neoprene - black Ø 18xM6**  
H=20 mm; with screw H=37 mm

Electrolux 026806 0C3405



## Feet

**323899**



**Adjustable foot INOX 2" - H=135÷210 mm**  
flange 74x74 mm; foot Ø 116 mm

Electrolux 0C4823

**440845**



**Adjustable foot 2"**  
flange 74x74 mm

Electrolux 005025 0K1577

**526314**



**Foot Ø 50x132 mm INOX**

Electrolux 006699

**319562**



**Adjustable foot 2" INOX**  
H=190-250 mm, flange 74x74 mm

Electrolux 0C4824

**441457**



**Adjustable foot AISI 304 Ø 2" - H=150÷223 mm**

Electrolux 059218 0KT758

**433664**



**Adjustable foot Ø 44,5 mm - H=190÷290 mm**  
flange 73x73 mm

Electrolux 007090

**442158**



**Foot 2" AISI 304 H=160 mm**

Electrolux 002845 0KE762

**526710**



**Foot Ø 56,5x107 mm**  
locking screw M10

Electrolux 003703

**438485**



**Adjustable foot AISI 304 Ø 2" - H=145÷220 mm**  
flange 74x74 mm

Electrolux 048579 0F0201 0HB147

**349538**



**Foot inox Ø 2" - H=125 mm**

Electrolux 053792 056927 080942

## Feet

**412047**



Foot

Electrolux 0H2317 0K7640 481656500

---

**441449**



Bush Ø 52xh38,5 mm

Electrolux 054275

---