

ELECTROLUX

Dishwashing Spare Parts Catalogue



Undercounter



Hood Type



Warewasher



Rack Type

UNDERCOUNTER

**ELECTRICAL
PARTS**

**WATER
PARTS**

**MECHANICAL
PARTS**

**ELECTRONIC
PARTS**

GASKETS

CONSUMABLES

ACCESSORIES

Crimp terminals assortment case - TOP QUALITY - 1660 pieces




code **description**
 585630 Crimp terminals assortment case
22 sections - 1660 pieces



Content description

pic.	description	colour	quantity
A	end sleeve 1 mm ² L=8 mm	Yellow	100 PCs
	end sleeve 1,5 mm ² L=10 mm	Red	100 PCs
	end sleeve 2,5 mm ² L=12 mm	Blue	100 PCs
	end sleeve 4 mm ² L=12 mm	Grey	50 PCs
	end sleeve 6 mm ² L=12 mm	Black	50 PCs
	end sleeve 10 mm ² L=12 mm	White	50 PCs
B	Pre-insulated faston 1,5 - 2,5 mm ² 4,8x0,8 mm	Blue	80 PCs
	Pre-insulated faston 1,5 - 2,5 mm ² 6,3x0,8 mm	Blue	80 PCs
C	M/F piggy back faston 1,5 - 2,5 mm ² 6,3x0,8 mm	Blue	50 PCs
D	butt connector 1,5 - 2,5 mm ²	Blue	50 PCs
	butt connector 4 - 6 mm ²	Yellow	50 PCs
E	blue insulated eyelet Ø 4 mm 1,5 - 2,5 mm ²	Blue	100 PCs
	blue insulated eyelet Ø 5 mm 1,5 - 2,5 mm ²	Blue	50 PCs
	yellow insulated eyelet Ø 5 mm 1,5 - 2,5 mm ²	Yellow	50 PCs
F	Blue insulated fork d=4 mm 1,5 - 2,5 mm ²	Blue	100 PCs
	Blue insulated fork d=6 mm 4 - 6 mm ²	Blue	50 PCs
G	insulated M faston 2,8x0,8 mm 1,5 - 2,5 mm ²	Red	100 PCs
H	short M faston 6,3x0,8 mm 1 - 2,5 mm ²	Grey	100 PCs
I	short M faston cover 6,3x0,8 mm	White	50 PCs
J	F nickel-plated steel faston 6,3x0,8 mm 0,5 - 1 mm ²	Grey	100 PCs
J	F nickel-plated steel faston 6,3x0,8 mm 1 - 2,5 mm ²	Grey	100 PCs
K	nickel-plated steel piggyback 1 - 2,5 mm ²	Grey	100 PCs

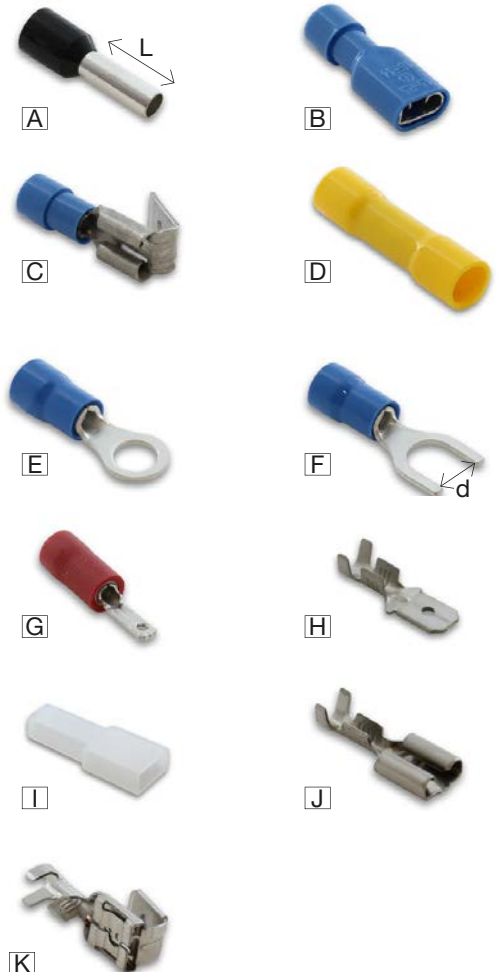

Commutators, Energy Regulators

432317

Commutator 0-1 positions
16A 250V; D-shaft Ø 6x4,6 mm

Electrolux 048271 0KZH02

339022

Commutator cycle 0-1 positions

Electrolux 047498

338916

Commutator 0-4 positions
16A 250V; D-shaft Ø 6x4,6 mm

Electrolux 049145

338906

Commutator 0-5 position
16A 250V; D-shaft Ø 6x4,6 mm; Tmax 85°C

Electrolux 048829

Contactors and Relays

435316

Green auxiliary contact 1NO HN10 10A 690V
dim. 10x17x43,5 mm

Electrolux 046995 0C4704 0E0418 0H7043
0K9119 0KA929 0KE890 H58194500

435315

Red auxiliary contact 1NC HN01 10A 690V
dim. 10x17x43,5 mm

Electrolux 047046 059086 0E0888 0H7044
0KC515

Contactors and Relays

435202



Green auxiliary contact 1NO
dim. 10,5x42x31,5 mm

Electrolux 048497 0E5657 0K5986

337042



Contactor BG06
2,2 kW 3P; 230V 50-60Hz 400V 3 cont. NO + 1 aux NC; dim. 44,5x56x45 mm

Electrolux 086169 086215 0KM841 0U1030

426339



Contactor K3-07ND40 230V
220-240/50Hz 240V/60Hz - 3 cont. NO + 1 aux NO

Electrolux 0H2643 0K9134 477904122 767516200

317772



Relay 200Vac 50/60Hz
16A/250Vac - 12A/400Vac

Electrolux 049159

435108



Contactor K3-10ND01 180V
4kW 3P; 180-210V 50Hz 200-240V 60Hz - 3 cont NO + 1 aux NC

Electrolux 048736 0E1611 0KC508 0KN732
0W2701 438963603

435076



Relay Tyco EAS\AS-230A-H
220-240V 50/60Hz, 16A 250V

Electrolux 048888

435166



Contactor K3-10ND10 230V
4kW 3P; 220-240V 50Hz 240V 60Hz - 3 cont. NO + 1 aux NO - dim. 65,5x45x60 mm

Electrolux 003027 045981 045982 048519
053116 054544 057896 075796
088477 0KL557

435271



Relay 2 contacts 230V 50/60Hz 10A 250V
faston 6.3x0.8 mm

Electrolux 031295 031314 031609 031610
058857 069882 069924 083215
0KW986

435109



Contactor K3-10ND01 230V
4KW 3P; 220-240V 50Hz 240V 60Hz - 3 cont. NO + 1 aux NC - dim. 65,5x45x60 mm

Electrolux 045920 047048 048403 048825
069130 072319 0E3757 0L0285

435248



Relay 2 contacts 230V 50/60Hz 12A 250V

Electrolux 048265 048438

Contactors and Relays

438597



Relay 3 contacts 230V 50/60Hz 10A 250V
faston 6.3x0.8 mm

Electrolux 056466 085296

336816



Relay 4 contacts 230V 50/60Hz 12A 250V
with special plastic flange

Electrolux 048611

435785



Socket relay

Electrolux 049236

438244



Time relay
0,05s-100h 24-230V AC/DC 2x8A 45x45mm

Electrolux 049235

Fuses, Capacitors, RFI Filters

610850



**Capacitor for power factor correction 6,3
μF 450V 50/60Hz**
Ø 30x50 mm; with screw M8

Electrolux 049260 0KB768 0KM491 0L2036

342369



**Capacitor for power factor correction 8
μF 450V 50/60Hz**
Ø 30x71 mm; with M8 screw

Electrolux 049126

Fuses, Capacitors, RFI Filters

339523



Capacitor for power factor correction
12,5 μ F 450V 50/60Hz
 Ø 40x70 mm; with screw M8

Electrolux 037269 047541 054922 066235
 0K3032

438276



RIF filter with faston
 2x0.010 uF (Y2) + MoHm 250V

Electrolux 046226 046227 046941 0K8386

340272



Capacitor for power factor correction 16 μ F 450V 50/60Hz
 Ø 40x95 mm; with screw M8; faston 6,3x0,8 mm

Electrolux 052797 0A2914

435381



RFI filter 3 phase 250V 50/60Hz Ø 38x50 mm
 3x(0.27 μ F) + 3x(1M Ω) + 3x(2x0.10nF);
 faston 6,3x0,8 mm

Electrolux 049303 0KE945

415522



Capacitor for power factor correction 20 μ F 400V 50/60 Hz
 Ø 40x96 mm; with screw M8 - Tmax +46°C

Electrolux 046308 047542 047744 075900

441549



RFI filter 1 phase 250V 50/60Hz 7A/40°C Ø 38x53mm
 (X2) 0.47 uF + 0.68 MoHm (Y2)2x0.01 uF+2x1.5 mH

Electrolux 049901

435292



Capacitor for power factor correction 5 μ F 450V 50/60Hz
 Ø 30 mm; with screw M8; cable L=500 mm

Electrolux 083406

441886



RIF filter with cable
 Ø 38x38 mm; fitting M8; cable L=170 mm

Electrolux 048726 093636

339718



Anti-noise filter
0,47 μ F+2x0,01 μ F+680h Ω m
 275Vac; Ø 38x39 mm; faston 6,3

Electrolux 069539

312685



Fuse Ø 5x20 mm 1A 250V fast

Electrolux 054456 0L3639

Fuses, Capacitors, RFI Filters

416090**Fuse Ø 10x38 mm 25A 500V fast****Electrolux** 047131**523454****Fuse holder Ø 10x38 mm**
32A 690V; DIN bar; dim. 80x18x63 mm**Electrolux** 075737

Switches, Push Buttons, Selectors

416490**Black momentary push switch Ø 22 mm**
1NO; with switch cover**Electrolux** 0H2385 0H2640 0K7866 0K9112**317250****Double-pole push button 16A 250V - ROLD**
Tmax 150°C- serie CM**Electrolux** 0L2654**435348****Double-pole push button 16A 250V - ROLD**
Tmax 150°C - serie CM**Electrolux** 049068**415994****Double-pole switch 16A 250V cont. 2CO - ROLD**
Tmax 85°C - serie SB**Electrolux** 049326**435350****Double-pole push button 16A 250V - ROLD**
Tmax 150°C**Electrolux** 049063**416077****Double-pole switch 16A 250V cont. 1CO - ROLD**
Tmax 85°C - serie SB**Electrolux** 049315

Switches, Push Buttons, Selectors

416132

Double-pole switch 16A 250V cont. 1CO - ROLD
Tmax 85°C - serie SB

Electrolux 049316

415983

Yellow push button Ø 23 mm

Electrolux 049383

435349

Yellow push button Ø 23 mm
serie D83-SB

Electrolux 049065

415993

Grey push button Ø 23 mm
serie D83-CM

Electrolux 049317

322619

Green push button Ø 23 mm

Electrolux 049091

415985

Grey push button Ø 23 mm
serie D83-SB

Electrolux 049325

435351

Grey push button Ø 23 mm
serie D83-CM

Electrolux 049062

433653

Gasket for commutator cycle 46x18x2,7 mm

Electrolux 046360

416078

Yellow push button "start" Ø 23 mm
serie D83-SB

Electrolux 049318

Lamps and Lamp Holders

340422



Green pilot lamp 250V Ø 9,5x30 mm
lens Ø 6 mm cables L=250 mm

Electrolux 049064

340407



Green lens Ø 13 mm L=22 mm

Electrolux 075096 0C2587

435511



Green pilot lamp Ø 13 mm - 240V - L=60 mm
with nut and silicon O-ring

Electrolux 003531 004393 005010 005445
058658 0C3171 0C3487 0H6619
0K3462 0K3475 0KF056 0L3030

338639



Orange lens Ø 13 mm L=22 mm

Electrolux 031611 075095 0C2182 0HB339

340396



Fluorescent pilot lamp Ø 9 mm 240V
L=55 mm, faston 6,3x0,8 mm

Electrolux 004895 031607 046076 048488
048832 0C2585 0HA088 0HB343

319362



White pilot lamp Ø 9 mm 240V
L=55 mm - faston 6,3x0,8 mm

Electrolux 046241 072049 0C0249 0K9101

340428



White lens Ø 13 mm L=22 mm

Electrolux 046289

Microswitches

333186

Kit body safety
250VA 1/2HP 10A NC

Electrolux 0D0153

435075

Magnetic microswitch Ø 6x30 mm
cable L=380 mm w/faston protected

Electrolux 048893

363588

Snap action microswitch with lever 5x28 mm

Electrolux 069484 0W2152

435203

Magnetic microswitch Ø 6x30 mm until SN...729
NO contact 250V 10VA; cable L=460 mm

Electrolux 048268 048486

435424

Snap action microswitch with lever 5x60 mm
16(6)A 250V; T85°C; terminals 6,3x0,8 mm

Electrolux 053671 054550 057580 058405
0E0209 0G6357 0K7559 478061400

349638

Magnetic microswitch Ø 6x30 mm from SN 730...
contact NO 250V 50W; cable L=290 mm

Electrolux 048831

340392

Snap action microswitch with lever 5x43 mm
16(6)A 250V T85°C; faston 6,35x0,8 mm

Electrolux 004904 046286 081352 081692
0K7808 0KB678 0W2466 325629450

435219

Magnetic microswitch
NO contact 250V 50VA 0,04A - rast 5

Electrolux 037260 049621 0KB775

328677

Snap action microswitch with lever 5x51 mm

Electrolux 046379 047485 075849 0E0414
0E2450 0H2586 0HM997 0W0XDV
0W1R2T

349386

Magnetic microswitch E511 with plug
cable L=290 mm

Electrolux 049226

Microswitches

455665

**Magnetic microswitch**

NO contact 200/250V 1A 58W; cable L=290 mm

Electrolux 069915

440844



Insulating plate for microswitch 46x26x1 mm

Electrolux 045404

311752

**Magnetic microswitch with support**

Electrolux 0L1866 0L1871

419361

**Microswitch protection**

Electrolux 0E3114 0H2290 0K7560 0KE427

438337

**Magnet 63x18x11 mm [Kit]**

with self threading screw \varnothing 2,9x9,5 mm

Electrolux 049627

338711

**Bush**

Electrolux 047487

301849

**Magnetic microswitch**

Electrolux 0L1369

376204

**Floating level switch \varnothing 18x52 mm [Kit]**

cable L=1000 mm; thread M16

Electrolux 049309 049454 049478 0E5808

Terminal Boards

439516

**4-pole steatite terminal board**

for cable max 10 sq.mm; capacity 76A/450V;
dim. 40x30h23 mm

Electrolux 054042

518707

**Terminal board 3-poles**

63A 500V; dim. box 145x145 mm

Electrolux 049981 0L0127

336554

**Terminal board 3-poles sq.mm. 6**

capacity 450V 40A; Tmin-max -5/+150°C;
faston 6,3x0.8 mm

Electrolux 046357 0KE877

439772

**Terminal board 450V Tmax 110°C**

Electrolux 049370

439982

**Terminal board 6-poles cable sq.mm 6 with bypass installed**

capacity 450V 40A; Tmin-max -5/+150°C;
faston 6,3x0,8 mm

Electrolux 005420 032669 046347 048574
0E1603 0E5176 0K3511 0KE434
0KG206 0U3376

337225

**Terminal block and cable L= 2000 mm**

Electrolux 0U1027

433863

**Terminal board 8-poles**

L=68,3 mm

Electrolux 045794

440895

**Terminal board KADO 1/7**

63A 500V; dim. box 145x145 mm

Electrolux 049618 0L0111

Pumps

545635



Drain pump 34W 220/240V 50Hz [KIT]
suction Ø 35 mm, outlet Ø 30 mm; connection Rast 5 (for dishwasher without drain pump)

Electrolux 0S0663 864012

414174



Drain pump 90W 230V 50Hz
inlet Ø 25 mm, outlet Ø 23 mm; faston 6,3 mm

Electrolux 047562 0H2573 0K8760

533992



Drain pump 34W 220/240V 50Hz
mod. M230 - CL.F; inlet Ø 35 mm, outlet Ø 30 mm; locking screws included - connection Rast 5

Electrolux 048844 0L0690 0L0692 0L0994

518621



Solenoid pump 230V 50Hz
Ø in 8 mm/Ø out 5 mm

Electrolux 0L0267

337228



Drain pump 100W 230V 50Hz
suction Ø 24 mm, outlet Ø 23 mm

Electrolux 0KM595 0U1035

340462



Wash pump 1 phase 280W 230V 50Hz
inlet Ø 32 mm; outler Ø 32 mm; C=6,3uF; 2850rpm

Electrolux 049057 0L0406

613524



Drain pump 32W 200-240V 50/60Hz 0,45A
inlet Ø 35 mm, outlet Ø 30 mm - connection Rast 5; support on side

Electrolux 048939 0KE587 0L0527 0L0693
0L2133 0L2657

610850



Capacitor for power factor correction 6,3 µF
450V 50/60Hz

340457



Flange for pompe CA-150

317491



Drain pump 60W 220-240V 50Hz
inlet Ø 35 mm; outlet Ø 30 mm; faston 6,3 mm

Electrolux 0L2740

340052



Shell for pump CA-150

340261



Impeller Ø 78 mm

340265



O-ring 2,00x80,00 mm EPDM

Pumps

340050



Wash pump 1 phase 550W 220/240V 1P 50Hz
inlet Ø 45 mm - outlet Ø 40 mm; 2850 rpm,
C=12,5 µF

Electrolux 046370 0H2457 0K8075

339523



Capacitor for power factor correction 12,5 µF 450V 50/60Hz

340459



Shell for pump

340464



O-ring 3,00x126,00 mm EPDM

412572



Shaft sealing Ø 24x10x14 mm / counter-seal Ø 26x13x8 mm

342419



Wash pump 550W 220V 50Hz
inlet Ø 50 mm

Electrolux 0H2192 0K7324 477706008

337308



Wash pump 1 phase 185W 230V 50Hz
inlet Ø 30 mm, outlet Ø 30 mm

Electrolux 070336 0U1037

337114



Wash pump 1 phase 550W 230V 4A 50Hz
inlet Ø 45 mm, outlet Ø 40 mm

Electrolux 0U1038

342299



Wash pump 1 phase 736W 220-240V 50Hz
inlet Ø 52 mm - outlet Ø 55 mm - capacitor
6µF/450V

Electrolux 048664

342644



Shell for pump

342466



Impeller Ø 102 mm

342290



Gasket pump FIR H=3,5x4,5 mm

342633



Gasket Ø 11,8x26x2 mm in rubber

412572



Shaft sealing Ø 24x10x14 mm / counter-seal Ø 26x13x8 mm

Pumps

342261



Wash pump 1 phase 750W 220-240V 50Hz
 FIR B257.1605; inlet Ø 45 mm - outlet Ø 40 mm
 capacity 350 lt/min - 2800 rpm - class F; C=16
 $\mu\text{F}/450\text{V}$

Electrolux 049876 0L3395

340272



Capacitor for power factor correction 16 μF
 450V 50/60Hz

342272



Shell for pump

342455



Impeller Ø 91 mm

342290



Gasket pump FIR H=3,5x4,5 mm

342633



Gasket Ø 11,8x26x2 mm in rubber

412572



Shaft sealing Ø 24x10x14 mm / counter-seal
 Ø 26x13x8 mm

342259



Wash pump 1 phase 750/550W 220-240V
60Hz
 inlet Ø 45,5 mm; outlet Ø 40,5 mm;
 C=16 $\mu\text{F}/450\text{V}$

Electrolux 049885 0L3396

340272



Capacitor for power factor correction 16 μF
 450V 50/60Hz

342272



Shell for pump

342290



Gasket pump FIR H=3,5x4,5 mm

342633



Gasket Ø 11,8x26x2 mm in rubber

412572



Shaft sealing Ø 24x10x14 mm / counter-seal
 Ø 26x13x8 mm

Pumps

342494



Wash pump 3 phase 730W 255/440V 60Hz
inlet Ø 45 mm - outlet Ø 42 mm

Electrolux 049916 0L3398

342272



Shell for pump

342290



Gasket pump FIR H=3,5x4,5 mm

342633



Gasket Ø 11,8x26x2 mm in rubber

412572



Shaft sealing Ø 24x10x14 mm / counter-seal
Ø 26x13x8 mm

342461



Wash pump 3 phase 736W 220-380V 50Hz
FIR 0256; inlet Ø 45 mm - outlet Ø 40 mm; 2800
rpm, CL.F

Electrolux 048304 0KE912

340272



Capacitor for power factor correction 16 µF
450V 50/60Hz

342644



Shell for pump

342466



Impeller Ø 102 mm

342290



Gasket pump FIR H=3,5x4,5 mm

342633



Gasket Ø 11,8x26x2 mm in rubber

412572



Shaft sealing Ø 24x10x14 mm / counter-seal
Ø 26x13x8 mm

Pumps

342495



Wash pump 3 phase 736W 230/400V 50Hz
inlet Ø 45 mm, outlet Ø 40 mm

Electrolux 049896 0L3397

342272



Shell for pump

342455



Impeller Ø 91 mm

342290



Gasket pump FIR H=3,5x4,5 mm

342633



Gasket Ø 11,8x26x2 mm in rubber

412572



Shaft sealing Ø 24x10x14 mm / counter-seal
Ø 26x13x8 mm

538723



Wash pump 1 phase 350W 230V 1.5A
60Hz
C=6.3 µF, 3350 rpm with coating

Electrolux 049890 0L0572

342364



Wash pump 1 phase 750W 220-240V 50Hz
inlet Ø 38,3 mm - outlet Ø 31 mm, 2800 rpm;
C=12,5 µF/450V

Electrolux 048885

340272



Capacitor for power factor correction 16 µF
450V 50/60Hz

310056



Shell for pump

310063



Impeller Ø 103

310061



Gasket pump ZF340SX

344981



Shaft sealing Ø 24x12x15 mm

344790



Counter-seal Ø 26x13x5,5 mm

Pumps

518708



Wash pump 1 phase 750W 220-240V 50Hz
inlet Ø 45 mm, outlet Ø 38 mm, capacitor
12,5uF

Electrolux OL0126

310056



Shell for pump

310063



Impeller Ø 103

310061



Gasket pump ZF340SX

344981



Shaft sealing Ø 24x12x15 mm

344790



Counter-seal Ø 26x13x5,5 mm

316117



**Wash pump 1 phase 760W 230V 3.3A
50Hz SX**
inlet Ø 63 mm, outlet Ø 48 mm; 2800rpm;
C=16µF/450V

Electrolux OL1914

340272



Capacitor for power factor correction 16 µF
450V 50/60Hz

610901



Shell for pump

344819



Impeller Ø 110 mm

582995



Fan housing Ø 142 mm

317229



Rubber holder for pump 316117

344981



Shaft sealing Ø 24x12x15 mm

610895



Shaft sealing Ø 24x11x15 mm / counter-seal
Ø26x14x8 mm

Pumps

344958



**Wash pump 1 phase 800W 1P 230V 50Hz
with support**
inlet Ø 63 mm, outlet Ø 48 mm, capacitor 16µF

Electrolux OL0092

610902



Flange pump ZF523V

610901



Shell for pump

344819



Impeller Ø 110 mm

610903



O-ring 3,53x158,30 mm EPDM

344981



Shaft sealing Ø 24x12x15 mm

610895



Shaft sealing Ø 24x11x15 mm / counter-seal
Ø26x14x8 mm

533523



Wash pump 1 phase 350W 230V 50Hz
inlet Ø 28 mm, outlet Ø 26 mm; 2800 rpm - CL.I
- connector 4 way; C=6,3 µF/450V - Tmax
70°C;

Electrolux 049889 OL0571

610850



Capacitor for power factor correction 6,3 µF
450V 50/60Hz

610884



Impeller Ø 72 mm

610885



Shaft sealing Ø 24x12x15 mm / contro
tenuta Ø 26x14x5,5 mm

610883



O-ring 80x2.65 mm

532057



**Wash pump 1 phase 850W 230V 60Hz
3,6A SX**
inlet Ø 45 mm, outlet Ø 39 mm; 3350/min;
C=12,5µF 400V

Electrolux OL0562

Pumps

364043



**Wash pump 1 phase 520W 230V 3,2A
50Hz**
suction Øext 50 mm, double outlet Øext 30 mm

Electrolux OL3045

344792



**Capacitor for power factor correction 16µF
450V 50/60Hz**

362748



Shell for pump

363175



Pump rotor Ø 91/102 mm

363349



O-ring 2,00x120 mm EPDM

412573



**Shaft sealing Ø 24x11x15,5 mm /
counter-seal Ø 26x13x8 mm**

613978



Rinse pump 1 phase 75W 230V 50Hz
FIR 5213; inlet Ø 30 mm; outlet Ø 26 mm; 2700
rpm; C=5µF/425V; Till S/N 60800000

Electrolux OL1079 OL1640_

418004



**Capacitor for power factor correction 5 µF
400V 50/60Hz**

316035



Rinse pump 1 phase 75W 230V 50Hz

315752



Shell for pump

610852



O-ring for shell Ø 4,00x80,00 mm EPDM

615057



Pump support FIR 5213

615056



**Formed hose 90° Ø 26x36 mm / Ø 30x40 mm
from SN 608...**

435998



Hexagonal head screw TE M6x20 mm - INOX

Pumps

316035



Rinse pump 1 phase 75W 230V 50Hz
inlet Ø 30 mm; outlet Ø 26 mm; 2700 rpm;
C=5µF/425V - [KIT]; From S/N 60800001

Electrolux OL1640

418004



Capacitor for power factor correction 5 µF
400V 50/60Hz

613978



Rinse pump 1 phase 75W 230V 50Hz

315752



Shell for pump

610852



O-ring for shell Ø 4,00x80,00 mm EPDM

315663



Rinse pump 1 phase 230W 230V 50Hz
(NEW MODEL)
FIR 5213; inlet/outlet Ø 28 mm; C=6,3 µF -
cable 160 mm

Electrolux OL2597

418004



Capacitor for power factor correction 5 µF
400V 50/60Hz

315752



Shell for pump

610852



O-ring for shell Ø 4,00x80,00 mm EPDM

614010



Rinse pump 1 phase 230W 220/240V 60Hz
[KIT]
inlet Øest. 30 mm, outlet Øest. 26 mm

Electrolux OL1100 OL1641

615057



Pump support FIR 5213

615056



Formed hose 90° Ø 26x36 mm / Ø 30x40 mm
from SN 608...

435998



Hexagonal head screw TE M6x20 mm - INOX

Pumps

342265



Rinse pump 1P 280W 230V 50Hz ONLY for LS5WS /WT4WS-OLD
 FIR 4213; inlet/outlet Ø 28 mm; capacity 110 lt/min - 2800 rpm - CL.F; C=6,3 µF - cable 160 mm; for other models see 0L1079 - for new undercounter see 0L2597

Electrolux 049310 0L1030

342376



Shell for pump

360121



Impeller Ø 72 mm

412572



Shaft sealing Ø 24x10x14 mm / counter-seal Ø 26x13x8 mm

614009



Rinse pump 1 phase 290W 200V 60Hz
 inlet Ø 30 mm; outlet Ø 26 mm; 3400rpm;
 C=6,3µF 400V

Electrolux 0L1099

434969



Rinse pump 1phase 350W 230V 50Hz - PS45DX LGB
 inlet/outlet F3/8"; 2800 rpm - C=8 µF; cable L=300 mm with 4-pins plug

Electrolux 048910 049162 049229 0L2391

610895



Shaft sealing Ø 24x11x15 mm / counter-seal Ø26x14x8 mm

337371



Rinse pump 1 phase 400W 230V 50Hz LB040

Electrolux 070342

310056



Shell for pump

inlet Ø 45 mm - outlet Ø 39 mm - ZF340SX

Electrolux 0L0329 0L1387

342272



Shell for pump

inlet Ø 45 mm, outlet Ø 40 mm - for pump FIR 0257-B257

Electrolux 049526

342376



Shell for pump

inlet Ø 28 mm; outlet Ø 26 mm

Electrolux 0L0495

582087



Impeller Ø 60 mm

Electrolux 0L0492

Pumps

342532



Impeller Ø 96 mm

Electrolux 0G5354 0H2256 0K7471

342633



Gasket Ø 11,8x26x2 mm in rubber

Electrolux 049562 049563 0H2157 0K7249
0W1817

310063

Impeller Ø 103
for pump ZF340SX

Electrolux 0L0332 0L1391

342683

Drain pump plug M16x18 mm
o-ring 15x3 mm

Electrolux 0L0473 0L0629

310061



Gasket pump ZF340SX

Electrolux 0L0331 0L1392

342290



Gasket pump FIR H=3,5x4,5 mm

Electrolux 048630

342171



Gasket pump

Electrolux 0H2257 0K7472

Pressure Switches

337190

Pressure switch 1 level 40/18 mbar
contact capacity 16A 250V; Tmax 85°C

Electrolux 070324

343919

Pressure switch 1 level 105/60 mbar
contacts capacity 16A 250V; Tmax 85°C

Electrolux 046601 0L0609

343747

Pressure switch 1 level 50/25 mbar
contacts capacity 16A 250V; Tmax 85°C

Electrolux 045494 046352 048453 048723
0L0048 0T3889**435352**

Pressure switch 1 level 110/55 mbar
contacts capacity 16A 250V; Tmax 85°C

Electrolux 049058

337146

Pressure switch 1 level 55/20 mbar
contacts capacity 16A 250V; Tmax 85°C

Electrolux 0U1024

349305

Pressure switch 1 level 180/80 mbar
contacts capacity 16A 250V; Tmax 85°C

Electrolux 049775

339692

Pressure switch 1 level 55/35 mbar
contacts capacity 16A 250V; Tmax 85°C

Electrolux 069434 0H1273

435220

Pressure switch 1 level 250/130-390 mbar
contacts capacity 16A 250V; Tmax 85°C

Electrolux 049620

435295

Pressure switch 1 level 60/20-110 mbar
contacts capacity 16A 250V; Tmax 85°C

Electrolux 037302 049305 049881

348972

Pressure switch 2 level 110/80-60/20 mbar
contacts capacity 16A 250V; Tmax 85°C

Electrolux 049361

Pressure Switches

349306

**Pressure switch 2 level 110/80-60/20
mbar**
contacts capacity 16A 250V; Tmax 85°C

Electrolux 048826

435072

**Pressure switch 2 level 110/80-60/20
mbar [Kit]**
contacts capacity 16A 250V; Tmax 85°C with
braket

Electrolux 049327 0L0508

435346

**Pressure switch 2 level 165/135-110/55
mbar**
contact capacity 16A 250V; Tmax 85°C

Electrolux 049081

336752

Pressure switch support 41x12x11 mm

Electrolux 049413

Heating Elements

415181

Boiler heating element 4500W 220V
L=390 mm; triangular flange H=83 mm int.Ø
47,5 mm - RPN/EI760

Electrolux 052619 065557 0L1874

582161

**Heating element 3000W 230V with
thermofuse**
L=255 mm; triangular flange 83,5x79 mm; Øint.
49 mm; faston 6,3 mm

Electrolux 045984 047505 066109 0C1848
0K2912

Heating Elements

337323**Boiler heating element 2400W 230V**

L=260 mm, flange 93x58 with fixing hole Ø 9.5 mm terminal cover - LBICEQ010

Electrolux 070307 0HB219

415275**Boiler heating element 2800W 230V**L=380 mm; triangular flange 72x72 mm
NUC / EUC / KUC / NUCA / ZUCA / FUCA / EUCA

Electrolux 049980

414463**Boiler heating element 7500W 220V**

L=325 mm - D48 - D480

Electrolux 0H2276 0K7526

584151**Boiler heating element 3000W 230V**L=190 mm; triangular flange 83,5x78,8 mm;
Øint. 52 mm; faston 6,3 mm

Electrolux 0L3725

315936**Boiler heating element 4500/4900W
230/400V**

L=375 mm; round flange Ø 64 mm; with bulb housing L=235 mm; O-ring 5,34x46,99 mm

Electrolux 0L3590

415025**Boiler heating element 3000W 230V**L=165 mm; triangular flange 83x83 mm
LB1 / LB2 / GW1 / GW2 / WT1 / WT2 / NGW

Electrolux 048489 048927 0L1634

340183**Boiler heating element 2400W 240V**

L=200 mm; triangular flange 72x72 mm

Electrolux 069455 069672 0A6035

414784**Boiler heating element 4500W 230V**L=340 mm; triangular flange 92x92 mm Ø
int.57,5 mm; with thermal fuse
EUCI / EUCAI / NUCAI

Electrolux 049899 0L2107 0L2651

415007**Boiler heating element 2800W 230V**L=320 mm; triangular flange 83x83 mm
LS3

Electrolux 049060 049371

415006**Boiler heating element 4500W 240V**L=400 mm; triangular flange
RPN/EI760

Electrolux 045518 052620 0L1875

Heating Elements

415009**Boiler heating element 4500W 230V**

L=380 mm; triangular flange 83,5x78,5 mm
 Øint. 47 mm; with bulb housing; faston 6,3x0,8 mm
 LS3

Electrolux 026453 049307 052905 0L1876

414478**Boiler heating element 6000W 254V**

L=335 mm; triangular flange
 EUCI/EUCAI/NUCAI

Electrolux 049900 0L2247 0L2726

317157**Boiler heating element 4500W 230V**

L=263 mm; triangular flange 81x78,5 mm; Øint.
 50,5 mm; connection M4

Electrolux 0L2440 0L2770

415010**Boiler heating element 6000W 230V**

L=340 mm; triangular flange 92x92 mm
 Øint.57,5 mm; with thermal fuse
 EUCI/EUCAI/NUCAI

Electrolux 049898 0L2108 0L2725

415026**Boiler heating element 4500W 230V**

L=230 mm; triangular flange 83x83 mm Øint.
 47,5 mm
 LB1/LB2/GW1/GW2/WT1/WT2/NGW

Electrolux 048284 048928 0H2568

415041**Boiler heating element 6000W 230V**

L=390 mm; triangular flange 83x83 mm Øint.
 47,5 mm
 LS7D/LS7/LV70/FL700/HYDRA700/Z70

Electrolux 048221 048513

415288**Boiler heating element 4500W 230V**

L=270 mm; triangular flange 83x83 mm Øint.
 47,5 mm; with thermal fuse
 NUC/EUC/KUC/NUCA/ZUCA/FUCA/EUCA

Electrolux 049955 0L2129 0L2652

414996**Boiler heating element 9000W 230V**

L=350 mm; triangular flange 90x90 mm Øint.
 57,5 mm; connection faston 6,3x0,8 mm; with
 thermal fuse
 ZHT/OHT/KHT/NHT/EHT

Electrolux 049992 0L1630 0L2653

415039**Boiler heating element 4500W 230V**

L=320 mm; triangular flange 83,5x78,5 mm
 Øint. 47 mm; with bulb housing; faston 6,3x0,8 mm
 LS4 - C50

Electrolux 047847 0H2476 0K8125 0L1849

414994**Tank heating element 800W 230V**

dim. 160x34 mm; flange 50x26 mm; with
 gasket

Electrolux 049059

Heating Elements

415287

Tank heating element 1800W 240V
LS

Electrolux 046285 047593 047594

414786

Tank heating element 2200W 440V
dim. 365x78 mm; faston 6,3 mm

Electrolux 048998

415176

Tank heating element 1800W 220V
dim. 325x88 mm; with fixing nut M14x1,5

Electrolux 046284 047506 047507

415225

Tank heating element 2200W 200V
dim. 365x75 mm; flange 27,3x51 mm; faston 6,3 mm

Electrolux 048925

337064

Tank heating element 2800W 230V
LCFBE003

Electrolux 0U1025

415113

Tank heating element 2200W 220V
dim. 330x85 mm; with nut Ø 14 mm

Electrolux 046404 047620 047848 048000
0K8766

415292

Tank heating element 2000W 230V
dim. 365x80xh27 mm; flange 50x27 mm

Electrolux 049954 0L2109

415016

Tank heating element 2200W 230V
dim. 360x75 mm; flange 50x27 mm with gasket

Electrolux 048228 048924 0KE906 0L2340

317156

Heating element 2000W 230V
dim. 365x75 mm; flange 27,3x51 mm; M4

Electrolux 0L2439

415049

Tank heating element 3000W 230V
dim. 360x75 mm; faston 6,3x0,8 mm; complete gasket

Electrolux 048491 0L1870

Heating Elements

364369

Tank heating element 2700W 230/240V
L=335 mm, flange with gasket 62x27 mm

Electrolux 0L3669

318611

Contacts protection cover

Electrolux 069551

339697

Tank heating element 2050/2450W 220/240V
dim. 260x125 mm; connection M4; mounting distance 70 mm; thread M10x1 mm

Electrolux 069437 069671 069791 0K3786
0K3788**440922**

Flange for heating element

Electrolux 0E5492 478085900

415037

Tank heating element gasket in EPDM

Electrolux 048483

412421

Flange for heating element

Ø 50x90; 6 hole Ø 7,5 mm e 2 hole thread M4x1

Electrolux 003362 065558 0K2022 0K2917

337079

Gasket 42x52x6 mm VITON

Electrolux 070308

440794

Bracket LS720

Electrolux 048429

438593

Contacts protection cover

Electrolux 065560

Thermostats

327421

Bi-metal thermostat 1P 1NO
faston 6.3

Electrolux 0H2279 0K7537 478045500

339691

Operating thermostat 1P 53°C
coated capillary L=600 mm; bulb Ø 9,5x16,5 mm; gland nut M14; 16A 250V

Electrolux 069423 0H1277

349229

Bi-metal thermostat NO52/NC60
3 contacts 16A 250V; contact 2-1 NO operat. 52/40°C; contact 2-3 NC operating temperature 60/48°C

Electrolux 048804 0L4312

432312

Operating thermostat 1P 29÷82°C
capillary L=900 mm; bulb Ø 6x145 mm; 15A 400V

Electrolux 049255 0L2122

349227

Bi-metal thermostat 52-60°C
60L50F with yellow/brown point; contact C-2=NC; contact C-1=NO operating temperature 30/46°C; contacts capacity 16A 250V

Electrolux 045495 047508 048487 0H2569

337292

Operating thermostat 1P 85°C
capillary L=1500 mm; bulb Ø 6x115 mm

Electrolux 070350 0HA133

324386

Bi-metal thermostat Klixon 105 °C
faston 6,3x0,8 mm

Electrolux 0L2895

432314

Operating thermostat 1P 30÷90°C
capillary L=1250 mm; bulb Ø 6x113 mm; 15A 250V

Electrolux 046524 048266 049243 068012
0L1633 0L2144

435232

Bi-metal thermostat 110°C
with manual reset; 16A 250V

Electrolux 048287 048887 0K8665

429027

Operating thermostat 1P 30÷110°C
capillary L=900 mm; bulb Ø 6x112 mm; gland nut M9x1 + fittings

Electrolux 078030 0H2050 0K6920 0K7034

Thermostats

432344**Operating thermostat 1P 30±110°C**

capillary L=3000 mm; bulb Ø 6x112 mm; with gland nut M9x1

Electrolux 047285 0E5032 0H2117 0K7035
0KE345 475770402

432537**Operating thermostat 3P 30±90°C [KIT]**

capillary L=900 mm; bulb Ø 6x215 mm; 16(4)A 380V

Electrolux 045169 0C5345 0K2919 0K5114

432300**Operating thermostat 3P 30±90°C**

coated capillary L=900 mm; bulb Ø 6x220 mm - 10A 400V

Electrolux 049191

317003**Safety thermostat 1P 83°C**

coated capillary L=610 mm; bulb Ø 6x95 mm

Electrolux 069422 0A6040

432302**Safety thermostat 3P 140°C**

capillary L=900 mm; bulb Ø 6x180 mm

Electrolux 051644 0H2008 0K2938

416385**Gasket for bulb LS7**

Ø 3x9 mm Ø est.13 mm - h 7 mm

Electrolux 048526

438733**Gland nut M12 - Ø 6,25 mm**

L=18 mm

Electrolux 067899 0KX146

430474**Gland nut M12 - Ø 6,5 mm**

L=18,5 mm

Electrolux 0E5033 0K7534 0KE421 478044600

415426**Gland nut H=40 mm**

Connection M/F 16.5/9 mm

Electrolux 067958

435110**Gland nut M16xL16 mm**

Electrolux 0L0280

Thermostats

317180



Bracket 28x78 mm

Electrolux 0L2894

441776



Thermostat holder

Electrolux 048987

Timers

339910



Timer 40" 230V 50/60Hz
cavo L=250 mm; without pin

Electrolux 069420 069673 0H1278

317358



Timer chambers 4
120sec. 230V 50/60Hz; cable L=280 mm

Electrolux 0L2084 0L3419

339690



Timer 3 chambers
150" 230V 50/60Hz; without shaft; cable
L=280 mm

Electrolux 069419 069669 069674 069926
0A6086 0A6087 0H1279 0K3795

347726



Timer chambers 4
22,5 min 230V 50Hz with faston+cover faston

Electrolux 049076 049251 0L3421

435787



Timer P25 chambers 4
22,5 min.; 230V 60Hz

Electrolux 049218 049252 0L2009

347750



Timer chambers 5
180 - 6 sec.; 2 motor 230V 50/60Hz; cable
L=280 mm

Electrolux 048303 0L3642

Timers

435341**Timer chambers 7 - 50Hz**

2 motors 230V 50Hz; slow motor 1 rotation/6 minutes; fast motor 1 rotation/6 sec

Electrolux 049054 049256 0L3420 0L3675

347980**Timer P25 chambers 7**

6 min. - 6 sec.; 230V 60Hz

Electrolux 049216

435793**Timer chambers 7 - 60Hz**

2 motors 230V 60Hz; slow motor 1 rotation/6 minutes; fast motor 1 rotation/6 sec

Electrolux 049405 0L3453

317882**Timer 16A 220-240V 50-60Hz**

Electrolux 046621

Transformers

349824**Transformer 30VA 50/60Hz**

PRI.: 230V, SEC.: 0-18-24Vdc

Electrolux 049617 0L0540

Cables

345056



Wiring harness
ZUC / XUC / AUC / ET

Electrolux 0L0049 0L2486

345061



Wiring harness

Electrolux 049979 0L2485

613609



Wiring harness
NUC / EUC / ZUC / ET / AUC

Electrolux 0L0768

Drain components

440896



Drain manifold

Electrolux 048430 0L0081

435079



Drain manifold [KIT]
Ø 124 mm H=146 mm

Electrolux 048325 0L1629

441793



Drain manifold

Electrolux 049035

585584



Drain manifold

Electrolux 046395

Drain components

412060



Drain manifold KIT
dim. 160x135x130 mm

Electrolux 047457 0L1638

524350



Drip tray

Electrolux 049362

441647



Drain manifold

Electrolux 049600

438460



Gasket Ø 47x59x3 mm

Electrolux 046595

435260



Stopples for manifold

Electrolux 046596

441799



Gasket Ø 50x60x1,5 mm

Electrolux 049828

438404



Ring nut Ø 122 mm
H=20 mm

Electrolux 048326

438484



Gasket Ø 50x74x3 mm

Electrolux 048230

441701



Plug Ø 34x41x23 mm

Electrolux 047555

416279



Gasket Ø 82x89x3 mm

Electrolux 045461 046593 0KE876

Drain components

337106



Drain plate 1" 1/4 H=43 mm
overflow pipe housing Ø 30,5/34 mm

Electrolux 0U0997

338703



Overflow pipe Ø 30x210 mm in plastic

Electrolux 047460

441927



Overflow pipe Ø 16x185 mm

Electrolux 049194

338603



Overflow pipe Ø 29x245 mm

Electrolux 047556 0H2555

524382



Overflow pipe Ø 24x185 mm
LB1

Electrolux 049195

441928



Overflow pipe Ø 38x350 mm

Electrolux 049140

435090



Overflow pipe Ø 26x277 mm
in plastic

Electrolux 048842

414439



Overflow pipe Ø 40x215 mm

Electrolux 0H2462 0K7332 0K8080 0K1779

435253



Overflow pipe Ø 26x280 mm
in plastic

Electrolux 048323

338642



Overflow pipe Ø 40x430 mm with filter
in plastic

Electrolux 045476

Drain components

337068



Overflow pipe Ø 35x116 mm INOX

Electrolux 0U1008

339994



Overflow pipe Ø 16x25x210 mm

Electrolux 069526

441603



Plug for overflow pipe
Ø 80x20 mm

Electrolux 048231

Dispensers and Peristaltic pump

518733



Rinse aid hydraulic dispenser [Kit]

adjust. capacity 0+4 cm³; min. pressure 0,5 bar; polyethylene pipe fittings Ø ext. 6 mm; hose Ø 4x6x2000 mm

Electrolux 045478 047447 048223 048496
048715 049484 0L0094 0L3182
0L4295

325646



Rinse aid peristaltic pump fixed capacity

mod. NPG-0,4; fixed flow rate 0,4 L/h; 3 bar; without rubber holder, conical nut; 8W 230V 50/60Hz; cable L=200 mm; hose in sekobril; (internal use)

Electrolux 049311 049416 049625 0KE953
0L0697 0S0704 0S1713 0S1989

508831



Hose for rinse aid pump sekobril Ø 3x8 mm

610871



Rinse aid peristaltic pump w/speed adj. (external use)

mod. PR-1; flow rate adj. from 0,15±1 lt/h press. 3 bar; 230V 50Hz; protection IP65; cable L=1200 mm; Hose in sekobril; installation kit included

Electrolux 0S0671

Dispensers and Peristaltic pump

610862



Detergent peristaltic pump fixed capacity (internal use)
mod. NPG-3; fixed flow rate 3 L/h; 0,1 bar; 230V 50Hz cable L=200 mm; hose in Santoprene; installation kit included

Electrolux 049312 049417 049624 0KE952
0L0704 0S0705 864218

410180



Hose for detergent pump Santoprene Ø 6,25x10,55 mm

582854



Detergent peristaltic pump adjust. Capacity
mod. NBR-3; flow rate adj. 0,3÷3 lt/h 0,1 bar; without rubber holder, conical nut; 230V 50Hz; cable L=1200 mm; hose in Santoprene; installation kit included; (internal use)

Electrolux 0S1710 0S1987

508856



Hose for detergent pump Santoprene Ø 6,25x10,65 mm

610868



Detergent peristaltic pump adj. capacity (internal use)
mod. NBR-3; flow rate adj. 0,3÷3 lt/h 0,1 bar; 230V 50/60Hz; cable L=1200 mm; installation kit included

Electrolux 049469 0S0707 0S1338

410180



Hose for detergent pump Santoprene Ø 6,25x10,55 mm

610870



Detergent peristaltic pump w/speed adj. (external use)
mod. PR-4; flow rate from 0,6÷4 lt/h press. 0,1 bar; 230V 50Hz; protection IP65; hose in Santoprene; cable L=2750; installation kit included;

Electrolux 0S0669

700435



Detergent peristaltic pump w/conductivity probe
mod. PA-6; flow rate 6 lt/h press. 0,1 bar; 230V 50Hz; protection IP65; hose in Santoprene; cable L=2750 mm + L=2750 mm; installation kit included

Electrolux 0G3344 0S0670

584863



Detergent peristaltic pump fixed capacity
mod. NPG-1,5; fixed flow rate 1,5 L/h; 0,1 bar; without rubber holder, conical nut; 230V 50Hz cable L=200 mm; hose in Santoprene; (internal use)

Electrolux 0L0507 0S1712 0S1988

582853



Detergent peristaltic pump fixed capacity
mod. NPG-3; fixed flow rate 3 L/h; 0,1 bar; without rubber holder, conical nut; 230V 50Hz cable L=200 mm; hose in Santoprene; installation kit included; (internal use)


Electrolux 0S1711 0S1986

508856



Hose for detergent pump Santoprene Ø 6,25x10,65 mm

610865

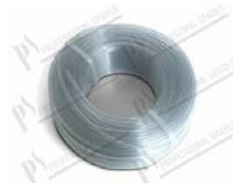

PVC transparent hose Ø 4x6 mm [hank 100 mt]

Electrolux 0S2772

524153



Stiff polyethylene grey hose Ø 4x6 L=2660 mm, Tmax 130°C
suitable for detergent pump, working T. -20 +60°C, max pressure 10 bar.

Electrolux 049360 049905 0L1163

Dispensers and Peristaltic pump

532483



Stiff polyethylene blue hose Ø 4x6 mm
[hank 100 mt]
Feeding hose rinse peristaltic pump

Electrolux 0S2101

610864



Pipe fitting 90° M10x22 mm inox
thread Ltot=22 mm, per tubo Ø 4x6 mm

Electrolux 049357 0S0674 0U0998

339721



PVC green hose Ø 4x7 mm (sold by meter)

Electrolux 069480 0HA135

317496



Ring nut M10x1 (2 pcs)
for hose Ø 4x6 mm

Electrolux 0L2071

378314



PVC transparent hose Ø 6x10 mm (sold by meter)

Electrolux 0L2661

317440



Pipe fitting with nut
for hose Ø 6 mm

Electrolux 049941

410373



Suction filter in inox for hose Ø 4x6 mm
Ø 20x18 mm

Electrolux 049356 0S1028

436193



Plug

Electrolux 0L0349

337007



Filter with non-return valve Ø 25xLtot. 52 mm
connection for pipe Ø 4x6 mm

Electrolux 0U1001

438249



Pipe fitting 90° M10 mm inox
thread L=12 mm; for hose Ø 4x6 mm

Electrolux 049557 049801 0KA991

Dispensers and Peristaltic pump

410181



Hose for rinse aid pump seko brill Ø 3x8 mm
L=175 mm - rubber holder Ø 4x6 mm

Electrolux 049418

412190



Rinse aid container

Electrolux 047549

410180



Hose for detergent pump Santoprene Ø 6,25x10,55 mm
L=180 mm - rubber holder Ø 4x6 mm

Electrolux 049419 0S0678

441774



Rinse aid container

Electrolux 049024 049225

331546



Pipe for dispenser
L=1040 mm

Electrolux 069657

440607



Rinse aid container

Electrolux 049975

338624



Rinse aid suction hose

Electrolux 047552

339913



Rinse aid container

Electrolux 069647 0K4424

410378



Nonreturn valve 1/8" for hose Ø 4x6 mm

Electrolux 049358

412187



Lid for 412190

Electrolux 047551

Dispensers and Peristaltic pump

412192



Funnel for rinse

Electrolux 047548 049331

349608



Gasket Ø 42x56x3,3 mm

Electrolux 030186

410240



Nut

Electrolux 047550

Solenoid Valves and Reducers

349160



Solenoid valve 90° - 1 way - 220/240V
50/60Hz - Ø 14 mm
with fastons; inlet Ø 3/4" with filter and inlet
reducer 20 lt/min; Tmax 90°C

Electrolux 045701 046320 047466 047529
047843 048178 048179 048571

200271



Solenoid valve 90° - 2 ways - 220/240V
50/60Hz - Ø 14 mm
with fastons; inlet Ø 3/4" with filter; Tmax
90°C

Electrolux 049230

435074



Solenoid valve 90° - 1 way - 220/240V
50/60Hz - Ø 14 mm
with fastons; inlet Ø 3/4" with filter and inlet
reducer 20 lt/min; Tmax 90°C

Electrolux 048894

435353



Solenoid valve 90° - 2 ways - 220/240V
50/60Hz - Ø 14 mm
with fastons; inlet Ø 3/4" with filter and inlet
pressure reducer 10 lt/min; Tmax 90°C

Electrolux 049056 0L3441

Solenoid Valves and Reducers

435347



Solenoid valve 90° - 3 ways - 220/240V 50/60Hz - Ø 14 mm
with fastons; inlet Ø 3/4" with filter and inlet reducer 20 lt/min; 1 outlet reducer 0,5 lt/min; Tmax 90°C

Electrolux 049077

435314



Solenoid valve 180° - 2 ways - 220/240V 50/60Hz - Ø 10,5 mm
with fastons; inlet Ø 3/4" with filter and inlet reducer 12 lt/min; outlet reducer 0,25 lt/min; Tmax 90°C

Electrolux 046654 047579 057814

434655



Inlet pressure reducer 5 lt/min [black-Elbi]

Electrolux 0L0169

200124



Solenoid valve 180° - 2 ways - 220/240V 50/60Hz - Ø 10,5 mm
with fastons; inlet Ø 3/4" with filter; Tmax 90°C

Electrolux 069463 0A6046 0H9966 0HA162
0K5389 0L3028 0W1RDW

310829



Inlet pressure reducer 5,5 lt/min [black-Elbi]

Electrolux 0L0170

339703



Solenoid valve 180° - 3 ways - 220/240V 50/60Hz - Ø 10,5 mm
with fastons; inlet Ø 3/4" with filter; outlet reducer 0,5 lt/min; Tmax 90°C

Electrolux 069464 0A6045

200131



Inlet pressure reducer 10 lt/min [natural-Elbi]

Electrolux 049650

583809



Solenoid valve 180° - 2 way - 220/240V 50/60Hz - Ø 10,5 mm
with fastons; inlet Ø 3/4" with filter; Tmax 90°C

Electrolux 069463_ 0A6046_ 0H9966_ 0HA162_
0K5389_ 0L3028_ 0W1RDW_

435409



Solenoid valve 180° - 1 way - 220/240V 50/60Hz - Ø 10,5 mm
with fastons; inlet Ø 3/4" with filter; Tmax 90°C

Electrolux 046507 046633 046655 047370
047533 047756 053827 055132
070312 086014 086500 0H9339
0K8513 0KD793 0L3335

435218



Solenoid valve 90° - 1 way - 220/240V 50/60Hz - Ø 14 mm
rast 5; inlet Ø 3/4" with filter and inlet reducer 10 lt/min; Tmax 90°C; without bracket

Electrolux 049626

Solenoid Valves and Reducers

317159



**Solenoid valve 90° - 1 way - 220/240V
50/60Hz - Ø 14 mm**
rast 5; inlet Ø 3/4" with filter and inlet reducer
10 lt/min; Tmax 90°C

Electrolux 0L2065 0L3448

440495



**Solenoid valve 90° - 3 ways - 220/240V
50Hz - Ø 14 mm**
rast 5; inlet Ø 3/4" with filter and reducer 5,5
lt/min; outlet reducer 0,5 lt/min and 1,2 lt/min;
Tmax 90°C

Electrolux 0L0260 0L3444

349163



**Solenoid valve 90° - 1 way - 200V 50/60Hz
- Ø 14 mm**
rast 5; inlet Ø 3/4" with filter and inlet reducer
20 L/min; Tmax 90°C

Electrolux 048619 049157

613616



**Solenoid valve 180° - 1 way - 220/240V
50/60Hz - Ø 14 mm**
rast 5; inlet Ø 3/4" with filter and inlet reducer
5 lt/min; Tmax 90°C

Electrolux 0E2531 0L0776 0L3447 0W0706

349307



**Solenoid valve 90° - 1 way - 220/240V
50/60Hz - Ø 14 mm**
rast 5; inlet Ø 3/4" with filter and reducer 20
lt/min; Tmax 90°C

Electrolux 048817 0L3440

533521



**Solenoid valve 180° - 1 way - 220/240V
50/60Hz - Ø 14 mm**
rast 5; inlet Ø 3/4" with filter and inlet reducer
5,5 lt/min; Tmax 90°C

Electrolux 0L0121 0L0567

349151



**Solenoid valve 90° - 1 way - 220/240V
50/60Hz - Ø 14 mm**
rast 5; inlet Ø 3/4" with filter and inlet reducer
16 lt/min; Tmax 90°C; coil 90°

Electrolux 049308 049334

533522



**Solenoid valve 180° - 1 way - 220/240V
50-60Hz - Ø 14 mm**
rast 5; inlet Ø 3/4" with filter and inlet reducer
10 lt/min; Tmax 90°C

Electrolux 0L0568 0L3446

349158



**Solenoid valve 90° - 1 way - 220/240V
50/60Hz - Ø 14 mm**
rast 5; inlet Ø 3/4" with filter and inlet reducer
5,5 lt/min; Tmax 90°C; coil 90°

Electrolux 049452 049983

533519



**Solenoid valve 180° - 1 way - 220/240V
50/60Hz - Ø 14 mm**
rast 5; inlet Ø 3/4" with inlet reducer 20 lt/min;
Tmax 90°C

Electrolux 0L0566 0L3445

Solenoid Valves and Reducers

532482



**Solenoid brass valve L182 - NC - G3/8" -
200V 50-60Hz**

L=60 mm - EPDM membrane - Fluid. Temp
-10°C+90°C; 0,35-20bar

Electrolux 0L0570 0L2857

532485



**Solenoid brass valve L182 - NC -
G3/8"-208-240V 50/60Hz**

L=60 mm; EPDM membrane - UL/CSA;
0,35-16bar

Electrolux 0L0488 0L0569 0L2656

438451



**Solenoid brass valve - NC - G3/8" - 230V
50Hz**

Electrolux 049509

417611



**Solenoid brass valve EV220 - NC - G1/2" -
9W 230V 50Hz**

L=58 mm; Tmax -30/+100°C; 0,3-10bar

Electrolux 0H2412 0K6761 0K7060 0K7507
0KA629

531718



Electromagnet 15W 24Vdc

Electrolux 0L0542

Filters

438416



Water filter 1/2" - L=110 mm

Electrolux 048834

518747



Support filter

Electrolux 0L0078

433654



Water filter 3/4" L=121 mm

Electrolux 048746

441788



Tank filter 415x170x15 mm

Electrolux 049051

441269



**Water filter 3/4" - L=68 mm
bronze body and filter in INOX**

Electrolux 053037 068121 0KL216

441548



Tank filter 478x227 mm

Electrolux 049908

441775



Filter Øext 12,5 mm

Electrolux 049022

438269



Tank filter 485x495 mm - inox

Electrolux 048331 048332 048584 049537

337015



Drain pump filter 118x52x48 mm

Electrolux 0U1018

412052



Pump suction filter

Electrolux 047456 0A6113 0K8666

Filters

441738



Pump suction filter Ø 103xh115 mm

Electrolux 049032 0L2757

435080



Pump suction filter Ø 131x107 mm

Electrolux 048324

429942

Basket filter Ø 150x70 mm
for dishwasher table

Electrolux 0E5376 0K7236

441800



Pump filter

Electrolux 048431 048515 049633 049647

316363



Tank filter Ø 155xh85 mm

Electrolux 0L3526

Wash units

533535



Wash arm complete with hub L=480 mm
hole Ø 14 mm; LS6E / WT30E / LS7 / WT40 /
LS9 / WT55


Electrolux 048336 048821 0KE914 0L0598

311312



Rinse arm L=472 mm mounting upper/lowe

412044



Rinse Jet plug M11x1,5

435311



Pin for jets M12x1 L=43 mm

438537



Knurled nut M12x1 Ø 35 mm H=6 mm

438238



Wash arm L=410 mm
hole Ø 35 mm

Electrolux 049044

435304



Wash arm L=193 mm
connection Ø 31 mm

Electrolux 049295

337302



Wash arm

Electrolux 070329

337071



Wash arm DX/SX L=165 mm

Electrolux 070320

337203



Plug

337237



Sheet metal screws TBC 3,5x13 mm INOX

337098



O-ring 1,78x15,60 mm EPDM

435783



Rinse arm L=670
10 nozzle

Electrolux 049152

435311



Pin for jets M12x1 L=43 mm

Wash units

311312



Rinse arm L=472 mm mounting
upper/lowe
Ø 12 mm - 7 nozzle


Electrolux 048248 048337 048542 048716
0T0325

533535



Wash arm complete with hub L=480 mm

412044



Rinse Jet plug M11x1,5

435311



Pin for jets M12x1 L=43 mm

438537



Knurled nut M12x1 Ø 35 mm H=6 mm

438239



Rinse arm L=400 mm

Electrolux 049049 0L2096

412044



Rinse Jet plug M11x1,5

435246



Rinse arm L=208 mm

Electrolux 047472 047926 047988 048142
0A6159

343009



Rinse arm plug Ø 22,7 mm

438361



O-ring 1,78x14,00 mm NBR

435247



Rinse arm L=214 mm

Electrolux 047989 049297

339839



Upper rinse arm L=245 mm

Electrolux 069577 0A6075 0H1292

337666



Hub for jets Ø 78/67x35 mm

Electrolux 046362

Wash units

438408



Hub for jets Ø 76/67x35 mm

Electrolux 048246 048401

412252



Hub for jets
dim. 132x85 mm; int.Ø18 e 31 mm

Electrolux 047468 047469 047990 0A6108
0K1124

438437



Hub for jets Ø32mm Ø63mm

Electrolux 049293

339981



Hub for jets

Electrolux 069452

337272



Hub for jets

Electrolux 070319

441677



Shaft for support

Electrolux 049292

337587



Shaft for support Ø 8x16x80 mm

Electrolux 047464

337554



Shaft for support Ø 10,5x100 mm

Electrolux 046363

435078



Shaft for support Ø 14x50 mm

Electrolux 048333

339978



Shaft for support M12/F9
Ltot=57.5 mm

Electrolux 069445

Wash units

411304



Shaft for support

Electrolux 047467

441679



Support for lower jets

Electrolux 049290

340003



Shaft for support H=32,6 mm

Electrolux 069498

438414



Holder for lower jets [cpl. kit]

Electrolux 048329 048819 0L1628

337278



Shaft for support Øext 12x100 mm

Electrolux 070330

438259



Support for lower jets

Electrolux 048235

337099



Shaft for support Ø 17x74x105 mm

Electrolux 0U1007

610809



Support for upper jets with shaft Ø 14mm

Electrolux 0L0695

337281



Shaft for support Ø 7x17x100 mm

Electrolux 070332

412061



Support for lower jets

Electrolux 047461 0H2551

Wash units

412262



Support for lower jets

Electrolux 047463 048145 0A6157 0KE893

364940



Top/lower jet support

Electrolux 0L3340

337300

Support for lower jets
connection INOX Ø 40 mm, inlet Øext 38 mm

Electrolux 070334

350034

Nut for wash arm bearing
Ø 22/35x34 mm

Electrolux 0L3342

337333

Support for lower jets
connection INOX Ø 40 mm, inlet Øext 38/35 mm

Electrolux 070341

613617



Connection pipe for jets

Electrolux 0L0777

337101

Support for lower jets
pipe-fitting 90° 3/8", connection pipe Øext 35/38 mm, coupling arm Øext 40 mm

Electrolux 0U1009

412146

Connection pipe for jets
dim. 600x350x90 mm

Electrolux 049087 049946

340006



Support upper rinse arm Ø 23 mm - L=51 mm

Electrolux 069500

412049

Connection pipe for jets
dim. 540x350x80 mm

Electrolux 049945

Wash units

434024



Connection pipe for jets
for Undercounter Dishwasher

Electrolux 049291 0L0125

337417



Washing arm plug

Electrolux 046266

441771



Connection pipe for jets

Electrolux 048338

337427



Rinse Jet plug
in metal with internal thread M12x1; for rinse
jet cod. 435096

Electrolux 048289

440608



Connection pipe for jets
for Undercounter Dishwasher

Electrolux 048822 0L0095

338709



Rinse Jet plug M8,5 mm

Electrolux 049048

435382



Rinse Jet plug M16

Electrolux 049299 0K8661

412044



Rinse Jet plug M11x1,5
external thread; for rinse jet cod. 435096

Electrolux 048714

343009



Rinse arm plug Ø 22,7 mm
thread M14

Electrolux 047475 0A6160 0H2541

434652



Washing arm plug

Electrolux 047471 049296 0A6109 0H2540

Wash units

431916



Plug

Electrolux 0H2184 0K7314

435311



Pin for jets M12x1 L=43 mm

Electrolux 048290 0E5641 0T2704

412184



Nozzle fastener

Electrolux 046273

441789



Pin for jets

Electrolux 049046

364891



Closed head rinse nozzle

Electrolux 0L3403

339698



Rinsing nozzle

Electrolux 069451 0K3717

431915



Rinsing nozzle

Electrolux 0H2183 0K7313

340111



Washing nozzle Ø 19 mm

Electrolux 069641 0H1263 0H3824 0K3660

412181



Rinsing nozzle

Electrolux 046272

363008



Spacer for hub Ø 21,5xh15 mm

Electrolux 0L3343

Wash units

363500



Lower pipe coupling Ø 90xh94 mm

Electrolux 0L3344

343003



Protection

Electrolux 047991

439855



Shutter

Electrolux 048820 0KE924

301576



Nut Ø 21-25 mm

Electrolux 0L0761 0L0903

439806



Shutter Ø 55 mm

Electrolux 048238 048645 048931

441740



Reduction

Electrolux 048650

441608



Flange Ø 69 mm - H=15 mm

Electrolux 048192

441676



Protection

Electrolux 049294

441607



Pipe union Ø 24,5 mm

Electrolux 048193

438237



Bush

Electrolux 049042

Wash units

317150

Plastic clamp with ratchet \varnothing 12÷14/6 mm

Electrolux 0L3522

414712

Gasket \varnothing 85x120 mm
for upper jet ring nut

Electrolux 048823

339999

Sleeve \varnothing 18x20x26 mm

Electrolux 069493

438261

Ring nut \varnothing 62x100xh48 mm

Electrolux 048237 0KE908

518719

Gasket \varnothing 88x120x1 mm

Electrolux 0L0110

441790

Ring nut \varnothing int 20x8 mm
 \varnothing ext 34 mm

Electrolux 049043

438236

Gasket \varnothing 38x49,5x2 mm

Electrolux 049038

441792

Ring nut \varnothing int 35x17 mm

Electrolux 049039

438260

Gasket \varnothing 70x100 mm

Electrolux 048236

441686

Ring nut \varnothing thread 64.5 mm H=43 mm
Nut \varnothing 87 mm

Electrolux 048330

Wash units

441847



Ring nut Øext. 110xh13,5 mm

Electrolux 048824

340102



Flat gasket Ø 12,4x16,4x1,5 mm - PTFE

Electrolux 069643

441736



Ring nut Ø 113x135x23 mm

Electrolux 049034

339903



Ring nut washing nozzle

Electrolux 069448 0H1284 0H3804 0K3818

337116



Hexagonal flanged nut M32 plastic flange Ø 52.5 mm

Electrolux 070316

339904



Ring nut rinse nozzle

Electrolux 069450 0H1283 0H3806

337330



Bush

Electrolux 070348

340107



Spray Ø 7 mm

Electrolux 069642 0H1269 0K3719

337293



Spacer

Electrolux 070331

339920



Ring nut fixing

Electrolux 069497

Wash units

339873



Spring 1,2x21,5x27 mm

Electrolux 069977

Air-gaps

582062



Air-break (closed window) - [Kit]
inlet/outlet \varnothing 27/12 mm; dim. 270x200x60 mm

Electrolux 0G6643

431681



Air break
with pipe fitting \varnothing_{ext} 6 mm

Electrolux 0H2282 0K7542 0KE422 478049600

362438



Air break
dim. 430x230x46 mm

Electrolux 0L3328

435224



Air-break [closed window]
inlet/outlet \varnothing 27/12 mm; dim. 270x200x60 mm

Electrolux 049459 0KB770 0L2666

435254



Air break 47x59xh26,5 mm
pipe fitting \varnothing 7 mm

Electrolux 048308 0K8750

434662



Air break [open window]
inlet/outlet \varnothing 27/12 mm; dim. 25x26x70 mm

Electrolux 049481 0L2435

439854

**Air break**

Electrolux 048853 0L4781

513159

**Air break**

Electrolux 049288 0L0459

Air-gaps

323821

**Air break [closed window]**

inlet/outlet Ø 27/12 mm; air holes Ø 5,6x13 mm
dim. 270x200x60 mm

Electrolux 0L0268 0L2474

315746

**Air brake 84x81x42mm**

complete with pipe fitting, double wire clamp,
O-ring and screw

Electrolux 069515 069515_ 0H1289 0K4419

435187

**Air break boiler**

Electrolux 049628 049776 0L0098

438450

**Ring nut for LS10**

Ø 50x64 mm

Electrolux 049480 0KB772

435134

**Air break Ø 44x113 mm**

Electrolux 046631 0H2542 0K8662 542601001

524109

**Plug**

Electrolux 049849

325534

**Air break**

Electrolux 0L2849

317436

**Protection air break 85x165x20 mm**

Electrolux 0L2560

412158

**Air break 150x65x65 mm**

Electrolux 045351 045459

441797

**Protection**

Electrolux 049847

Air-gaps

438734



Ring

Electrolux 045507 046881 067930

340129

Screw for air brake M8 - Ltot.=28 mm
CH19

Electrolux 069517 069646

339960

T-connection Ø 8,4x20xh14 mm
rubber holder Ø 5 mm

Electrolux 069645 069670 0A6089 0K9317

Water conditioning

339836



Salt container

Electrolux 069680

311048

Salt container
from SN 808...

Electrolux 0L1692

440487



Salt container Ø 120 mm - H=120 mm

Electrolux 049075

436019



Salt container

Electrolux 0L0271

Water conditioning

339685



Funnel for salt tank
Ø 34x96 mm

Electrolux 047604

613589



Gasket 250x64.5x1 mm

Electrolux 0L0750

311052



Gasket Ø 56x67x3 mm

Electrolux 0L1691

438139



Softener double
dim. 310x180 mm

Electrolux 0L0270

311059



Ring nut Ø 51mm

Electrolux 0L1693

362373



Softener 4-fold
with nonreturn valve

Electrolux 0L3653

613588



Plug Ø 29 mm
Øint 26 mm

Electrolux 0L0749

439799



Softener 4-fold
dim. 380x180 mm

Electrolux 049074

436020



Plug

Electrolux 0L0272

Water conditioning

613606**Internal water softener 450x330 mm**

Electrolux 0L0764 0L0767

613609**Wiring harness****301849****Magnetic microswitch****613607****Solenoid valve 230V 50/60Hz****613607****Solenoid valve 230V 50/60Hz**

Electrolux 0L0766 0L2957

317509**Solenoid valve 230V 50/60Hz**

Electrolux 0L0765

438140

Modular drain valve 180° - 1 via - 110/240V 50/60Hz
 Ø Out 6 mm, Ø In 8,5 mm; Tmax fluid 80°C;
 0,12 A for water softner

Electrolux 0L0273

301623

Water filter for manual water softener 3/4"
 wound wire cartridge 5"

Electrolux 0L1141

301622

Water filter for manual water softener 3/8"
 wound wire cartridge 5"

Electrolux 0L1140

316135

Wound wire filter cartridge 50 micron
 Ø 28,5x62,5x130 mm (NK111 e NK112)

Electrolux 0S1027

325024

Refil filter cartridge Profine blue (small)
 capacity 15000 lt

Electrolux 0S1821 864393

410125**Cationic resin pack 25 lt**

Electrolux 0S0333

Water conditioning

613586**Pipe fitting Ø40 mm**

Electrolux 0L0747

582443**Water purifier**

JG pipe Ø 7x10 mm, JG pipe Ø 1/4 "x 0.170"
 (Ø 4.3x6.35 mm 90 ° fitting JG MF10 mm, JG
 MF fitting 6.4 mm

Electrolux 0S0718 0S1822 864026 864388

312910

Refil cartridge Purity 1200 Clean (blu)
 capacity 13000 lt; partial demineralisation

Electrolux 0S0802

302068

**Descaling cleaning membranes osmosi,
 mod. RO600C**
 Complet 2 filter carboni e 1 descaling 200 gr

Electrolux 0S0730

310336

**Refil cartridge Purity 1200 Clean Extra
 (red)**
 capacity 3100 lt; total demineralisation

Electrolux 0S0804

200278

**Head with adjustable bypass 0-70%;
 fittings M 3/8"**
 with wall holder and rinse valve

Electrolux 0S0712 0S1057 0S1638

200288

Flow meter with digital 100-700 L
 sensor 3/4" MF; L=83 mm; cable L=1500 mm;
 4-60°C; Max 8,6 bar

Electrolux 0S0945

Hoses

414732



Formed hose Ø 32,5x40,5 mm
L=70 mm

Electrolux 048843

538756



Formed hose Ø 43x53 mm L=110 mm

Electrolux 0L0558 0L0612

317512



Formed hose Ø 25x35 mm
L=310 mm

Electrolux 0L0785

440498



Formed hose Øint 63 mm

Electrolux 0L0067

340146



Formed hose Øint 31.5 mm
rubber flange Ø 75 mm

Electrolux 069442

337158



Sleeve Ø 30x33 mm L=70 mm

Electrolux 0U1014

518753



Sleeve Ø 46,5x57 mm / 60x71 mm L=90
mm EPDM

Electrolux 0L0068

518626



Sleeve Ø 38x50 mm L=52 mm EPDM
working temp. -35°C+120°C; Pmax 6 bar

Electrolux 0L0259

613601



Formed hose Ø 25x33 mm / Ø 33x40 mm
L=70 mm EPDM

Electrolux 0L0759

317559



Sleeve Ø 43x54,5 mm L=90 mm EPDM

Electrolux 0L1374

Hoses

438370



Sleeve Ø 60x68 mm L=95 mm EPDM
working temp. -35°C÷120°C; Pmax 6 bar

Electrolux 045456 0L0613

582454



Formed hose 90° Ø 25x35 mm
dim. 81,5x53 mm

Electrolux 0L2851

439796



Formed hose 90° Ø 27x37 mm - Ø 31x41
mm EPDM
dim. 295x80 mm

Electrolux 049080

615056



Formed hose 90° Ø 26x36 mm / Ø 30x40
mm from SN 608...
dim. 172x52 mm

Electrolux 0L1108

337279



Formed hose 90°

Electrolux 070317

441648



Formed hose 90° Ø 27x36 mm
dim. 270x270 mm

Electrolux 049599 0L0813

337407



Formed hose 90° Ø 26,5x39 mm
dim. 106x89 mm

Electrolux 070359

518593



Formed hose 90° Ø 27x33 mm / Ø 31x37
mm EPDM from SN. 202...
dim. 65x68 mm

Electrolux 0L0405

439761



Formed hose 90° Ø 26x36 mm until SN
...607
dim. 170x52 mm

Electrolux 049880

414733



Formed hose 90° Ø 32x38 mm until SN
...201
dim. 63x62 mm

Electrolux 049041

Hoses

414962



Formed hose 90° Ø 35x40 mm

Electrolux 048118

412518



Formed hose Øext. 45 mm

coupling hose Ø 45x55x63 mm, dim.
350x220x175 mm

Electrolux 046372 046616

438406

Formed hose 90° Ø 33,5x43,5 mm / Ø
39x49 mm
dim. 110x95 mm

Electrolux 048328 049149

581988



Formed hose L=643 mm

S-side Ø 25,5x35 mm; straight side Ø 27x35
mm

Electrolux 0L0117

439762

Formed hose 90° Ø 35x45 mm EPDM
dim. 91x80 mm

Electrolux 049877

200003



Hose EPDM Ø 4x7 mm (sold by meter)

working temp. -35°C÷110°C; Pmax 10 bar;
WRAS certified

Electrolux 0L3327

307770

Formed hose 90° Ø 16x23,5 mm L=70/50
mm

Electrolux 0KV671

317825



Hose EPDM Ø 4x7 mm L=2000 mm

working temp. -35°C÷110°C; Pmax 10 bar;
WRAS certified

Electrolux 0DE016 0L3415

317235



Formed hose Ø 29x37 mm

Electrolux 0L2064

319338



Hose EPDM Ø 4x7 mm L=5000 mm

working temp. -35°C÷110°C; Pmax 10 bar;
WRAS certifiedElectrolux 072393 0C4205 0HM323 0K9162
0KC518

Hoses

524155



Hose EPDM Ø 5x12 mm L=600 mm

Electrolux 049904 0L1909

435233



Hose EPDM Ø 5x12 mm L=2300 mm
Tmax 110°C

Electrolux 048168 048225 048226 048883
068638 068792 068793 068794

613622



Hose EPDM Ø 8x13 mm L=300 mm
for hot water; Pmax 10 bar; working temp
-35°C+120°C; Pmax 10 bar

Electrolux 0L0786

337176



Hose EPDM Ø 8x15 mm (sold by meter)
for hot water; Pmax 10 bar; working temp
-35°C+120°C; Pmax 10 bar

Electrolux 0U1049

317177



Hose EPDM Ø 8x15 mm L=1650 mm
for hot water; Pmax 10 bar; working temp
-35°C+120°C; Pmax 10 bar

Electrolux 0L0265

200004



Hose EPDM Ø 11x19 mm - blue - (sold by meter)
Pmax 10 bar; Work Temp. -35°C+110°C; FDA approved

Electrolux 049379 0L3641 0U1051

200002



Hose EPDM Ø 12x19,5 mm (sold by meter)
for hot water - not toxic - Pmax 10 bar -
working temp -35°C+120°C

Electrolux 045451 045807 045808 045942
048531 057763 057791 065535
066081 066082 069091 0E5053
0K8116 0K8670 0L3064 0T3901

700448



Hose EPDM Ø 25,5x35,5 mm (sold by meter)
working temp. -35°C+110°C; Pmax 10 bar

Electrolux 049773 0W0194 0W0195 0W01JR
0W1RL4 0W1RLK 0W3935 0W3953

200006



Hose EPDM Ø 25,5x32,5 mm (sold by meter)
working temp. -35°C+100°C; Pmax 10 bar

Electrolux 049287 0L4453

438277



Hose EPDM Ø 42x52 mm L=430 mm
working temp. -35°C+120°C; Pmax 6 bar

Electrolux 046257 065531

Hoses

438371



Hose EPDM Ø 45x54 mm L=300 mm
working temp. -35°C÷120°C; Pmax 6 bar

Electrolux 045457 045768 045806 068640

338395



Rubber feeder hose 3/4" L=660 mm

Electrolux 048217

436434



**Stiff polyethylene blue hose Ø 4x6 mm
L= 2660 mm**
Feeding hose rinse peristaltic pump

Electrolux 0L0481

438475



Rubber feeder hose 3/4" L=2000 mm
straight connection + 90° connection; ring nut
in nickel-plated brass Ø 3/4"F; pipe Ø 10x17
mm; Pmax 15 bar; Tmax 90°C; WRC/WRAS
approved

Electrolux 047605 049378 0K1135 0L1887

410462



**PVC transparent hose Ø 4x6 mm L=4000
mm**

Electrolux 049359

438436



Rubber feeder hose 3/4" L=2100 mm
straight connection 90° plastic connection;
plastic ring nut Ø 3/4"F; pipe Ø 13x19 mm;
Pmax 10 bar; Tmax 90°C; WRAS/VDE
approved

Electrolux 048816

311261



Rubber feeder hose 3/4" L=650 mm
straight connection; ring nut in nickel-plated
brass Ø 3/4"F; Øint/est 14/18 mm; max
pressure 15 bar; Tmax 90°C; WRC/WRAS
approved

Electrolux 0L2389

524407



**Feeder hose with armour 3/4" L=1500
mm**
straight connection + 90° connection; ring nut
in nickel-plated brass Ø 3/4"F; Øint 13 mm;
Pmax 25 bar; Tmax 100°C; WRAS approved

Electrolux 069571 0A6098 0S0151 0S0733
487799198

311262



Rubber feeder hose 3/4" L=1500 mm
straight connection; ring nut in nickel-plated
brass Ø 3/4"F; Øint/est 14/18 mm; max
pressure 15 bar; Tmax 90°C; WRC/WRAS
approved

Electrolux 048909 0L2394

524404



**Feeder hose with armour 3/4" L=2000
mm DN13**
straight connection + 90° connection; ring nut
in nickel-plated brass Ø 3/4"F; Pmax 25 bar;
Tmax 100°C; WRAS approved

Electrolux 048621 049540 0KJ439

Hoses

524135



Drain pipe PPE Ø 26,5 mm + hose Ø 25 mm
muffs 90° Øint7est. 29/36 mm; Overflow pipe Ø 8x14 mm

Electrolux 049933 0L2484

412176



Drain pipe PVC Ø 34 mm M 180°+ Ø 28 mm free L=1000 mm
muff Øint 34 mm

Electrolux 047459

310997



Drain pipe LSW6

Electrolux 0L1488

412175



Drain pipe PVC Ø 40 mm M 180°+ Ø 35 mm F 180° L=1000 mm
muff Øint 40 mm M - muff Øint 35 mm F; Tmax 90°; pipe Ø 35 mm; armored hose, smooth internal surface

Electrolux 047465 0S0149

438247



Drain pipe PPE Ø 21 mm 180°+ Ø 30 mm M 180° L=2000 mm
muffs Øint/ext 21/28 mm and 30/34 mm, pipe Øext 26,5 mm

Electrolux 049052 049748 0HA137 0KB776
25031

412171



Drain pipe PVC Ø 40 mm M 180°+ Ø 35 mm F 180° L=1600 mm
muff M Øint 40 mm - muff F Øint 35 mm; Tmax 90°C; armored hose, smooth internal surface

Electrolux 048818

441795



Drain pipe PPE Ø 35 mm 180°+ Ø 40 mm 180° L=1600 mm
muffs Øint/ext 35/40 e 40/45 mm, pipe Øext 29 mm

Electrolux 049856

412178



Drain pipe PVC Ø 58 mm F 180°+ Ø 40 mm free L=1000 mm
muff Øint 58 mm; pipe Øint 40 mm; Tmax 90°C; armored hose, smooth internal surface

Electrolux 030440 030442 047894 0S0148

441715



Drain pipe PPE Ø 24 mm 180°+ Ø 24 mm 180° L=271 mm
muffs Øint/ext 24/30 mm, pipe Ø ext 26.5 mm

Electrolux 048249 049747

412172



Drain pipe PPE Ø 25 mm 180° - Ø 20 mm 90° L=600 mm

Electrolux 047557 0H2554 0KI120

Hoses

432398



Drain pipe PPE L=930/3000 mm
muffs \varnothing 21/26 mm M 180° + \varnothing 19/24 mm F 90°

Electrolux 0H2295 0K7405 0K7586

613614



Drain pipe PPE \varnothing 21 mm M 180°+ \varnothing 28 mm F 90° L=2200 mm
muffs \varnothing int/ext 28/36mm and 21/27mm; pipe \varnothing ext 27 mm, overflow pipe connection 180° \varnothing 10/14mm L=470 mm

Electrolux 0L0773

317265



Drain pipe PPE \varnothing 21 mm M 180°+ \varnothing 28 mm F 90° L=1800 mm
muffs \varnothing 28/36 mm, \varnothing 21/27 mm, air gap hose \varnothing 8/14 mm, L=300 mm

Electrolux 0L1998

412174



Drain pipe PVC \varnothing 18 mm 180°+ \varnothing 22 mm 90° L=2000 mm

Electrolux 047558

412173



Drain pipe PVC \varnothing 18 mm F 180°+ \varnothing 28 mm F 90° L=2200 mm
muffs \varnothing 28/36 mm, \varnothing 25/18 mm, connection for overflow pipe \varnothing 6/12 mm (see also cod. 441794)

Electrolux 048845

441794



Drain pipe PPE \varnothing 21 mm M 180°+ \varnothing 28 mm F 90° L=1800 mm
muffs \varnothing 28/36 mm, \varnothing 21/27 mm, air gap hose \varnothing 8/14 mm

Electrolux 049878

Ball valves, Pipe fittings

441725



Nipple 3/4"÷3/4" - L=30 mm - brass
Øint. 14/16 mm; CH30

Electrolux 049510

441773



Rubber holder G3/4" - outlet Ø 7,5 mm

Electrolux 049026

322665



Nipple 3/4"÷3/4" - L=30 mm - brass

Electrolux 057862 072457 0E0446 0K9024
0KG596 0KI452 0KL750 0W3306

435654



Rubber holder G3/8" - outlet Ø 12,5 mm
Ltot.=36 mm

Electrolux 0L0477

435655



Nipple 3/4"÷3/8" - L=28 mm - brass

Electrolux 0L0479

459439



Rubber holder G3/8" - outlet Ø 11,5 mm
Ltot.=36 mm

Electrolux 0C5056 0PRG27

519266



Nipple 1" M/M 13 mm - L=40 mm - brass
with hole thread M10

Electrolux 0E5544 0H2331 0K7098 0K7681

342977



Pipe fitting 90° Ø int 8 mm, M15x1

Electrolux 046375

339989



Rubber holder - outlet Ø 6 mm
L=28 mm; CH13

Electrolux 069909 0K4054

433571



Pipe fitting 90° 1/8" - rubber holder Ø 4,75 mm

Electrolux 0H2303 0K7612

Ball valves, Pipe fittings

339995



Pipe fitting 1/4" - Ø 12 mm

Electrolux 069907

362963



T-connection Ø 25-25-25 mm
dim. 71,5x47,5 mm

Electrolux 0L3587

436021



T-connection Ø 7-7-7 mm

Electrolux 0L0274

518638



T-connection T Ø 26-26-26 mm
dim. 105x65 mm

Electrolux 0L0210

436022



T-connection Ø 8-12-8 mm

Electrolux 0L0276

419338



Special pipe fitting 1/2"MF

Electrolux 0H2010 0K6652 460816102

438092



T-connection Ø Ø 10-6-10 mm

Electrolux 0L0275

412474



X-connection Ø 12-12-12-12 mm

Electrolux 049073 049554 0L0353

337171



T-connection 4 ways Øext 12 mm

Electrolux 070305

410244



Y-connection Ø 10-10-10 mm - brass

Electrolux 047431 0KW990

Ball valves, Pipe fittings

438482

Y-connection Ø 12-12-12 mm

Electrolux 048195

317132

Non-return valve

Electrolux 0C9753 0L0264

412473

Y-connection inlet Ø 29 mm - outlet Ø 12 mm

Electrolux 049289 0L0365

349842Non-return valve DVGW
inlet Ø 11 mm - outlet Ø 25 mm

Electrolux 048191 0H2565 0L3240

337080

Fitting

Electrolux 070314

317140Non-return valve 3/4"FF
L=103 mm; PN15; DN20; Tmax. 80°C

Electrolux 0L2980

441675Backflow preventer dishwasher
rubber holder Ø 12 mm

Electrolux 005762 049332 0E5648 0L1892

441796Non-return valve in brass 1/2"
PN40 DN15

Electrolux 048414 049851

438093

Non-return valve

Electrolux 0L0269

Boilers

441787



Boiler 1 Heating element
 Ø 140x330 mm - LB1-2 / WT1-2

Electrolux 049053 0L1953 0L2081

337284



Boiler 1 Heating element
 Ø 160x415 mm - EUCB / NUCB

Electrolux 070335

436195



Boiler 1 heating element
 Ø 140x400 mm - Tmax 5+165°C - LS5/WT4

Electrolux 0L0352 0L1890

436192



Boiler 1 Heating element
 Ø 195x570 mm, pipe fitting Øext 26,5/12 mm -
 PW1-2 / WT 830-850

Electrolux 0L0348 0L1954

436194



Boiler Ø 140x400 mm
 LS5WS / WT4WS

Electrolux 0L0351 0L1891

436190



Boiler 1 Heating element
 Ø 200x376 mm - LS10-14 / WT 65 / LU7A /
 WTU40A

Electrolux 0L0346 0L1928

339128



Boiler 1 heating element
 Ø 140x410 mm; hole for heating element Ø 48
 mm, pipe fitting for hose Ø 12 mm - LS5/WT4

Electrolux 049958

339117



Boiler 1 Heating elements
 Ø 200x410 mm - LS7

Electrolux 048341 048548

339112



Boiler 1 Heating element
 Ø 145x430 mm - LS3

Electrolux 049336

518617



Boiler 1 Heating element
 Ø 200x410 mm - LU7P / WTU40P / LS9 / WT5E

Electrolux 0L0023 0L0284 0L0734 0L1908

Boilers

339131

Boiler 2 heating elements LS10/LS12 [Kit]
 Ø 200x410 mm; boiler insulation, safety thermostat, hose clamp

Electrolux 048283 048484 048727 0L1639

410029


Boiler insulation 470x370x13 mm

Electrolux 049321

518620

Boiler 1 Heating element
 Ø 200x460 mm - LS6 EA/ WT38

Electrolux 049902 0L0283 0L1906 0L1981

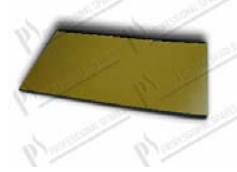441765

Boiler EPDM insulation for high temperature 670x330x13 mm

Electrolux 048447 049415 0KE918 0L0774

319785

Boiler 2 heating elements
 Ø 200x570 mm; connection for hose tubo Ø 25 mm - WT830M/WT830H/WT850M

Electrolux 0L1151 0L1952

339908


Pipe boiler

Electrolux 069459 0H1288

337089

Boiler 1 Heating element
 Ø 120x290 mm - LBIOEQ010

Electrolux 0U1011

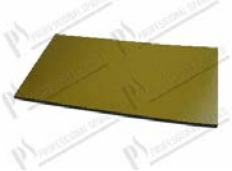524665

Boiler insulation 470x285x13 mm

Electrolux 049254

Hinges

441680



Shaft for hinge

Electrolux 049281

317152



Right hinge
dim. 30x23x59/80 mm

Electrolux 0L2253

335273



Shaft

Electrolux 0KQ540

317151



Left hinge
dim. 30x23x59/80 mm

Electrolux 0L2251

317143



Shaft for hinge Ø 8x33 mm - Ltot. 34 mm

Electrolux 0L2255

441682



Right hinge

Electrolux 049279

441760



Right hinge

Electrolux 048317 048582

441681



Left hinge

Electrolux 049280

441744



Hinge left

Electrolux 048318 048583

410341



Hinge without bolt left

Electrolux 047476 047746 047841 048161

Hinges

337038



Hinge CF35

Electrolux 0U1013

441925



Drip tray slide

Electrolux 049192 049246

Lockings

613884

Magnet 63x18x7 mm
RCT/WTM

Electrolux 0L1001 0L2534

339693



Door latch

Electrolux 069435 0H1293 0K4423

347774



Handle support

Electrolux 047730 075926 0E5096 0K2239

435340



Door latch L=70 mm

Electrolux 049271

441723

Door catch
LS5/32/33

Electrolux 049536

338500



Door latch

Electrolux 047491 0A6111 0H2557 0K8667

Lockings

531828



Door catch

Electrolux 0L0532 0L2094

438422

Platelet 64x17x7 mm
hole hexagonal CH7

Electrolux 049285

439773



Shaft M5/M6 - L=13 mm

Electrolux 049283

Structural components

336857

Cover 650x600 mm
LS6

Electrolux 049873

581852

Front panel 564x335 mm
LS6

Electrolux 0L1312

315782

Front panel 590x355 mm
NUC - EUC - KUC - NUCA - ZUCA - FUCA -
EUCA

Electrolux 0L1649 0L2568

524132



Support 125x472x10 mm

Electrolux 049935

Structural components


524131



Support 545x67x14 mm

Electrolux 049936


584166

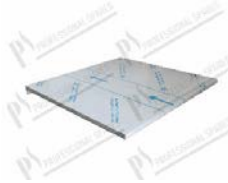

Cover 610x600 mm

Electrolux 0L0745

582199

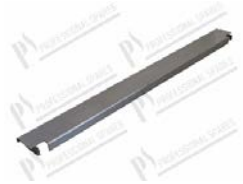

Front support
dim. 590x55 mm

Electrolux 0L2430

338708



Small plate
LSDS

Electrolux 047547 047838

582200



Central support for filter
dim. 480x155 mm

Electrolux 0L2431

338702



Side element for handle
LSDS

Electrolux 047479

518628



Cover
dim. 610x598x80 mm

Electrolux 0L0257

336711



Front panel 560x340 mm
LS - LV

Electrolux 048809

524152



Front panel 565x320 mm
LS6

Electrolux 049911

524662



Control panel

Electrolux 049258

Structural components

315550



Control panel
dim. 435x65 mm

Electrolux 0L1999

338677



Control panel
dim. 560x45x77 mm

Electrolux 049313

338427



Control panel WT30
dim. 560x45xh76 mm

Electrolux 048847

338706



Control panel LS-6
dim. 560x45xh76 mm

Electrolux 048827 048903 049128 0KE925

338502



Control panel

Electrolux 048904

349856



Control panel LS-510

Electrolux 047545 047561 047633 047839

338503



Control panel WT 30
dim. 560x75x45 mm

Electrolux 048905

441934



Control panel
dim. 430x70x32 mm

Electrolux 049061

338601



Control panel C-3
dim. 560x75x45 mm

Electrolux 049346

524529



Control panel
dim. 435x65x32 mm

Electrolux 049090

Structural components

518682



Control panel
dim. 435x65 mm

Electrolux 0L0154

338646



Splash guard L=595 mm

Electrolux 047453 047855 0K8659

441770



Control panel LS-7
dim. 590x70 mm

Electrolux 048339 048454

434158



Control panel
dim. 590x75x43 mm

Electrolux 0L0128

317165



Control panel 44x590x75 mm

Electrolux 0L1667

311058



Pin L=307 mm per T25

Electrolux 0D2159

Bearings

435394



Ball bearing Ø 15x35x11 mm

Electrolux	045312	045726	056820	065048
	0KT988	0W0TNX	0W0UJS	0W0XSJ

430830



Plastic bearing Ø 16,5x20x10 mm

Electrolux	0H2292	0K7334	0K7455	0K7572
-------------------	--------	--------	--------	--------

331958



Bearing [kit]

Electrolux	0D0259	0U0231
-------------------	--------	--------

Handles

412055



Handle - kit

Electrolux	046355
-------------------	--------

441689

Support left
dim. 102x34 mm

Electrolux	048315
-------------------	--------

412223

Plug
Ø27 mm - h 14 mm

Electrolux	081727	081778
-------------------	--------	--------

441690

Support right
dim. 102x34 mm

Electrolux	048314
-------------------	--------

Handles

415789



Shaft Ø 12x108 mm
screw M8x16 mm; L=tot. 130 mm; nut 17 mm

Electrolux 046534

Knobs

435776



Knob Ø 55 mm
D shaft hole Ø 6x4,6 mm

Electrolux 048371 048920 0KG192

432409



Knob Ø 42 mm
D-shaft hole Ø 6x4,6 mm

Electrolux 0E3019 0H2189 0H2338 0K7442
0KC012

433899



Knob Ø 40 mm
D-shaft hole hole Ø 6x4,8mm

Electrolux 046356 048340 048527

412063



Knob Ø 42 - h25 mm
D-shaft hole hole Ø 6x5 mm

Electrolux 047693 0E5284

412264



Knob Ø 40 mm blue
D-shaft hole Ø 6x5 mm

Electrolux 048451

412065



Knob Ø 44 mm
D-shaft hole Ø 6x4,6 mm

Electrolux 048830

412247



Knob Ø 40 mm
D-shaft hole Ø 6x5 mm

Electrolux 047844

338695



Knob Ø 40 mm H=22 mm
D-shaft hole Ø 6x5 mm

Electrolux 048153

Knobs

432370



Knob spring (10 pcs)
for knob with hole Ø 8 mm

Electrolux 025245 058445 0G5727 0M2312
0U1421

Small Mechanical Parts

438419



Snap-ring Ø int. 15,7x1 mm

Electrolux 048979 0D0639

435094



Flange bushing Ø 16x20/24xh13 mm

Electrolux 048812

438245



Radial snap-ring INOX Øest 9x0,8 mm

Electrolux 049284

438438



Hexagonal nut M6 self-locking - INOX

Electrolux 049372

435339



Antivibration LS3

Electrolux 049286

441924



Hexagonal nut M14x1,5 mm

Electrolux 049268

414975



Antivibration 69,5x69,5x15 mm

Electrolux 045836

441728



Hexagonal nut M20x1,5 mm
H=10 mm; CH30

Electrolux 049436

Small Mechanical Parts

438359



Knurled nut Ø 6x25 mm - H=6 mm
thread M8

Electrolux 046364 047282

439802



Knurled nut M10x1 Ø 30 mm - H=4 mm

Electrolux 049047

438537



Knurled nut M12x1 Ø 35 mm H=6 mm

Electrolux 048632 0E5638

337639



Knurled nut Ø 30 mm H=6 mm
thread Ø 11.3 mm

Electrolux 046365 047283

310306



Double wire hose clamp Ø 7,8÷8,3 mm

Electrolux 0C7120 0E5993 0L0082 0L0815

321177



Double wire hose clamp Ø 9,3÷9,9 mm

Electrolux 0L0083

301590



Double wire hose clamp Ø 14,4÷15,1 mm

Electrolux 0L1106

438357



Double wire hose clamp Ø 8÷12/9 mm

Electrolux 046946 048224 0H2566 0KB296
0T4790

363044



Hose clamp Ø 10÷16/9 mm

Electrolux 0G2824 0L0266

438480



Hose clamp Ø 12÷22/9 mm - INOX

Electrolux 007019 046797 048126 049888
065121 0835823600 0C5567 0G2046
0KF382 0KX145

Small Mechanical Parts

441699



Hose clamp Ø 25÷40/9 mm - INOX

Electrolux 047578 049446 049772 070318
 0K0198 0K8980 0KB300 0KG600
 0L2280 0L2728

438464



Hose clamp Ø 32÷50/9 mm - INOX

Electrolux 046566 046878 060407 066056
 0E2686 0KB302 0KX143 0L2649

518655



Hose clamp Ø 40÷60/9 mm - INOX

Electrolux 0E3461 0L0193

438463



Hose clamp Ø 50÷70/12 mm - INOX

Electrolux 046855 065537 072582 072583
 0K8983 0L2463 0W02A7 0W02A8
 0W0ZT8 0W0ZU4 0W1CEX 0W1GA7

441709



Hose clamp Ø 60÷80/12 mm - INOX

Electrolux 046478 046853 065047 0E0992
 0K0199 0K8985 0K8986 0KZ022
 0W1KBZ 0W3295

459506



Hose clamp Ø 200÷220/12 mm

Electrolux 0L2551 0TH122

441606



Hose clamp Ø 210÷230/12 mm

Electrolux 048222 048436 0E2276 0K7106

440496



Hose clamp

Electrolux 0L0201

322427



Hose clamp Ø 8,8÷9,3 mm [set 10 pcs]

Electrolux 0L0770 0L2436

613610



Hose clamp Ø 8÷14 mm (10 pcs)

Electrolux 0L0769

Small Mechanical Parts

613612



Hose clamp Ø 13 mm [set 10 pcs]

Electrolux 0L0771

0L2681

317260



Bracket

Electrolux 0L2756

438477



Grub screw M4x5 mm

Electrolux 047846

0H2563

441938



Pin

Electrolux 047511

441875



Grub screw M4x6 mm

Electrolux 046258

317408



Protection 510x320x0,2 mm

Electrolux 0L0531

318059



Filter support M6x42 mm

Electrolux 070343

440791



Plug M20x1,5

Electrolux 049502

582261



Bush for brand

Electrolux 075599

342943



Bolt

Electrolux 047488 0H2552

Small Mechanical Parts

441955



Bolt Ø 3/5/10x7,7 mm

Electrolux 026187

441892



Flat washer Ø 6.4x32 mm

Electrolux 048255 0KG562

438740



Clamping washer Ø 10x4,5 mm

Electrolux 069567 0C6288

432605



Flat washer M6 Ø 6,4x11,6x1,6 mm INOX

Electrolux 0K8947 0U2043 0W1TR8 734115309

438481

Flat washer Ø 5,2x10x1 mm (10 Pcs)
UNI 6592

Electrolux 048144 068024

418754



Flat washer Ø 21.3x36.5x3 mm

Electrolux 049435 0E0203 0E2292 0H2538
0K8952 0KG602 734119209

612770



Flat washer Ø 5,5x10x1 mm - INOX

Electrolux 0E1119 0K8946 0Q0012

337573



Pin M4x1 L= 20 mm

Electrolux 053341 053681 054938

435493



Set of rings 6,4x12,5 - 50 pz

Electrolux 027022 067332 0H2005 0L1670

441906



Roll pin Ø 4x24 mm

Electrolux 006841 045446 0C4354 0K9569

Small Mechanical Parts

335842



Screw M4x9 INOX

Electrolux 0H2594 0H2595 0K8930 0K8931
0KD931

Springs

415515



Compression spring Ø 9x38 mm

Electrolux 047492 0K8620

337384



Torsion spring left

Electrolux 070357

415514



Compression spring Ø 9x28mm

Electrolux 047489 0H2529

441890



Torsion spring

Electrolux 048279

337329



Compression springs Ø 10x31 mm

Electrolux 070351

438458



Torsion spring left Ø 4 mm

Electrolux 046268

337348



Torsion spring right

Electrolux 070356

438254



Torsion spring right Ø 20x190xLtot. 210 mm
wire Ø 3,8 mm

Electrolux 046269

Springs

613555



Tension spring
L1=195 mm - L2= 656 mm

Electrolux 0L0722

613557



Spring

Electrolux 0L0723

323738



Tension spring Ø 12x94xLtot240 mm
wire Ø 1,8 mm

Electrolux 0L3525

438342



Spring

Electrolux 053342 058444 0G2210

435093



Tension spring Ø 12x126x270 mm

Electrolux 048815

337669



Spring axe Ø 10x280 mm

Electrolux 046267

438242



Tension spring Ø 16x185 mm

Electrolux 049200

441801



Door lever

Electrolux 049030 049802

435345



Tension spring Ø 16x198 mm

Electrolux 049086

613549



Right lever

Electrolux 048813 0L0717

Springs

613550



Lever assy left

Electrolux 048814 0L0718

613558



Cam

Electrolux 0L0724

412168



Spring stretcher

Electrolux 046539 049886 075767

Doors

440819



Door 435x365 mm

Electrolux 049085 049089

518660



Door 415x556x45 mm

Electrolux 049903 0L0187 0L0782 0L0783

524121



Door 585xh390/430 mm

Electrolux 049951 0L2068

441761



**Shaft Ø 11x280 mm
with holes Ø 5 mm**

Electrolux 048581

Doors

439774



Door lever L=255 mm
LS5, WT4-30

Electrolux 049282

Shaft sealing

344981



Shaft sealing Ø 24x12x15 mm
ZF340SX/ZF522V5X

Electrolux 0L0333 0L1390

610885



Shaft sealing Ø 24x12x15 mm / contro
tenuta Ø 26x14x5,5 mm

Electrolux 0L1367 0L1936

412572



Shaft sealing Ø 24x10x14 mm /
counter-seal Ø 26x13x8 mm
for pump with shaft Ø 11 mm

Electrolux 048627 048983 0H2255 0H2523
0K8388 0L0490

344790



Counter-seal Ø 26x13x5,5 mm
for pump ZF340SX

Electrolux 0L0334 0L1389

610895



Shaft sealing Ø 24x11x15 mm /
counter-seal Ø 26x14x8 mm

Electrolux 048188 0L0340 0L1437

342632



Shaft sealing Ø 39x16x16 mm /
counter-seal Ø 42x21x8 mm
for pump FIR 2275

Electrolux 049249 049764 0G1664 0K7896

412573



Shaft sealing Ø 24x11x15,5 mm /
counter-seal Ø 26x13x8 mm
shaft sealing in graphite; for pumps FIR
0254-0257-2254/S

Electrolux 048623 049171 069543

Thermometers

416427



Thermometer Ø 52 mm 0÷120°C
coated capillary L=2500 mm; bulb Ø 6x38 mm

Electrolux 048564 0E5477 0E5546 0E5793
0PE178

416444



Thermometer 0÷100°C 56x25 mm
capillary 1650 mm; bulb Ø 8,5x26,5 mm;

Electrolux 048084

416548



Thermometer Ø 52 mm 0÷120°C
coated capillary L=3000 mm in PVC - bulb Ø 8,5 mm

Electrolux 048356

416426



Thermometer 0÷120°C 48x48 mm
mod. 915; coated capillary L=2900 mm; bulb Ø 6x36 mm; for boiler and dishwasher tanks

Electrolux 048525 0E5545 0K7789 0KB617

419996



Thermometer 0÷120°C 48x48 mm
capillary L=800 mm - bulb Ø 8 mm

Electrolux 0E5065 0K7026 0K7786 0KB616

435099



Thermometer 0÷120°C 58x25 mm
coated capillary L=3000 mm; bulb Ø 6x24 mm

Electrolux 048544 0E5478

Membranes

518679



Adhesive membrane 200x60 mm

Electrolux OL0157

317481



Adhesive membrane 368x44 mm
LS6 medical-line

Electrolux OL1896

518657



Adhesive membrane 200x60 mm

Electrolux OL0192

518684



Adhesive membrane 400x43 mm

Electrolux OL0153

524114



Adhesive membrane

Electrolux 049982

524143



Adhesive membrane 400x42 mm
ECOTEMP 5

Electrolux 049922

317477



Adhesive membrane 368x44 mm

Electrolux OL1899

518604



Adhesive membrane 420x38 mm
LS5 Franstal

Electrolux OL0325

311085



Adhesive membrane 370x43 mm
LS6

Electrolux OL1895

529098



Adhesive membrane 420x38 mm

Electrolux OL0515

Membranes

518678



Adhesive membrane 420x37 mm

Electrolux 0L0159

322618



Adhesive membrane 430x52 mm

Electrolux 0L2003

524111



Adhesive membrane 420x38,5 mm

Electrolux 049986

317245



Adhesive membrane 52x432 mm

Electrolux 0L2006

441545



Adhesive membrane 420x38 mm
LS5

Electrolux 049956

532647



Adhesive membrane 430x50 mm

Electrolux 049738

524145



Adhesive membrane 421x38mm

Electrolux 049920

524360



Adhesive membrane 30x50 mm

Electrolux 049349

317247



Adhesive membrane 52x432 mm

Electrolux 0L2125

439793



Adhesive membrane 430x50 mm

Electrolux 049088

Membranes

439798



Adhesive membrane 430x52 mm

Electrolux 049078

317246



Adhesive membrane ZANUSSI 52x432 mm

Electrolux 0L2005

439801



Adhesive membrane 430x50x1 mm

Electrolux 049067

315687



Adhesive membrane 434x52 mm

Electrolux 0L2082

317248



Adhesive membrane 430x51 mm

Electrolux 0L2002

317251



Adhesive membrane 433x52 mm for NGWDPDD

Electrolux 0L2083

317249



Adhesive membrane 52x432 mm

Electrolux 0L2000

317898



Adhesive membrane 435x55 mm LB2

Electrolux 0L2004

439781



Adhesive membrane 432x51,5x0,5 mm LB

Electrolux 049203

324977



Adhesive membrane 520x380 mm

Electrolux 0L1656

Membranes

322144**Adhesive membrane 523x39 mm**
LS5

Electrolux 0L1663

322942**Adhesive membrane 523x39 mm**
LS6

Electrolux 0L1650 0L3691

322152**Adhesive membrane 524x39 mm**

Electrolux 0L1661 0L3700

518789**Adhesive membrane 560x40 mm**

Electrolux 0L0032

582307**Adhesive membrane 520x380 mm**
ver. Zanussi

Electrolux 0L1653

Printed Circuit Boards

435560



Button extension Ø 7x6,95 mm
for interface board

Electrolux 002670 0F0086 0G4921 0K8489

301716



Motherboard
LS5/WT4 1 phase

Electrolux 049952 0L0046 0L0547 0L0706
0L1410 0L1810 0L2582

301718



Motherboard
Type P. 673609303

Electrolux 0L0731 0L1238 0L1411 0L1812

347959



Motherboard
LS - WT

Electrolux 049391

508569



Motherboard DIWAP10 AZ60 ATM

Electrolux 0L3720 0L3807

300144



Motherboard DIWAP AZ60
LS5/WT4 3 phase, 180/254V 50/60Hz

Electrolux 049622 049653 049654 049750
049752 049753 049845 049854
0KE951 0KE955 0L0012 0L0045
0L0541 0L0705 0L1239 0L1412
0L1972 0L2580 0L2583

435091



Motherboard
0673600501 -R244, 6736.009, EL8 04/97LT;
for LS61-LS62

Electrolux 048833

435215



Motherboard
0673600401 -R244, 6736.008, EL8 04/97LT;
LS30,WT30, LS63-LS64-Z63-Z64-FL630

Electrolux 048848 048926 0KE927

435226



Motherboard
LS - LV - C55 - FL32 - FL33 - C32 - C33 - Z32

Electrolux 049412

435234



Motherboard
LS - WT

Electrolux 049387

Printed Circuit Boards

435255



Motherboard
LS - WT

Electrolux 049384

301721



Interface board KIT
LS5/WT4, LS6E/WT30E For units with S/n. until 71810004, order the code 582916

Electrolux 0L0277 0L0553 0L0726 0L1241
0L1567 0L1626 0L3875 0L4473

435786



Motherboard
LS - LV70 - FL700 - HYDRA700 - Z70

Electrolux 049241

459738



Interface board Electron 500
dim. 175x30 mm

Electrolux 0PRF85

436876



Motherboard
LS

Electrolux 049153

440966



Protection pvc
for 435255 - 435234

Electrolux 049242 0E6023

435296



Motherboard
LS - LV - FL

Electrolux 049411

582916



Round cable snap-its suppression filter
dim. 40x30x30 mm; Øint. 12,5 mm

Electrolux 0L3881


613536



Interface board
LS5/WT4, LS6E/WT30E SN: ..52300099

Electrolux 0L0707 0L1242 0L1579

582305

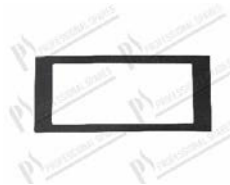

Gasket 70x30x0,7 mm

Electrolux 0L1943

Printed Circuit Boards

582078



Electric cable

Electrolux 0L2962

Probes

344758



Temperature probe NTC

bulb \varnothing 6x50 mm; PVC cable 2x0,35 mm; L=70 mm

Electrolux 049884

344763



Temperature probe NTC

bulb \varnothing 10x44 mm; rast5 with faston 6,3x0,8 mm

Electrolux 049643 049666 0KR811

436202



Support 70x37x9 mm

Electrolux 0L0366

440744



Support for temperature probe 50x70 mm

hole \varnothing 7 mm

Electrolux 049580

Adhesive Gasket

440788



Velcro H=20 mm (sold by meter)

Electrolux 049931

316488



Adhesive gasket (sold by meter)
maximum length of gasket 4mt

Electrolux 088581 0E5245 0K8587 0L0113

435261



Adhesive EPDM gasket 8x3 mm (sold by meter)

Electrolux 046583 0L0689

317421



Adhesive gasket 30x36,5x1,7 mm

Electrolux 0L0543

317441



Adhesive gasket EPDM gasket
545x13xh12,5 mm

Electrolux 0L0544

441547



Adhesive EPDM gasket 15x3 mm (sold by meter)

Electrolux 049930

410037



Adhesive gasket 15x3x2000 mm

Electrolux 046256

Gaskets for dishwashers

613591



Gasket L=1000mm

Electrolux 0L0751

613554



Door gasket 595x445 mm

Electrolux 0L0721

438479



Gasket 29x62x2mm

Electrolux 048070

435342



Door gasket 560x311x5 mm
sidebands L=311 mm, grey EPDM

Electrolux 048306 048849 049248 049892
0L2561

438420



Gasket 440x30x5 mm

Electrolux 049017


581833



Door gasket 560x311x5 mm

Electrolux 0L0536 0L2562

440900

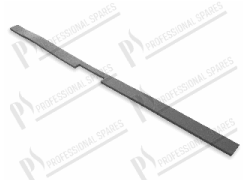

Gasket 590x25x4,5 mm

Electrolux 0L0021

441028



Gasket L=700 mm
profil U

Electrolux 047095 047513 047571 0E5559
0K8446 0W1306

416084



Gasket "L" 318x260mm

Electrolux 047454

440747



Gasket 1040x10 mm
profil U

Electrolux 049016

Gaskets for dishwashers

416085



Door gasket LS520

Electrolux 047455 OT3882

441939



Gasket 2 mt

Electrolux 047502

364181



Gasket 24x10 mm

Electrolux 0L3483

Flat gaskets

339828



Flat gasket Ø 8x12x1,5 mm - FIBER

Electrolux 069911 0K3823

336124



Flat gasket Ø 11,5x19x2 mm

Electrolux 0K6103 0K6660 0K8701 0W1778

339976



Flat gasket Ø 10x16x2 mm - Fiber

Electrolux 069438 0K3824

349462



Flat gasket Ø 11,5x24,5x2 mm - Fiber

Electrolux 067935

Flat gaskets

441633



Flat gasket 13x19x2 mm Kit 50 pcs

Electrolux 051554 0C3642

325273



Gasket Ø 50x59.5x1.5 mm - Silikon

Electrolux 0L2664

441552



Flat gasket Ø 18x34x2,6 mm

Electrolux 048245

349465



Flat gasket Ø 12x24x2,5 mm - EPDM

Electrolux 061488

441727



Flat gasket 24x35,5x2,6 mm

Electrolux 049501

317134



Flat gasket Ø 12,5x26,5x3 mm (50 pcs)

Electrolux 0L1945 0L2037

613592



Flat gasket Ø 27x40x1 mm

Electrolux 0L0752

414967



Flat gasket Ø 16x24,5x2 mm - EPDM

Electrolux 046925 049201

416101



Gasket

Electrolux 047490 0H2546

340177



Flat gasket Ø 64x81x3 mm

Electrolux 069470

O-rings

**O-ring 1,78x**

435323	6,07 mm NBR	067898
531952	8,73 mm NBR	0Q0002
317701	9,25 mm SILICONE	0L2303
337070	11,11 mm EPDM	0U1041
534283	11,11 mm NBR	0E2836
435313	12,42 mm NBR	0Q0014
438361	14,00 mm NBR	047473
337098	15,60 mm EPDM	070347
415979	17,17 mm NBR	0K6222
438348	20,35 mm NBR	0L2166
416214	31,47 mm NBR	046861

**O-ring 2,40x**

441068	5,30 mm NBR	0E5034
431553	9,30 mm	0KR015
431451	15,30 mm EPDM	0KK043
432996	16,30 mm NBR	0K9001
438301	17,30 mm NBR	0E5118

433156**O-ring 2,50x8,50 mm NBR**

Electrolux 0H2600 0K8997

**O-ring 2,62x**

438735	9,19 mm NBR	068573
340097	10,77 mm EPDM	069644
438728	11,91 mm NBR	067292
416278	13,95 mm NBR	046223
438736	15,54 mm NBR	0W7012
438421	18,72 mm NBR	049036
340151	20,50 mm	069527
435133	25,07 mm NBR	046799
301578	26,65 mm NBR	0L0922
450090	29,82 mm EPDM	0L1564
316422	32,99 mm SILICONE	0L2359
438449	53,65 mm NBR	049460
416218	60,00 mm NBR	047462

441739**O-ring 4,00x110,00 mm NBR**

Electrolux 049894

Detergents

411085



Spray cleaner 500 ml

Electrolux OS0060

586777



Rinse C14 PLUS - 1 canister 5 lt

Product subject to some limitations of transport (ADR)

Electrolux OS2095

585498



Detergent powder C-23 (100 tabs)

Electrolux OS2392

589392



Liquid delimer; C30 - 2 x canister 5 lt
to eliminate residual calcareous; Product subject to some limitations of transport (ADR)

Electrolux OS2362

586774



Detergent C11 - 1 canister 5 lt

Product subject to some limitations of transport (ADR)

Electrolux OS2092

586775



Detergent C13 - 1 canister 5 lt

Product subject to some limitations of transport (ADR)

Electrolux OS2093

586776



Rinse C12 - 1 canister 5 lt

Product subject to some limitations of transport (ADR)

Electrolux OS2094

Dishwashing Baskets

340086

Basket 382x382xh105 mm - INOX for glasses
plastic coated steel wire

Electrolux 069563

337352

Round basket Ø 350xh135 mm

Electrolux 0HA031

340085

Basket 382x382xh200 mm - INOX for glasses
plastic coated steel wire

Electrolux 069564

524661

Round basket kit with square frame
394x394 mm
basket Ø 400xh140 mm

Electrolux 049269

441805

Basket 395x395xh200 mm - INOX for glasses

Electrolux 049365 867054

534639

Plates basket Ø 465x110 mm

Electrolux 048139

441932

Basket 395x395xh100 mm - INOX for glasses
plastic coated steel wire

Electrolux 049069 867053

524348

Basket with saucers container
395x395x105 mm
dim. 110x110x123 mm

Electrolux 049366 867055

441733

Basket 395x395xh200 mm - sloped bottom for 16 glasses

Electrolux 049367 867056

412161

Basket 500x500xh120 mm - INOX for cutlery
plastic coated steel wire

Electrolux 0S0058 983033

Dishwashing Baskets

441930

Insert for 14 saucers L=340xh90 mm


Electrolux 049071 867060

438540

Basket 500x500xh105 mm - Yellow, for 18 dinner plates

plates Ø max 240 mm; check item code.610925

Electrolux 048795 068702 867002

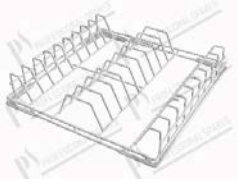440706

Basket 500x500xh100 mm - INOX 18 dishes
plastic coated steel wire

Electrolux OS0057

438278

Base basket 500x500xh105 mm - blue plastic
check item code.610908

Electrolux 048796 068691 0TH199

610905

Basket 350x350xh150 mm - plastic, for glasses

Electrolux 0HA029 860138

441829

Basket 500x500xh155 mm - with inclined bottom for 25 glasses

H=100 mm, Ø max 80 mm; made of:
438278+440488+524648

Electrolux 048969 069944

610907

Basket 400x400xh150mm - plastic, for glasses

Electrolux OS1130 0U1033 860139

441825

Basket 500x500xh205 mm - with inclined bottom for 36 glasses

H=150 mm, Ø max 70 mm; made of:
38278+440488(2pz)+524644+524643

Electrolux 048973 069948

438417

Green 500x500xh105 mm - basket for 12 soup plates or cups
plates Ø max 240 mm; see item cod.610925

Electrolux 048891 0TH200

441823

Basket 500x500xh255 mm - with sloped bottom for 25 glasses

H=200 mm, Ø max 80 mm; made of:
438278+440488(3pz)+524648+524645

Electrolux 048975 069946

Dishwashing Baskets

441842

Basket 500x500x155 mm - Blue with 16 cutlery containers
container Ø 110x145 mm

Electrolux 048965 069951

439807

Basket 500x500xh105 mm - plastic, for 8 trays
dim. 500x500 mm; check item cod.610910

Electrolux 048890 0L1963

441850

Basket 500x500xh105 mm - Brown, cutlery basket
max capacity 100 pieces; check item cod.610909

Electrolux 048797 068467

441845

Blue 500x500xh105 mm basket for 12 pizza plates
plates max Ø 300 mm

Electrolux 048961 069398

337095

Container cutlery 55x130x100 mm
2 compart

Electrolux 0HA030

438418


Basket 500x500xh105 mm - blue for 16 soup or dinner plates
plates max Ø 240 mm; check item code.610925

Electrolux 048960

441931

Container cutlery 110x110xh130 mm

Electrolux 032702 049070 067628 069956
0L1881 0TH210 864242 865574

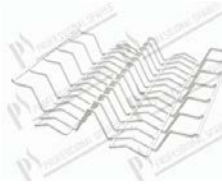524617

Insert 460x470x75 mm

Electrolux 048947

523991

Basket 500x500xh105 mm - grey 18 flat plates, 12 soup plates
plates max Ø 240 mm; 9 dishes 405x370 mm; check item code.610925

Electrolux 068692

441844

Basket 500x500x150 mm - red for 5 trays
Stainless steel insert 5 sectors

Electrolux 048962

Dishwashing Baskets

439530

Basket 540x490x110 mm for 6 trays - red

Electrolux 068701

Feet

441730Foot M8x22 mm
foot Ø 30xh12 mm; CH17

Electrolux 049393

581883Adjustable foot INOX Ø 1"3/4 - H=140÷220
mm
flange 74x74 mm

Electrolux 0L3203

438340Foot M8x20 mm
foot Ø 30xh11,5 mm

Electrolux 045146 046407 081456 0US372

438485Adjustable foot AISI 304 Ø 2" - H=145÷220
mm
flange 74x74 mm

Electrolux 048579 0F0201 0HB147

411405Foot M8x35 mm
dim. 30x90 mm

Electrolux 048994

349141

Adjustable foot Ø 64 mm H=240 mm

Electrolux 048378 048382

349140

Foot support Ø 57 mm H=70 mm

Electrolux 045472 046506 046897 047731

349538

Foot inox Ø 2" - H=125 mm

Electrolux 053792 056927 080942

Feet

441449



Bushing for adjustable foot Ø 52xh38,5 mm

Electrolux 054275

440849



Adjustable foot base Ø 56,5 mm

Electrolux 054274

HOOD TYPE

**ELECTRICAL
PARTS**

**WATER
PARTS**

**MECHANICAL
PARTS**

**ELECTRONIC
PARTS**

GASKETS

CONSUMABLES

ACCESSORIES

Commutators, Energy Regulators

432317



Commutator 0-1 positions
16A 250V; D-shaft Ø 6x4,6 mm

Electrolux 048271 0KZH02

432318



Commutator 0-3 positions
16A 250V; D-shaft Ø 6x4,6 mm

Electrolux 048524 0L3145

338916



Commutator 0-4 positions
16A 250V; D-shaft Ø 6x4,6 mm

Electrolux 049145

432347



Commutators 0-6 position
16A 250V; D-shaft Ø 6x4,6 mm

Electrolux 048286

Contactors and Relays

435316



Green auxiliary contact 1NO HN10 10A 690V
dim. 10x17x43,5 mm

Electrolux 046995 0C4704 0E0418 0H7043
0K9119 0KA929 0KE890 H58194500

435315



Red auxiliary contact 1NC HN01 10A 690V
dim. 10x17x43,5 mm

Electrolux 047046 059086 0E0888 0H7044
0KC515

Contactors and Relays

435202



Green auxiliary contact 1NO
dim. 10,5x42x31,5 mm

Electrolux 048497 0E5657 0K5986

436196



Contactor K3-14ND10 230V
5,5kW 3P; 220-240V 50Hz 240V 60Hz - 3 cont. NO + 1 aux NO - dim. 65,5x45x60

Electrolux 090050 0L0354 0L0679

426339



Contactor K3-07ND40 230V
220-240/50Hz 240V/60Hz - 3 cont. NO + 1 aux NO

Electrolux 0H2643 0K9134 477904122 767516200

435384



Contactor K3-18ND10 180V
7,5kW 3P; 180-210V 50Hz 200-240V 60Hz - 3 cont. NO + 1 aux NO; dim. 65x45x60 mm

Electrolux 004012 0E5568 0K6151 0K9123

435108



Contactor K3-10ND01 180V
4kW 3P; 180-210V 50Hz 200-240V 60Hz - 3 cont NO + 1 aux NC

Electrolux 048736 0E1611 0KC508 0KN732
0W2701 438963603

435427



Contactor K3-18ND10 230V
7,5kW 3P; 220-240V 50/60Hz - 3 cont. NO + 1 aux NO - dim. 65,5x45x60 mm

Electrolux 002168 003598 006437 006438
058805 072881 072882 0K9125
0KC417 0L2057 0W0632 0W5271

435166



Contactor K3-10ND10 230V
4kW 3P; 220-240V 50Hz 240V 60Hz - 3 cont. NO + 1 aux NO - dim. 65,5x45x60 mm

Electrolux 003027 045981 045982 048519
053116 054544 057896 075796
088477 0KL557

319482



Contactor K3-22ND10 230V
11kW 3P; 220-240V 50/60Hz - 3 cont. NO + 1 aux NO; 2 x cont. 1NC HN01; - 65,5x45x60 mm

Electrolux 052329 054928 057950 059943
0K9132 0KC513 0W0690 767511412

435109



Contactor K3-10ND01 230V
4KW 3P; 220-240V 50Hz 240V 60Hz - 3 cont. NO + 1 aux NC - dim. 65,5x45x60 mm

Electrolux 045920 047048 048403 048825
069130 072319 0E3757 0L0285

321420



Contactor K3-24A00 230V
11kW 3P; 220-240V 50Hz 240V 60Hz - 3 cont. NO + 1 aux NO - dim. 87,5x45x74 mm

Electrolux 0C9763 0K9129 0KE717

Contactors and Relays

317772



Relay 200Vac 50/60Hz
16A/250Vac - 12A/400Vac

Electrolux 049159

435785



Socket relay

Electrolux 049236


435076



Relay Tyco EASIAS-230A-H
220-240V 50/60Hz, 16A 250V

Electrolux 048888

336840

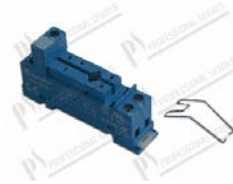

Socket relay 10A 250V 95.63

Electrolux 048792

336839



Relay 1 contacts 230V 50/60Hz
10A 250V

Electrolux 048791

438244



Time relay
0,05s-100h 24-230V AC/DC 2x8A 45x45mm

Electrolux 049235

435248



Relay 2 contacts 230V 50/60Hz 12A 250V

Electrolux 048265 048438

336816



Relay 4 contacts 230V 50/60Hz 12A 250V
with special plastic flange

Electrolux 048611

Fuses, Capacitors, RFI Filters

610850



**Capacitor for power factor correction 6,3
μF 450V 50/60Hz**
Ø 30x50 mm; with screw M8

Electrolux 049260 0KB768 0KM491 0L2036

438276



RIF filter with faston
2x0.010 uF (Y2) + MoHm 250V

Electrolux 046226 046227 046941 0K8386

342369



**Capacitor for power factor correction 8
μF 450V 50/60Hz**
Ø 30x71 mm; with M8 screw

Electrolux 049126

435381



**RFI filter 3 phase 250V 50/60Hz Ø 38x50
mm**
3x(0.27 μF) + 3x(1MΩ) + 3x(2x0.10nF);
faston 6,3x0,8 mm

Electrolux 049303 0KE945

340272



**Capacitor for power factor correction 16
μF 450V 50/60Hz**
Ø 40x95 mm; with screw M8; faston 6,3x0,8
mm

Electrolux 052797 0A2914

441549



**RFI filter 1 phase 250V 50/60Hz 7A/40°C Ø
38x53mm**
(X2) 0.47 uF + 0.68 MoHm (Y2)2x0.01
uF+2x1.5 mH

Electrolux 049901

415522



**Capacitor for power factor correction 20
μF 400V 50/60 Hz**
Ø 40x96 mm; with screw M8 - Tmax +46°C

Electrolux 046308 047542 047744 075900

441886



RIF filter with cable
Ø 38x38 mm; fitting M8; cable L=170 mm

Electrolux 048726 093636

435292



**Capacitor for power factor correction 5
μF 450V 50/60Hz**
Ø 30 mm; with screw M8; cable L=500 mm

Electrolux 083406

418457



**RC-Filter 0,047±0.47μF, 22±470Ωm
250Vac**

Electrolux 0K8676 552201301

Fuses, Capacitors, RFI Filters

417948

Fuse holder
for fuse 5x20 mm

Electrolux 0E1703 0K8695 552203701

433800

Fuse holder Ø 16 mm 16A 250V [Kit]
L=49 mm - faston 6,3x0,8 mm - for fuse 5x20 mm

Electrolux 0C2228 0CB127 0CB128 0F0031
0K8694 0KZV38 0T3933

Switches, Push Buttons, Selectors

533538

White pushbutton Ø 22 mm - without contacts
10(6)A 400V

Electrolux 049238 0L0615 0L4654

380142

Auxiliary contact 1 NO
6A 230V 50Hz

Electrolux 075601 0L0616 0L4653

433653

Gasket for commutator cycle 46x18x2,7 mm

Electrolux 046360

Lamps and Lamp Holders

417968



White pilot lamp Ø 13 mm - 240V - L=60 mm
lamp Ø 9 mm, with lock washer and silicon O-ring

Electrolux 0H2633 0K9096 763100102

340407



Green lens Ø 13 mm L=22 mm

Electrolux 075096 0C2587

435511



Green pilot lamp Ø 13 mm - 240V - L=60 mm
with nut and silicon O-ring

Electrolux 003531 004393 005010 005445
058658 0C3171 0C3487 0H6619
0K3462 0K3475 0KF056 0L3030

338639



Orange lens Ø 13 mm L=22 mm

Electrolux 031611 075095 0C2182 0HB339

340396



Fluorescent pilot lamp Ø 9 mm 240V
L=55 mm, faston 6,3x0,8 mm

Electrolux 004895 031607 046076 048488
048832 0C2585 0HA088 0HB343

319362



White pilot lamp Ø 9 mm 240V
L=55 mm - faston 6,3x0,8 mm

Electrolux 046241 072049 0C0249 0K9101

340428



White lens Ø 13 mm L=22 mm

Electrolux 046289

Microswitches

336812



Snap action microswitch with roller 5A 250V IP40

Electrolux 049811

349638



Magnetic microswitch Ø 6x30 mm from SN 730...
contact NO 250V 50W; cable L=290 mm

Electrolux 048831

317708



Snap action microswitch with roller 5A 250V faston 6,3 mm

Electrolux 0L2928

435219



Magnetic microswitch
NO contact 250V 50VA 0,04A - rast 5

Electrolux 037260 049621 0KB775

524496



Snap action microswitch with roller 10(4)A 250V lever L=14,5 mm; T85

Electrolux 049619

435376



Magnetic microswitch E591-1U
NO contact 230V 3A 60W; cable L=1700 mm; dim. 36x26,2x13 mm

Electrolux 049966 0E0003 0E5185 0K6346
0K8714

436259



Limit switch L=2100 mm
cable L=2100 mm - probe Ø 12x44 mm

Electrolux 0L0456

311752



Magnetic microswitch with support

Electrolux 0L1866 0L1871

435203



Magnetic microswitch Ø 6x30 mm until SN...729
NO contact 250V 10VA; cable L=460 mm

Electrolux 048268 048486

582276



Magnetic microswitch 10VA - 0,5A
100V DC / 125V AC

Electrolux 0L2893

Microswitches

441145



Magnetic microswitch 23x16x18 mm
mod. M375 AZ

Electrolux 088361 0E0102 0K6712 0KE287

438337



Magnet 63x18x11 mm [Kit]
with self threading screw Ø 2,9x9,5 mm

Electrolux 049627

301849



Magnetic microswitch

Electrolux 0L1369

376204



Floating level switch Ø 18x52 mm [Kit]
cable L=1000 mm; thread M16

Electrolux 049309 049454 049478 0E5808

518761



Holder

Electrolux 0L0059

Terminal Boards

439982



Terminal board 6-poles cable sq.mm 6 with bypass installed
 capacity 450V 40A; T_{min}-max -5/+150°C;
 faston 6,3x0,8 mm

Electrolux	005420	032669	046347	048574
	0E1603	0E5176	0K3511	0KE434
	0KG206	0U3376		

433863



Terminal board 8-poles
 L=68,3 mm

Electrolux 045794

440895



Terminal board KADO 1/7
 63A 500V; dim. box 145x145 mm

Electrolux 049618 0L0111

Motors

435095



Gearmotor 24V [Kit]
 for SWF.404440 gearmotor replacement;
 complete of cable, connectors and screws

Electrolux 048760 0L0665

Pumps

545635



Drain pump 34W 220/240V 50Hz [KIT]
 suction Ø 35 mm, outlet Ø 30 mm; connection
 Rast 5 (for dishwasher without drain pump)

Electrolux 0S0663 864012

533992



Drain pump 34W 220/240V 50Hz
 mod. M230 - CL.F; inlet Ø 35 mm, outlet Ø 30
 mm; locking screws included - connection
 Rast 5

Electrolux 048844 0L0690 0L0692 0L0994

Pumps

325532



Drain pump 32W 200-240V 50/60Hz 0,45A
inlet Ø 35 mm, outlet Ø 30 mm - connection
Rast 5; top support

Electrolux 0L2838

534700



Wash pump 1 phase 750W 230V 50Hz
inlet Ø 45 mm, outlet Ø 40 mm; rubber holder Ø
9 mm; cable L=310 mm; C=13µF/400V

Electrolux 070400

613524



Drain pump 32W 200-240V 50/60Hz 0,45A
inlet Ø 35 mm, outlet Ø 30 mm - connection
Rast 5; support on side

Electrolux 048939 0KE587 0L0527 0L0693
0L2133 0L2657

342299



Wash pump 1 phase 736W 220-240V 50Hz
inlet Ø 52 mm - outlet Ø 55 mm - capacitor
6µF/450V

Electrolux 048664

340050



**Wash pump 1 phase 550W 220/240V 1P
50Hz**
inlet Ø 45 mm - outlet Ø 40 mm; 2850 rpm,
C=12,5 µF

Electrolux 046370 0H2457 0K8075

342644



Shell for pump

342466



Impeller Ø 102 mm

339523



**Capacitor for power factor correction 12,5
µF 450V 50/60Hz**

340459



Shell for pump

342290



Gasket pump FIR H=3,5x4,5 mm

340464



O-ring 3,00x126,00 mm EPDM

342633



Gasket Ø 11,8x26x2 mm in rubber

412572



Shaft sealing Ø 24x10x14 mm / counter-seal
Ø 26x13x8 mm

412572



Shaft sealing Ø 24x10x14 mm / counter-seal
Ø 26x13x8 mm

Pumps

342461



Wash pump 3 phase 736W 220-380V 50Hz
FIR 0256; inlet Ø 45 mm - outlet Ø 40 mm; 2800 rpm, CL.F

Electrolux 048304 0KE912

340272



Capacitor for power factor correction 16 µF 450V 50/60Hz

342644



Shell for pump

342466



Impeller Ø 102 mm

342290



Gasket pump FIR H=3,5x4,5 mm

342633



Gasket Ø 11,8x26x2 mm in rubber

412572



Shaft sealing Ø 24x10x14 mm / counter-seal Ø 26x13x8 mm

342462



Wash pump 3 phase 1500W 230/400V 50Hz
inlet Ø 63 mm, outlet Ø 53 mm; 2800 rpm

Electrolux 0H2153 0K7245 477606000

342506



Impeller Ø 124 mm 50Hz

342235



Cooling fan Ø 142 mm

342464



Gasket for pump FIR H=4x4 mm

412573



Shaft sealing Ø 24x11x15,5 mm / counter-seal Ø 26x13x8 mm

Pumps

342414



**Wash pump 3 phase 1500W 5,9A
220/380-415V 50Hz**
FIR 2254/S - inlet Ø 70 mm - outlet Ø 61,5 mm;
capacity 700 lt/min, 2800 rpm, class F

Electrolux 048216

342684



Shell for pump

342463



Impeller Ø 110 mm

342464



Gasket for pump FIR H=4x4 mm

342633



Gasket Ø 11,8x26x2 mm in rubber

342630



Drain pump plug M12x21 mm

342648



Rubber holder G1/2" - outlet Ø 12 mm

412573



**Shaft sealing Ø 24x11x15,5 mm /
counter-seal Ø 26x13x8 mm**

200033



**Wash pump 3 phase 1500W 220/415V
50Hz**
FIR 2254/S - inlet Ø 70 mm; outlet Ø 61,5 mm;
capacity 700 lt/min, 2800 rpm, class F

Electrolux 0L0027

342684



Shell for pump

342463



Impeller Ø 110 mm

342464



Gasket for pump FIR H=4x4 mm

342630



Drain pump plug M12x21 mm

412573



**Shaft sealing Ø 24x11x15,5 mm /
counter-seal Ø 26x13x8 mm**

Pumps

342364



Wash pump 1 phase 750W 220-240V 50Hz
inlet Ø 38,3 mm - outlet Ø 31 mm, 2800 rpm;
C=12,5 µF/450V

Electrolux 048885

340272



Capacitor for power factor correction 16 µF 450V 50/60Hz

310056



Shell for pump

310063



Impeller Ø 103

310061



Gasket pump ZF340SX

344981



Shaft sealing Ø 24x12x15 mm

344790



Counter-seal Ø 26x13x5,5 mm

316117



Wash pump 1 phase 760W 230V 3.3A 50Hz SX
inlet Ø 63 mm, outlet Ø 48 mm; 2800rpm;
C=16µF/450V

Electrolux 0L1914

340272



Capacitor for power factor correction 16 µF 450V 50/60Hz

610901



Shell for pump

344819



Impeller Ø 110 mm

582995



Fan housing Ø 142 mm

317229



Rubber holder for pump 316117

344981



Shaft sealing Ø 24x12x15 mm

610895



Shaft sealing Ø 24x11x15 mm / counter-seal Ø26x14x8 mm

Pumps

508257



Wash pump 1phase 760W 230V 3.3A 60Hz SX
inlet 63 mm, outlet 48 mm; 2800rpm; 3450rpm;
C=12,5µF/425V

Electrolux 0L2832

582146



Wash pump 1phase 760W 230V 3.3A 50Hz SX
inlet 63 mm, outlet 48 mm; 2800rpm; cable
L=300 mm; C=16µF/450V

Electrolux 0L2831

340272



Capacitor for power factor correction 16 µF 450V 50/60Hz

344819



Impeller Ø 110 mm

344981



Shaft sealing Ø 24x12x15 mm

610895



Shaft sealing Ø 24x11x15 mm / counter-seal Ø26x14x8 mm

344958



Wash pump 1 phase 800W 1P 230V 50Hz with support
inlet Ø 63 mm, outlet Ø 48 mm, capacitor 16µF

Electrolux 0L0092

610902



Flange pump ZF523V

610901



Shell for pump

344819



Impeller Ø 110 mm

610903



O-ring 3,53x158,30 mm EPDM

344981



Shaft sealing Ø 24x12x15 mm

610895



Shaft sealing Ø 24x11x15 mm / counter-seal Ø26x14x8 mm

585566



Wash pump 3 phase 740W 400V 50Hz 1,5A SX
inlet Ø 63 mm; outlet Ø 48 mm; cavo L=300 mm; Mod. ZF 523V

Electrolux 0L3631

Pumps

532186



**Wash pump 3 phase 1000W 230-400V
50Hz with support**
inlet Ø 62 mm - outlet Ø 48 mm; cable L=270
mm with plug 8 way - Mod ZF 523

Electrolux 0L0060 0L0564

610902



Flange pump ZF523V

610901



Shell for pump

610904



Impeller Ø 100 mm

610903



O-ring 3,53x158,30 mm EPDM

344981



Shaft sealing Ø 24x12x15 mm

610895



**Shaft sealing Ø 24x11x15 mm / counter-seal
Ø26x14x8 mm**

613978



Rinse pump 1 phase 75W 230V 50Hz
FIR 5213; inlet Ø 30 mm; outlet Ø 26 mm; 2700
rpm; C=5µF/425V; Till S/N 60800000

Electrolux 0L1079 0L1640_

418004



**Capacitor for power factor correction 5 µF
400V 50/60Hz**

316035



Rinse pump 1 phase 75W 230V 50Hz

315752



Shell for pump

610852



O-ring for shell Ø 4,00x80,00 mm EPDM

615057



Pump support FIR 5213

615056



**Formed hose 90° Ø 26x36 mm / Ø 30x40 mm
from SN 608...**

435998



Hexagonal head screw TE M6x20 mm - INOX

Pumps

316035

Rinse pump 1 phase 75W 230V 50Hz
 inlet Ø 30 mm; outlet Ø 26 mm; 2700 rpm;
 C=5µF/425V - [KIT]; From S/N 60800001

Electrolux OL1640

418004

Capacitor for power factor correction 5 µF
 400V 50/60Hz

613978

Rinse pump 1 phase 75W 230V 50Hz

315752

Shell for pump

610852

O-ring for shell Ø 4,00x80,00 mm EPDM

614010

Rinse pump 1 phase 230W 220/240V 60Hz
[KIT]
 inlet Øest. 30 mm, outlet Øest. 26 mm

Electrolux OL1100 OL1641

615057

Pump support FIR 5213

615056

Formed hose 90° Ø 26x36 mm / Ø 30x40 mm
 from SN 608...

435998

Hexagonal head screw TE M6x20 mm - INOX

342265

Rinse pump 1P 280W 230V 50Hz ONLY for
LS5WS /WT4WS-OLD
 FIR 4213; inlet/outlet Ø 28 mm; capacity 110
 lt/min - 2800 rpm - CL.F; C=6,3 µF - cable 160
 mm; for other models see OL1079 - for new
 undercounter see OL2597

Electrolux 049310 OL1030

342376

Shell for pump

360121

Impeller Ø 72 mm

412572

Shaft sealing Ø 24x10x14 mm / counter-seal
 Ø 26x13x8 mm

Pumps

614014



Rinse pump 1 phase 280W 400V 50Hz
inlet Ø 30 mm; outlet Ø 26 mm; C=6,3 µF

Electrolux 0L1103

614009



Rinse pump 1 phase 290W 200V 60Hz
inlet Ø 30 mm; outlet Ø 26 mm; 3400rpm;
C=6,3µF 400V

Electrolux 0L1099

508235



Rinse pump 1 phase 240W 230V 60Hz
inlet Ø 28 mm; outlet 26 mm; C=5µF/425V

Electrolux 0L2859

322750



Rinse pump 240W 230V 50Hz till SN.4471
inlet Ø 28,5 mm, outlet Ø 26 mm - cable L=230 mm

Electrolux 0L2858

585376



Impeller Ø 75 mm

434969



Rinse pump 1 phase 350W 230V 50Hz - PS45DX LGB
inlet/outlet F3/8"; 2800 rpm - C=8 µF; cable L=300 mm with 4-pins plug

Electrolux 048910 049162 049229 0L2391

610895



Shaft sealing Ø 24x11x15 mm / counter-seal Ø26x14x8 mm

317749



Rinse pump 3 phase 280W 400V 50Hz
inlet Ø 28 mm, outlet Ø 26 mm; cable L=250 mm

Electrolux 0L2863

613803



Rinse pump 3 phase 280W 400V 0.5A 50Hz
inlet Ø 15 mm; outlet Ø 14 mm; cable L= 250 mm; with hose Ø 12/18 mm L= 1000 mm; support 170x120x35 mm

Electrolux 0L0945 0L1395

325673



Pump support

342684



Shell for pump
for pump FIR 2254/S

Electrolux 049177 0L0496

Pumps

342297



Pump flange

Electrolux 0H0908 0H2161 0K7255 0KB586

342496



**Impeller Ø 102 mm
thread M8**

Electrolux 0H2158 0K7250

342376



Shell for pump
inlet Ø 28 mm; outlet Ø 26 mm

Electrolux 0L0495

342235



Cooling fan Ø 142 mm
Øint. 15 mm

Electrolux 0H2159 0K7252 477606031

342610



Shell for pump
inlet Ø 63 mm; outlet Ø 53 mm

Electrolux 0H2160 0K7253 0KB584 0KD997

342464



Gasket for pump FIR H=4x4 mm
EPDM

Electrolux 033694 048626 0H2156 0K7248
0KM569

582087



Impeller Ø 60 mm

Electrolux 0L0492

342633



Gasket Ø 11,8x26x2 mm in rubber

Electrolux 049562 049563 0H2157 0K7249
0W1817

342405



Impeller Ø 90 mm
for pump 0L0422 60Hz

Electrolux 048625 0L0494

342630



Drain pump plug M12x21 mm
with O-ring

Electrolux 049560

Pressure Switches

343747



Pressure switch 1 level 50/25 mbar
contacts capacity 16A 250V; Tmax 85°C

Electrolux 045494 046352 048453 048723
0L0048 0T3889

435220



Pressure switch 1 level 250/130-390 mbar
contacts capacity 16A 250V; Tmax 85°C

Electrolux 049620

343919



Pressure switch 1 level 105/60 mbar
contacts capacity 16A 250V; Tmax 85°C

Electrolux 046601 0L0609

349179



Pressure switch 2 level 70/30-130/40 mbar
contacts capacity 16A 250V; Tmax 85°C

Electrolux 0H2133 0K7205 476109802

349305



Pressure switch 1 level 180/80 mbar
contacts capacity 16A 250V; Tmax 85°C

Electrolux 049775

349306



Pressure switch 2 level 110/80-60/20 mbar
contacts capacity 16A 250V; Tmax 85°C

Electrolux 048826

538739



Pressure switch 1 level 240/130 mbar
contacts capacity 16A 250V; Tmax 85°C

Electrolux 0L0599

322408



Analogic pressure switch 5VDC
dim: 35x60x50 mm; Ø 5,4 mm

Electrolux 0L2845

413178



Pressure switch 1 level 240/130 mbar
contacts capacity 16A 250V; Tmax 85°C with bracket

Electrolux 048267

Heating Elements

415181



Boiler heating element 4500W 220V
L=390 mm; triangular flange H=83 mm int.Ø 47,5 mm - RPN/EI760

Electrolux 052619 065557 0L1874

414998



Boiler heating element 3500W 254V
dim. 310x65 mm; flange 81x27 mm; with thermal fuse - WT60

Electrolux 049651 049814

415011



Boiler heating element 6000W 230V
L=490 mm; triangular flange ext.Ø 63 mm int.Ø 47,5 mm; with bulb housing - HQN

Electrolux 003409 003410 051632 052621
0K3491 0L1877

414463



Boiler heating element 7500W 220V
L=325 mm - D48 - D480

Electrolux 0H2276 0K7526

415001



Boiler heating element 2000W 230V
dim. 325x65 mm; flange 80x28 mm - LS 10 - LS 12

Electrolux 049613 049616 049755

414505



Boiler heating element 12000W 220V
L=455 mm, flange Ø 72 mm, with bulb housing - D48 - D480

Electrolux 0E5213 0K7530 478040800

415000



Boiler heating element 3000W 230V
dim. 310x65 mm; flange 82x28 mm; with thermal fuse - LS 10 - LS 12

Electrolux 049614 049756

415310



Boiler heating element 6000W 240V
L=500; flange Ø 57,5 mm; complet gasket and faston - LS1080

Electrolux 045559 058011 0L1879

414781



Boiler heating element 3500W 230V
dim. 310x65 mm; flange 81x28 mm - LS 10 - LS 12

Electrolux 049615 049757 0KE957

415025



Boiler heating element 3000W 230V
L=165 mm; triangular flange 83x83 mm LB1 / LB2 / GW1 / GW2 / WT1 / WT2 / NGW

Electrolux 048489 048927 0L1634

Heating Elements

317773



Boiler heating element 4500W 230V
 L=340 mm; triangular flange 92,5x90 mm, Øint. 57,5 mm; connection M4; with thermal fuse ZHT/OHT/KHT/NHT/EHT

Electrolux 0L2884

415039



Boiler heating element 4500W 230V
 L=320 mm; triangular flange 83,5x78,5 mm Øint. 47 mm; with bulb housing; faston 6,3x0,8 mm LS4 - C50

Electrolux 047847 0H2476 0K8125 0L1849

317776



Boiler heating element 4500W 240V
 L=350 mm; triangular flange 92x92 mm Øint. 57,5 mm; connection faston 6,3x0,8 mm; with thermal fuse ZHT/OHT/KHT/NHT/EHT

Electrolux 0L2886

613891



Boiler heating element 6000W 230V
 L=330 mm, triangular flange RTCS90/WTCS90 - RTCS140/WTCS140 - RTCS180/WTCS180 - RTCS250/WTCS250

Electrolux 0L1005

415006



Boiler heating element 4500W 240V
 L=400 mm; triangular flange RPN/EI760

Electrolux 045518 052620 0L1875

613892



Boiler heating element 6000W 230V
 L=335 mm; triangular flange; with screw, nut and washer RTCS90/WTCS90 - RTCS140/WTCS140 - RTCS180/WTCS180 - RTCS250/WTCS250

Electrolux 0L1006

415009



Boiler heating element 4500W 230V
 L=380 mm; triangular flange 83,5x78,5 mm Øint. 47 mm; with bulb housing; faston 6,3x0,8 mm LS3

Electrolux 026453 049307 052905 0L1876

415004



Boiler heating element 6000W 230V
 L=270 mm; triangular flange 83,5x78,5 mm Øint. 47 mm; with bulb housing; faston 6,3x0,8 mm LS - LC - HT - HYDRA

Electrolux 049455

415026



Boiler heating element 4500W 230V
 L=230 mm; triangular flange 83x83 mm Øint. 47,5 mm LB1/LB2/GW1/GW2/WT1/WT2/NGW

Electrolux 048284 048928 0H2568

415010



Boiler heating element 6000W 230V
 L=340 mm; triangular flange 92x92 mm Øint.57,5 mm; with thermal fuse EUCI/EUCAI/NUCAI

Electrolux 049898 0L2108 0L2725

Heating Elements

415005



Boiler heating element 6000W 230V; from S.n 029....
 L=290 mm; triangular flange 83x83 mm Øint. 47,5 mm; connection faston 6,3x0,8 mm RT10/RT180/Z18/WT90

Electrolux 049116 058012 066110 076035
 0L1878

414786



Tank heating element 2200W 440V
 dim. 365x78 mm; faston 6,3 mm

Electrolux 048998

415041



Boiler heating element 6000W 230V
 L=390 mm; triangular flange 83x83 mm Øint. 47,5 mm
 LS7D/LS7/LV70/FL700/HYDRA700/Z70

Electrolux 048221 048513

415225



Tank heating element 2200W 200V
 dim. 365x75 mm; flange 27,3x51 mm; faston 6,3 mm

Electrolux 048925

414996



Boiler heating element 9000W 230V
 L=350 mm; triangular flange 90x90 mm Øint. 57,5 mm; connection faston 6,3x0,8 mm; with thermal fuse
 ZHT/OHT/KHT/NHT/EHT

Electrolux 049992 0L1630 0L2653

415113



Tank heating element 2200W 220V
 dim. 330x85 mm; with nut Ø 14 mm

Electrolux 046404 047620 047848 048000
 0K8766

414872



Boiler heating element 10500W 254V
 L=345 mm; triangular flange 72x72 mm EHTA

Electrolux 0L0009 0L2466 0L2724

415016



Tank heating element 2200W 230V
 dim. 360x75 mm; flange 50x27 mm with gasket

Electrolux 048228 048924 0KE906 0L2340

414788



Boiler heating element 10500W 230V
 L=350 mm; triangular flange 92x92 mm Øint. 57,5 mm
 EHTA

Electrolux 049997 0L1772 0L2727

415049



Tank heating element 3000W 230V
 dim. 360x75 mm; faston 6,3x0,8 mm; complete gasket

Electrolux 048491 0L1870

Heating Elements

323088



Tank heating element 3000W 230V
dim. 365X75 mm; flange 51x27 mm;
connection M4

Electrolux 0L1974

325280



Washing hub gasket

Electrolux 0L2822

317775



Tank heating element 3000W 240V
dim. 365X75 mm; flange 51x27 mm;
connection M4

Electrolux 0L2876

414276



Heating element gasket Ø 110x140 mm

Electrolux 0H2210 0K7354

317778



Tank heating element 3000W 400V
dim. 365X75 mm; flange 51x27 mm;
connection M4

Electrolux 0L2877

415037



Tank heating element gasket in EPDM

Electrolux 048483

317779



Tank heating element 3000W 440V
dim. 365X75 mm; flange 51x27 mm;
connection M4

Electrolux 0L2878

438593



Contacts protection cover

Electrolux 065560

414117



Tank heating element 4000W 230V
L=465 mm, H=55 mm; with gasket and nut

Electrolux 0H2415 0K7032 0K7980 0K7983
482017071

419844



Nut

Electrolux 0K7985 0K8692

Heating Elements

412421



Flange for heating element

Ø 50x90; 6 hole Ø 7,5 mm e 2 hole thread M4x1

Electrolux 003362 065558 0K2022 0K2917

440794



Bracket LS720

Electrolux 048429

Thermostats

349229



Bi-metal thermostat NO52/NC60

3 contacts 16A 250V; contact 2-1 NO operat. 52/40°C; contact 2-3 NC operating temperature 60/48°C

Electrolux 048804 0L4312

435232



Bi-metal thermostat 110°C

with manual reset; 16A 250V

Electrolux 048287 048887 0K8665

349227



Bi-metal thermostat 52-60°C

60L50F with yellow/brown point; contact C-2=NC; contact C-1=NO operating temperature 30/46°C; contacts capacity 16A 250V

Electrolux 045495 047508 048487 0H2569

432312



Operating thermostat 1P 29=82°C

capillary L=900 mm; bulb Ø 6x145 mm; 15A 400V

Electrolux 049255 0L2122

324386



Bi-metal thermostat Klixon 105 °C

faston 6,3x0,8 mm

Electrolux 0L2895

432314



Operating thermostat 1P 30=90°C

capillary L=1250 mm; bulb Ø 6x113 mm; 15A 250V

Electrolux 046524 048266 049243 068012
0L1633 0L2144

Thermostats

429027



Operating thermostat 1P 30÷110°C
capillary L=900 mm; bulb Ø 6x112 mm; gland nut M9x1 + fittings

Electrolux 078030 0H2050 0K6920 0K7034

432344



Operating thermostat 1P 30÷110°C
capillary L=3000 mm; bulb Ø 6x112 mm; with gland nut M9x1

Electrolux 047285 0E5032 0H2117 0K7035
0KE345 475770402

432183



Safety thermostat 1P 126°C
coated capillary 830 mm; bulb Ø 6x129 mm; with gland nut

Electrolux 078029 0K6885 0K7884 0K7885

432302



Safety thermostat 3P 140°C
capillary L=900 mm; bulb Ø 6x180 mm

Electrolux 051644 0H2008 0K2938

416385



Gasket for bulb LS7
Ø 3x9 mm Ø est.13 mm - h 7 mm

Electrolux 048526

438733



Gland nut M12 - Ø 6,25 mm
L=18 mm

Electrolux 067899 0KX146

430474



Gland nut M12 - Ø 6,5 mm
L=18,5 mm

Electrolux 0E5033 0K7534 0KE421 478044600

415426



Gland nut H=40 mm
Connection M/F 16.5/9 mm

Electrolux 067958

418985



Connection 3/8"MF with nut and gasket

Electrolux 0E5031 0H2066 0K7027 0K7791

435110



Gland nut M16xL16 mm

Electrolux 0L0280

Thermostats

317180



Bracket 28x78 mm

Electrolux 0L2894

441776



Thermostat holder

Electrolux 048987

Timers

347883



Timer chambers 5
120 - 6 sec. 230V 50/60Hz; cable L=280 mm
faston F 6,3 mm

Electrolux 048647 0L3674

317882



Timer 16A 220-240V 50-60Hz

Electrolux 046621

347750



Timer chambers 5
180 - 6 sec.; 2 motor 230V 50/60Hz; cable
L=280 mm

Electrolux 048303 0L3642

347749



Timer chambers 6
120 - 6 sec.; 2 motors 230V 50/60Hz; cable
L=275 mm


Electrolux 048264 048591 0L3673

Transformers

301587

Transformer 30VA 50/60Hz
 PRI.: 230V, SEC.: 21,6-32,4V

Electrolux 0L0458 0L1032

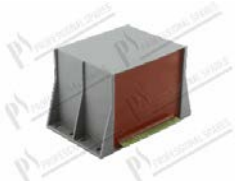349824

Transformer 30VA 50/60Hz
 PRI.: 230V, SEC.: 0-18-24Vdc

Electrolux 049617 0L0540

Fans

584708

Conveyor □ Ø 86,5x129x13 mm

Electrolux 0L2848

317832

Compact fan Ø 133 mm 24/27W 230V
 50/60Hz 0,11/0,13A
 cable L=560 mm; 2800/3300 rpm

Electrolux 0L2936

Cables

317790

Electrical components box
 dim. 124x84x55 mm

Electrolux 0L2934

436265

Wiring harness
 LS / H2500 / HT / LV / LD

Electrolux 0L0466

Cables

312375



Wiring harness
EHT / ZHT / AHT

Electrolux 0L1917 0L2490

581981



Wiring harness

Electrolux 0L1933 0L2487

436266



Wiring harness
EHT

Electrolux 0L0467 0L2491

613609



Wiring harness
NUC / EUC / ZUC / ET / AUC

Electrolux 0L0768

376416



Wiring harness

Electrolux 0L3134

507315



Wiring harness

Electrolux 0L3057

322778



Wiring harness
LS / H2500 / HT900 / LV / LD

Electrolux 0L1414

Drain components

317765



3 ways connection for drain pipe
rubber holder Ø 10,5-12 mm; connection Ø 23 mm

Electrolux 0L2844

441647



Drain manifold

Electrolux 049600

440896



Drain manifold

Electrolux 048430 0L0081

435260



Stopples for manifold

Electrolux 046596


459508



Drain manifold
rubber holder Ø 35,5/63,5 mm

Electrolux 0L2837

438404

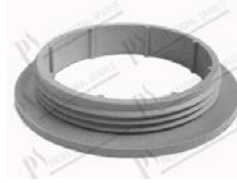

Ring nut Ø 122 mm
H=20 mm

Electrolux 048326

435079



Drain manifold [KIT]
Ø 124 mm H=146 mm

Electrolux 048325 0L1629

441701



Plug Ø 34x41x23 mm

Electrolux 047555

412060



Drain manifold KIT
dim. 160x135x130 mm

Electrolux 047457 0L1638

440936




Drain hose sealing - Kit
Ø 30x54x30 mm

Electrolux 0E0141 0K7044 0K7045 0KJ720
475778300

Drain components

438460

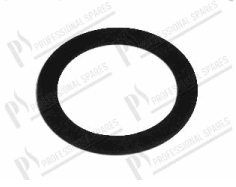

Gasket Ø 47x59x3 mm

Electrolux 046595

419558



Drain plate [Kit] - RT100-140

Electrolux 0E0113 0K7046 0L1862 475778400

441799



Gasket Ø 50x60x1,5 mm

Electrolux 049828

435090



**Overflow pipe Ø 26x277 mm
in plastic**

Electrolux 048842

438484



Gasket Ø 50x74x3 mm

Electrolux 048230

435253



**Overflow pipe Ø 26x280 mm
in plastic**

Electrolux 048323

440938



**Flat gasket Ø 65x102x2 mm EPDM
holes Ø 7 mm**

Electrolux 0E0112 0K7352 477739400

441928



Overflow pipe Ø 38x350 mm

Electrolux 049140

416279



Gasket Ø 82x89x3 mm

Electrolux 045461 046593 0KE876

323163



**Overflow pipe Ø 39x385 mm
O-ring 2,62x32,99 mm - SILICONE**

Electrolux 0L2829 0L4544

Drain components

435312



Overflow pipe Ø 40x415 mm
in plastic

Electrolux 048250

338642



Overflow pipe Ø 40x430 mm with filter
in plastic

Electrolux 045476

582037



Overflow pipe with filter Øext. 160 mm
Ltot.=360 mm; hose Øext. 39 mm

Electrolux 0L2830

441603



Plug for overflow pipe
Ø 80x20 mm

Electrolux 048231

Dispensers and Peristaltic pump

518733



Rinse aid hydraulic dispenser [Kit]
adjust. capacity 0+4 cm³; min. pressure 0,5 bar; polyethylene pipe fittings Ø ext. 6 mm; hose Ø 4x6x2000 mm

Electrolux 045478 047447 048223 048496
048715 049484 0L0094 0L3182
0L4295

431057



Rinse aid hydraulic dispenser N6
Pmin 0,5 bar, IN 90° Ø 4x6 mm / OUT 180° Ø 4x6 mm

Electrolux 0H2040 0K8196

Dispensers and Peristaltic pump

317747



Peristaltic pump; delime

mod. NPG-18; fixed flow rate 18 L / h; 0.1 bar; without rubber holder, conical nut; 3.5W 24V; cable L = 210 mm; hose in Santoprene

Electrolux 0L2868 0L3407 0L3654

610868



Detergent peristaltic pump adj. capacity (internal use)

mod. NBR-3; flow rate adj. 0,3÷3 lt/h 0,1 bar; 230V 50/60Hz; cable L=1200 mm; installation kit included

Electrolux 049469 0S0707 0S1338

610871



Rinse aid peristaltic pump w/speed adj. (external use)

mod. PR-1; flow rate adj. from 0,15÷1 lt/h press. 3 bar; 230V 50Hz; protection IP65; cable L=1200 mm; Hose in sekobril; installation kit included

Electrolux 0S0671

410180



Hose for detergent pump Santoprene Ø 6,25x10,55 mm

584863



Detergent peristaltic pump fixed capacity

mod. NPG-1,5; fixed flow rate 1,5 L/h; 0,1 bar; without rubber holder, conical nut; 230V 50Hz cable L=200 mm; hose in Santoprene; (internal use)

Electrolux 0L0507 0S1712 0S1988

325646



Rinse aid peristaltic pump fixed capacity

mod. NPG-0,4; fixed flow rate 0,4 L/h; 3 bar; without rubber holder, conical nut; 8W 230V 50/60Hz; cable L=200 mm; hose in sekobril; (internal use)

Electrolux 049311 049416 049625 0KE953
0L0697 0S0704 0S1713 0S1989

508831



Hose for rinse aid pump sekobril Ø 3x8 mm

582853



Detergent peristaltic pump fixed capacity

mod. NPG-3; fixed flow rate 3 L/h; 0,1 bar; without rubber holder, conical nut; 230V 50Hz cable L=200 mm; hose in Santoprene; installation kit included; (internal use)

Electrolux 0S1711 0S1986

610862



Detergent peristaltic pump fixed capacity (internal use)

mod. NPG-3; fixed flow rate 3 L/h; 0,1 bar; 230V 50Hz cable L=200 mm; hose in Santoprene; installation kit included

Electrolux 049312 049417 049624 0KE952
0L0704 0S0705 864218

410180



Hose for detergent pump Santoprene Ø 6,25x10,55 mm

508856



Hose for detergent pump Santoprene Ø 6,25x10,65 mm

582854



Detergent peristaltic pump adjust. Capacity

mod. NBR-3; flow rate adj. 0,3÷3 lt/h 0,1 bar; without rubber holder, conical nut; 230V 50Hz; cable L=1200 mm; hose in Santoprene; installation kit included; (internal use)

Electrolux 0S1710 0S1987

508856



Hose for detergent pump Santoprene Ø 6,25x10,65 mm

Dispensers and Peristaltic pump

610870



Detergent peristaltic pump w/speed adj. (external use)
 mod. PR-4; flow rate from 0,6÷4 lt/h press. 0,1 bar; 230V 50Hz; protection IP65; hose in Santoprene; cable L=2750; installation kit included;

Electrolux 0S0669

410373



Suction filter in inox for hose Ø 4x6 mm
 Ø 20x18 mm

Electrolux 049356 0S1028

700435



Detergent peristaltic pump w/conductivity probe
 mod. PA-6; flow rate 6 lt/h press. 0,1 bar; 230V 50Hz; protection IP65; hose in Santoprene; cable L=2750 mm + L=2750 mm; installation kit included

Electrolux 0G3344 0S0670


610864



Pipe fitting 90° M10x22 mm inox
 thread Ltot=22 mm, per tubo Ø 4x6 mm

Electrolux 049357 0S0674 0U0998

610865

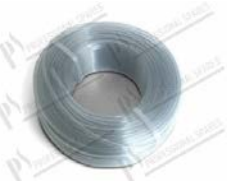

PVC transparent hose Ø 4x6 mm [hank 100 mt]

Electrolux 0S2772

410374



Pipe fitting 1/8 with nut
 thread Ø 9,3 mm

Electrolux 049652

524153



Stiff polyethylene grey hose Ø 4x6
L=2660 mm, Tmax 130°C
 suitable for detergent pump, working T. -20 +60°C, max pressure 10 bar.

Electrolux 049360 049905 0L1163

317496



Ring nut M10x1 (2 pcs)
 for hose Ø 4x6 mm

Electrolux 0L2071

532483



Stiff polyethylene blue hose Ø 4x6 mm
[hank 100 mt]
 Feeding hose rinse peristaltic pump

Electrolux 0S2101

436193



Plug

Electrolux 0L0349

Dispensers and Peristaltic pump

317631



Detergent injector M10x1 CH12
rubber holder Ø 5 mm

Electrolux 0L2869

410181



Hose for rinse aid pump sekobrill Ø 3x8 mm
L=175 mm - rubber holder Ø 4x6 mm

Electrolux 049418

317619



Ring nut
for hose Ø 6 mm

Electrolux 0L3079 0L4400

508831



Hose for rinse aid pump sekobrill Ø 3x8 mm
L=175 mm - without rubber holder, conical nut

Electrolux 0S2122

438249



Pipe fitting 90° M10 mm inox
thread L=12 mm; for hose Ø 4x6 mm

Electrolux 049557 049801 0KA991

410180



Hose for detergent pump Santoprene Ø 6,25x10,55 mm
L=180 mm - rubber holder Ø 4x6 mm

Electrolux 049419 0S0678

317782



Washer 1-1/2x7/8x0,050 INOX
Ø 21,9x38x1,5 mm, H=2,3 mm

Electrolux 0L1087

508856



Hose for detergent pump Santoprene Ø 6,25x10,65 mm
L=180 - without rubber holder, conical nut

Electrolux 0S2121

317629



Detergent injector Ø 18 mm - 1/2"

Electrolux 0L1085

331546



Pipe for dispenser
L=1040 mm

Electrolux 069657

Dispensers and Peristaltic pump

410378



Nonreturn valve 1/8" for hose Ø 4x6 mm

Electrolux 049358

412192



Funnel for rinse

Electrolux 047548 049331

410240



Nut

Electrolux 047550

Solenoid Valves and Reducers

349160



Solenoid valve 90° - 1 way - 220/240V
50/60Hz - Ø 14 mm
with fastons; inlet Ø 3/4" with filter and inlet
reducer 20 lt/min; Tmax 90°C

Electrolux 045701 046320 047466 047529
047843 048178 048179 048571

200271



Solenoid valve 90° - 2 ways - 220/240V
50/60Hz - Ø 14 mm
with fastons; inlet Ø 3/4" with filter; Tmax
90°C

Electrolux 049230

435073



Solenoid valve 90° - 1 way - 220/240V
50/60Hz - Ø 14 mm
with fastons; inlet Ø 3/4" with filter and inlet
reducer 20 lt/min; Tmax 90°C; coil 90°

Electrolux 048898 0L3439

434655



Inlet pressure reducer 5 lt/min
[black-EIb]

Electrolux 0L0169

Solenoid Valves and Reducers

310829



Inlet pressure reducer 5,5 lt/min [black-Elbi]

Electrolux 0L0170

200131



Inlet pressure reducer 10 lt/min [natural-Elbi]

Electrolux 049650

435218



Solenoid valve 90° - 1 way - 220/240V 50/60Hz - Ø 14 mm
rast 5; inlet Ø 3/4" with filter and inlet reducer 10 lt/min; Tmax 90°C; without bracket

Electrolux 049626

349163



Solenoid valve 90° - 1 way - 200V 50/60Hz - Ø 14 mm
rast 5; inlet Ø 3/4" with filter and inlet reducer 20 L/min; Tmax 90°C

Electrolux 048619 049157

349307



Solenoid valve 90° - 1 way - 220/240V 50/60Hz - Ø 14 mm
rast 5; inlet Ø 3/4" with filter and reducer 20 lt/min; Tmax 90°C

Electrolux 048817 0L3440

349158



Solenoid valve 90° - 1 way - 220/240V 50/60Hz - Ø 14 mm
rast 5; inlet Ø 3/4" with filter and inlet reducer 5,5 lt/min; Tmax 90°C; coil 90°

Electrolux 049452 049983

349397



Solenoid valve 90° - 2 ways - 220/240V 50/60Hz - Ø 14 mm
rast 5; connector; inlet Ø 3/4" with filter; Tmax 90°C

Electrolux 049439

613616



Solenoid valve 180° - 1 way - 220/240V 50/60Hz - Ø 14 mm
rast 5; inlet Ø 3/4" with filter and inlet reducer 5 lt/min; Tmax 90°C

Electrolux 0E2531 0L0776 0L3447 0W0706

533521



Solenoid valve 180° - 1 way - 220/240V 50/60Hz - Ø 14 mm
rast 5; inlet Ø 3/4" with filter and inlet reducer 5,5 lt/min; Tmax 90°C

Electrolux 0L0121 0L0567

533522



Solenoid valve 180° - 1 way - 220/240V 50-60Hz - Ø 14 mm
rast 5; inlet Ø 3/4" with filter and inlet reducer 10 lt/min; Tmax 90°C

Electrolux 0L0568 0L3446

Solenoid Valves and Reducers

533519



Solenoid valve 180° - 1 way - 220/240V 50/60Hz - Ø 14 mm
 rast 5; inlet Ø 3/4" with inlet reducer 20 lt/min; Tmax 90°C

Electrolux 0L0566 0L3445

438451



Solenoid brass valve - NC - G3/8" - 230V 50Hz

Electrolux 049509

325275



Solenoid valve 180° - 1 way - 220/240V 50/60Hz - Ø 14 mm
 rast5; inlet Ø 3/4" with filter and inlet reducer 4 lt/min; Tmax 90°C

Electrolux 0L2960 0L3450

417321



Solenoid brass valve 2/2 - NC - G1/8" - 230V 50/60Hz
 dim. 26x22x54 mm - coil 230V 50Hz 9W; Pmin 0 bar, Pmax 10 bar

Electrolux 0H2496 0H2520 0K7260 0K8179

532482



Solenoid brass valve L182 - NC - G3/8" - 200V 50-60Hz
 L=60 mm - EPDM membrane - Fluid. Temp -10°C/+90°C; 0,35-20bar

Electrolux 0L0570 0L2857

417394



Solenoid brass valve EV220B G1/2" - 220/240V 50/60Hz
 L=60 mm; Tmax -30/+100°C; 0,3-10bar

Electrolux 0H2268 0H2411 0K7953

532485



Solenoid brass valve L182 - NC - G3/8" - 208-240V 50/60Hz
 L=60 mm; EPDM membrane - UL/CSA; 0,35-16bar

Electrolux 0L0488 0L0569 0L2656

417611



Solenoid brass valve EV220 - NC - G1/2" - 9W 230V 50Hz
 L=58 mm; Tmax -30/+100°C; 0,3-10bar

Electrolux 0H2412 0K6761 0K7060 0K7507
 0KA629

342584



Solenoid brass valve G1/2" - 240V 50Hz
 L=60 mm; Tmax 120°C

Electrolux 0KM329

Filters

438416



Water filter 1/2" - L=110 mm

Electrolux 048834

438269



Tank filter 485x495 mm - inox

Electrolux 048331 048332 048584 049537

433654



Water filter 3/4" L=121 mm

Electrolux 048746

518752



Tank filter 598x238x20 mm - INOX

Electrolux 0L0069

441269



**Water filter 3/4" - L=68 mm
bronze body and filter in INOX**

Electrolux 053037 068121 0KL216

317615



Tank filter 560x293 mm

Electrolux 0L2826

441798



Filter table

Electrolux 048251 049796 049846

435080



Pump suction filter Ø 131x107 mm

Electrolux 048324

582036



Tank filter 560x290 mm with hole Ø 135 mm

Electrolux 0L2827

459502



Filter Ø 130x88mm

Electrolux 0L2824 0L3586

Filters

582035



Tank filter Ø 153 mm

Electrolux 0L2840

582038



Pump filter Ø 183 mm

Electrolux 0L2834

317610



Pump filter Ø 185 mm H=74 mm

Electrolux 0L2835

441800



Pump filter

Electrolux 048431 048515 049633 049647

441893



Basket filter 230x155x70 mm

Electrolux 048252

Shower units and Water columns

544763



Shower unit with one-hole mixer tap with taps heads
fitting Ø 3/4"; connection pipe Ø 1/2" L=350 mm; H=1100 mm; series Klarco

Electrolux 069570 069968 OS1036 855315

310503



Shower unit with one-hole mixer tap single-lever
connection Ø 3/4"; water delivery spout L=275x25 mm

Electrolux OS0874 855324

318744



Hand shower M1/2" - EUROP

347886



Hand shower STAR 1/2"M

586022



Water saving Hand shower NEW/4L - 3,8l/min - 3bar

318744



Hand shower M1/2" - EUROP

613574



Plastic support L=115 mm

586022



Water saving Hand shower NEW/4L - 3,8l/min - 3bar

348523



Spring for shower unit

348523



Spring for shower unit

613575



Tap head G1/2" 8x20 mm

348303



Water spout aerator 3/4" - Klarco

318741



O-ring 1,78x15,6 mm EPDM [10 Pcs]

412560



Mixing cartridge Klarco Ø 47x30 mm

Shower units and Water columns

538786



Shower unit with two-holes mixer tap with taps heads
connection Ø 3/4" - centre distance 155 mm;
Klarco serie

Electrolux 0L0643 855311

312070



Shower unit MAXI Reel 10 m - without water-gun
with automatic hose-reel, in INOX 304

Electrolux 0S0877

318744



Hand shower M1/2" - EUROP

586022



Water saving Hand shower NEW/4L - 3,8l/min - 3bar

348523



Spring for shower unit

348428



Piston for shower

540823



Knob symbol red with tap head 3/4"

540822



Knob symbol blue with tap head 3/4"

348326



Spring

312065



Shower unit MAXI Reel 15 m - without water-gun
with automatic hose-reel, in INOX 304

Electrolux 0S0878

347886



Hand shower STAR 1/2" M
dim: 245x90x50 mm

Electrolux 069973 0S0347

318744



Hand shower M1/2" - EUROP

Electrolux 069569 0L0640 0S1075 0S1102

311811



Hand shower NITO 1

Electrolux 0S0823

Shower units and Water columns

311812



Hand shower NITO 2

Electrolux 0S1132

Wash units

533535



Wash arm complete with hub L=480 mm
hole Ø 14 mm; LS6E / WT30E / LS7 / WT40 / LS9 / WT55

Electrolux 048336 048821 OKE914 0L0598

533534



Wash arm complete with hub L=480 mm
hole Ø 14 mm; LS10EA-14EA / WT65E

Electrolux 048247 0L0597

311312



Rinse arm L=472 mm mounting upper/lowe

412044



Rinse Jet plug M11x1,5

435311



Pin for jets M12x1 L=43 mm

438537



Knurled nut M12x1 Ø 35 mm H=6 mm

311312



Rinse arm L=472 mm mounting upper/lowe

412044



Rinse Jet plug M11x1,5

435311



Pin for jets M12x1 L=43 mm

438537



Knurled nut M12x1 Ø 35 mm H=6 mm

317580



Wash arm complete with hub L=480 mm
hole Ø 14 mm

Electrolux 0L2823

Wash units

435783



Rinse arm L=670
10 nozzle

Electrolux 049152

435311



Pin for jets M12x1 L=43 mm

419634



Rinse arm
with nozzle and terminal plug

Electrolux 0H2224 0K7382 0K7396 0KE400
477847000

432946



Flange fix nozzle

433184



Holder for jets

335842



Screw M4x9 INOX

311312



Rinse arm L=472 mm mounting
upper/lowe
Ø 12 mm - 7 nozzle


Electrolux 048248 048337 048542 048716
0T0325

533535



Wash arm complete with hub L=480 mm

412044

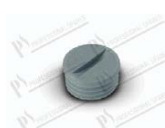

Rinse Jet plug M11x1,5

435311



Pin for jets M12x1 L=43 mm

438537



Knurled nut M12x1 Ø 35 mm H=6 mm

337666



Hub for jets Ø 78/67x35 mm

Electrolux 046362

438408



Hub for jets Ø 76/67x35 mm

Electrolux 048246 048401

Wash units

337554



Shaft for support Ø 10,5x100 mm

Electrolux 046363

438259



Support for lower jets

Electrolux 048235

435078



Shaft for support Ø 14x50 mm

Electrolux 048333

518768



Support for upper jets 350x170x150 mm,
from SN. 620
for mod. LS14WS/WT65WS

Electrolux 0L0051

438414



Holder for lower jets [cpl. kit]

Electrolux 048329 048819 0L1628

414368



Support for lower jets

Electrolux 0H2162 0K7261 477617900

613650



Support for upper jets until SN. 619
for mod. LS14/WT65WS

Electrolux 0L0812

414367



Support for upper jets 86x86xh56 mm

Electrolux 0H2163 0K7262 477617901

441642



Support for upper jets

Electrolux 049634

414417



Support for upper jets

Electrolux 0H2076 0H2077 0K7053

Wash units

338697



Support for upper jets

Electrolux 046547

337427



Rinse Jet plug

in metal with internal thread M12x1; for rinse jet cod. 435096

Electrolux 048289

532160



Connection pipe for jets

dim. 1000x140 mm; to order the tube provide PNC and serial number of the appliance

Electrolux 049595 0L0556

412044



Rinse Jet plug M11x1,5

external thread; for rinse jet cod. 435096

Electrolux 048714

412525



Connection pipe for jets

dim. 820x340x100 mm

Electrolux 048646

431916



Plug

Electrolux 0H2184 0K7314

325277



Connection pipe for jets

dim. 830x420x180 mm; Ø 50mm

Electrolux 0L2821 0L3470

418184



Plug M20

Electrolux 0E0123 741611324

337417



Washing arm plug

Electrolux 046266

414241



Rinse Jet plug

dim. 10x10x10 mm

Electrolux 0H2075 0K7052

Wash units

412184



Nozzle fastener

Electrolux 046273

435311



Pin for jets M12x1 L=43 mm

Electrolux 048290 0E5641 0T2704

432946



Flange fix nozzle
black plastic - dim. 32x9 mm; center distance
holes 23 mm

Electrolux 0H2203 0K7341

439855



Shutter

Electrolux 048820 0KE924

431915



Rinsing nozzle

Electrolux 0H2183 0K7313

439806



Shutter Ø 55 mm

Electrolux 048238 048645 048931

432949



Rinsing nozzle Ø 9,5 mm

Electrolux 0H2041 0K6826 464214500

317722



Shutter Ø 29x52,5x1,5 mm

Electrolux 0L1185

412181



Rinsing nozzle

Electrolux 046272

441608



Flange Ø 69 mm - H=15 mm

Electrolux 048192

Wash units

441607



Pipe union Ø 24,5 mm

Electrolux 048193

430874



Plastic guide ring
Ø 52x16,6 mm, int. Ø 30,3 mm

Electrolux 0H2079 0H2080 0K7055 0KE348

433184



Holder for jets

Electrolux 0H2205 0K7342

441740



Reduction

Electrolux 048650

414414



Bearing Ø 59x12,5xh22 mm
for washing jet

Electrolux 0H2096 0K7112

438260



Gasket Ø 70x100 mm

Electrolux 048236

301576



Nut Ø 21-25 mm

Electrolux 0L0761 0L0903

438261



Ring nut Ø 62x100xh48 mm

Electrolux 048237 0KE908

430872



Plastic guide ring
Ø 54,6x16,6 mm, Øint.45,5 mm

Electrolux 0H2078 0K7054

317617



Ring nut Ø 23,5x60x20 mm

Electrolux 0L2867

Wash units

441686

Ring nut Ø thread 64.5 mm H=43 mm
Nut Ø 87 mm

Electrolux 048330

431707

Hose

Electrolux 0H2561 0K8706

531953

Ring nut Ø int. 72mm; see details
To order the ring nut provide PNC and serial number of the appliance

Electrolux 049596 0L0557

417620

Repair dishwashing D48-D480 Kit

Electrolux 0K8106

Curtains

439767

Spring stretcher
Ø 5,2x430 mm - thread L=150 mm

Electrolux 049583

Air-gaps

582062



Air-break (closed window) - [Kit]
inlet/outlet Ø 27/12 mm; dim. 270x200x60 mm

Electrolux 0G6643

434662



Air break [open window]
inlet/outlet Ø 27/12 mm; dim. 25x26x70 mm

Electrolux 049481 0L2435

317205



Air-break

Electrolux 0L2847

513159



Air break

Electrolux 049288 0L0459

435254



Air break 47x59xh26,5 mm
pipe fitting Ø 7 mm

Electrolux 048308 0K8750

325526



Air break
Øext. 30 mm

Electrolux 0L2846

439854



Air break

Electrolux 048853 0L4781

435187



Air break boiler

Electrolux 049628 049776 0L0098

435224



Air-break [closed window]
inlet/outlet Ø 27/12 mm; dim. 270x200x60 mm

Electrolux 049459 0KB770 0L2666

435134



Air break Ø 44x113 mm

Electrolux 046631 0H2542 0K8662 542601001

Air-gaps

325534



Air break

Electrolux 0L2849

441797



Protection

Electrolux 049847

412158



Air break 150x65x65 mm

Electrolux 045351 045459

438734



Ring

Electrolux 045507 046881 067930

438450



**Ring nut for LS10
Ø 50x64 mm**

Electrolux 049480 0KB772

317791



Air gap reed sensor

Electrolux 0L2959

524109



Plug

Electrolux 049849

584637



Electrolux 0L3756

317436



Protection air break 85x165x20 mm

Electrolux 0L2560

Water conditioning

529584
**Automatic water softener 8 lt valve
AUTOTROL 366**

dim. 245x450x440 mm; water connections Ø 3/4" - pressure 1+8 bar; power supply 230V 50/60Hz; AISI 304 tank 5,6 lt; flow rate at 20°F 1680 l/h

Electrolux OS0331 OS1077 OS1946

410068
**Manual water softener 12 lt inlet Ø
3/8"-3/4"**

12 lt AISI 304 stainless steel cylinder with 9 lt resin; 4-50°C; regeneration salt 1,5 Kg; flow rate 1000 lt/h; dim. Ø 190x500 mm; with reduction inlet-outlet Ø 3/8"-3/4"

Electrolux OS0330

410190
**Automatic water softener 8 lt AUTOTROL
255 Logix 740**

LOGIX TIMER, 8 lt AISI 304 stainless steel cylinder with 5,6 kg resin; water connection Ø 3/4" temp. 4-50°C; power supply 230V 50/60Hz; regeneration salt 1 kg; dim. 245x480x540 mm

Electrolux OS0716 OS1079

545623
**Manual water softener 20 lt inlet Ø
3/8"-3/4"**

20 lt AISI 304 stainless steel cylinder with 15 lt resin; 4-50°C; regeneration salt 2,5 Kg; flow rate 1000 lt/h; dim. Ø 190x900 mm; with reduction inlet-outlet Ø 3/8"-3/4"

Electrolux OS0329 860430

410189
**Automatic water softener 12 lt-valve
AUTOTROL 255 Logix 740**

dim. 320x500x660 mm; water connections Ø 3/4" - pressure 2+8 bar; power supply 230V 50/60Hz; flow rate at 20°F 2520 l/h; fiber tank 9 lt, salt container 30 kg

Electrolux OS0332 OS1083

540863
**Manual water softener 8 lt by pass,
water inlet Ø 3/8"**

8 lt AISI 304 stainless steel cylinder with 5,8 lt resin; 4-50°C; regeneration salt 1 Kg; dim. Ø 190x400 mm; with reduction inlet-outlet Ø 3/8"-3/4"

Electrolux OS0578 OS1074

515343
**Automatic water softener 24 lt valve
AUTOTROL 255 Logix 740**

dim. 320x500x1120 mm; water connections Ø 3/4" - pressure 2+8 bar; power supply 230V 50/60Hz; flow rate at 20°F 5.040 l/h; fiberglass tank 17 lt, salt container 50 kg

Electrolux OS1089

540864
**Manual water softener - 12 lt by pass,
water inlet Ø 3/8"**

12 lt AISI 304 stainless steel cylinder with 9 lt resin; 4-50°C; regeneration salt 1,5 Kg; dim. Ø 190x500 mm; with reduction inlet-outlet Ø 3/8"-3/4"

Electrolux OS0579 OS1076

535868
**Manual water softener 8 lt inlet Ø
3/8"-3/4"**

8 lt AISI 304 stainless steel cylinder with 5,8 lt resin; 4-50°C; regeneration salt 1 Kg; flow rate 1000 lt/h; dim. Ø 190x400 mm; with reduction inlet-outlet Ø 3/8"-3/4"

Electrolux OC1903

311048
**Salt container
from SN 808...**

Electrolux OL1692

Water conditioning

339685



Funnel for salt tank
Ø 34x96 mm

Electrolux 047604

436020



Plug

Electrolux 0L0272

317626



Salt funnel Ø 45 mm
Øext. 102 mm - Htot=81 mm

Electrolux 0L2950

613589



Gasket 250x64.5x1 mm

Electrolux 0L0750

311052



Gasket Ø 56x67x3 mm

Electrolux 0L1691

613606



Internal water softener 450x330 mm

Electrolux 0L0764 0L0767

311059



Ring nut Ø 51mm

Electrolux 0L1693

613609



Wiring harness

301849



Magnetic microswitch

613588



Plug Ø 29 mm
Øint 26 mm

Electrolux 0L0749

613607



Solenoid valve 230V 50/60Hz

Water conditioning

317204



Internal water softener 220/240V 50/60Hz

Electrolux 0L2871

317626



Salt funnel Ø 45 mm

317633



Reed sensor

317609



Solenoid valve white 220/240V 50/60Hz

317808



Plug Ø 85 mm

317616



Ring nut Ø 80 mm

395248



O-ring 5,00x64,00 mm

317633



Reed sensor

Electrolux 0L2956

317609



Solenoid valve white 220/240V 50/60Hz

Electrolux 0L2954

613607



Solenoid valve 230V 50/60Hz

Electrolux 0L0766 0L2957

317509



Solenoid valve 230V 50/60Hz

Electrolux 0L0765

317808



Plug Ø 85 mm

Electrolux 0L2951

317616



Ring nut Ø 80 mm

Electrolux 0L2953

Water conditioning

301623



Water filter for manual water softener 3/4"
wound wire cartridge 5"

Electrolux OL1141

613636



Pipe fitting Ø38 mm - thread M/F 26,5 mm

Electrolux OL0799

301622



Water filter for manual water softener 3/8"
wound wire cartridge 5"

Electrolux OL1140

613586



Pipe fitting Ø40 mm

Electrolux OL0747

316135



Wound wire filter cartridge 50 micron
Ø 28,5x62,5x130 mm (NK111 e NK112)

Electrolux OS1027

340451



Membrane for softener

Electrolux OC0048

325024



Refil filter cartridge Profine blue (small)
capacity 15000 lt

Electrolux OS1821 864393

312910



Refil cartridge Purity 1200 Clean (blu)
capacity 13000 lt; partial demineralisation

Electrolux OS0802

410125



Cationic resin pack 25 lt

Electrolux OS0333

310336



Refil cartridge Purity 1200 Clean Extra (red)
capacity 3100 lt; total demineralisation

Electrolux OS0804

Water conditioning

200288

**Flow meter with digital 100-700 L**

sensor 3/4" MF; L=83 mm; cable L=1500 mm;
4-60°C; Max 8,6 bar

Electrolux 0S0945

582443

**Water purifier**

JG pipe Ø 7x10 mm, JG pipe Ø 1/4 "x 0.170"
(Ø 4.3x6.35 mm 90 ° fitting JG MF10 mm, JG
MF fitting 6.4 mm

Electrolux 0S0718 0S1822 864026 864388

302068



**Descaling cleaning membranes osmosi,
mod. RO600C**
Complet 2 filter carboni e 1 descaling 200 gr

Electrolux 0S0730

Hoses

317512



Formed hose Ø 25x35 mm
L=310 mm

Electrolux 0L0785

412523



Formed hose Ø 56 mm
dim: 380x230 mm

Electrolux 046542

317817



**Formed hose Ø 25x35 mm / Ø 27,5x37,5
mm**
dim. 92x216 mm

Electrolux 0L2852

414971



**Formed hose 3 way Ø 41x55 mm / 42x57
mm / Ø 60x74 mm**
dim. 205x220 mm

Electrolux 048241

Hoses

325107



Formed hose 3 way Ø 44,5x54,5 mm /
50,5x60,5 mm
dim. 215x205x235 mm

Electrolux 0L2825

414268



Formed hose Ø int. 63 mm L= 60 mm

Electrolux 0E0130 0K7173

518753



Sleeve Ø 46,5x57 mm / 60x71 mm L=90
mm EPDM

Electrolux 0L0068

441553



Sleeve Ø 70x80 mm, L=50 mm

Electrolux 048242

613601



Formed hose Ø 25x33 mm / Ø 33x40 mm
L=70 mm EPDM

Electrolux 0L0759

438370



Sleeve Ø 60x68 mm L=95 mm EPDM
working temp. -35°C÷120°C; Pmax 6 bar

Electrolux 045456 0L0613

538756



Formed hose Ø 43x53 mm L=110 mm

Electrolux 0L0558 0L0612

342003



Sleeve Ø 65x74 mm L=110 mm EPDM
working temp. -35°C÷120°C; Pmax 6 bar

Electrolux 046565

440498



Formed hose Øint 63 mm

Electrolux 0L0067

439796



Formed hose 90° Ø 27x37 mm - Ø 31x41
mm EPDM
dim. 295x80 mm

Electrolux 049080

Hoses

317880



Formed hose 90° Ø 24x30 mm - L=125/50 mm

Electrolux 0E0134 0E5166 0H1998 0K4558
482458900

438406



Formed hose 90° Ø 33,5x43,5 mm / Ø 39x49 mm dim. 110x95 mm

Electrolux 048328 049149

439761



Formed hose 90° Ø 26x36 mm until SN ...607 dim. 170x52 mm

Electrolux 049880

582455



Formed hose 90° Ø 61x71 mm / Ø 63x73 mm dim. 140x110 mm

Electrolux 0L2836

582454



Formed hose 90° Ø 25x35 mm dim. 81,5x53 mm

Electrolux 0L2851

582453



Formed hose 90° Ø 62x72 - 64x74 mm dim. 140x100 mm

Electrolux 0L3628

441648



Formed hose 90° Ø 27x36 mm dim. 270x270 mm

Electrolux 049599 0L0813

412518



Formed hose Øext. 45 mm coupling hose Ø 45x55x63 mm, dim. 350x220x175 mm

Electrolux 046372 046616

582456



Formed hose 90° Ø 35x45 mm dim. 138x86 mm

Electrolux 0L2839

317825



Hose EPDM Ø 4x7 mm L=2000 mm working temp. -35°C+110°C; Pmax 10 bar; WRAS certified

Electrolux 0DE016 0L3415

Hoses

319338



Hose EPDM Ø 4x7 mm L=5000 mm
working temp. -35°C+110°C; Pmax 10 bar;
WRAS certified

Electrolux 072393 0C4205 0HM323 0K9162
0KC518

524155



Hose EPDM Ø 5x12 mm L=600 mm

Electrolux 049904 0L1909

435233



Hose EPDM Ø 5x12 mm L=2300 mm
Tmax 110°C

Electrolux 048168 048225 048226 048883
068638 068792 068793 068794

613622



Hose EPDM Ø 8x13 mm L=300 mm
for hot water; Pmax 10 bar; working temp
-35°C+120°C; Pmax 10 bar

Electrolux 0L0786

346280



Hose EPDM Ø 10x17 mm - blue -(sold by meter)
Pmax 10 bar; working temp. -35°C+110°C;
FDA approved

Electrolux 086085 0C4832 0C5829 0C9202
0L3060 0L3061 0L3062 0L3063

200004



Hose EPDM Ø 11x19 mm - blue - (sold by meter)
Pmax 10 bar; Work Temp. -35°C+110°C; FDA approved

Electrolux 049379 0L3641 0U1051

582281



Hose EPDM Ø 11x19 mm L=500 mm - blue
Pmax 10 bar; Work Temp. -35°C+110°C; FDA approved

Electrolux 0L3058

200002



Hose EPDM Ø 12x19,5 mm (sold by meter)
for hot water - not toxic - Pmax 10 bar -
working temp -35°C+120°C

Electrolux 045451 045807 045808 045942
048531 057763 057791 065535
066081 066082 069091 0E5053
0K8116 0K8670 0L3064 0T3901

301598



Hose EPDM Ø 12x19,5 mm L=320 mm
for hot water Tmax 110°C; atossic

Electrolux 0L1115

700448



Hose EPDM Ø 25,5x35,5 mm (sold by meter)
working temp. -35°C+110°C; Pmax 10 bar

Electrolux 049773 0W0194 0W0195 0W01JR
0W1RL4 0W1RLK 0W3935 0W3953

Hoses

200006



Hose EPDM Ø 25,5x32,5 mm (sold by meter)
working temp. -35°C÷100°C; Pmax 10 bar

Electrolux 049287 0L4453

410462



PVC transparent hose Ø 4x6 mm L=4000 mm

Electrolux 049359

438277



Hose EPDM Ø 42x52 mm L=430 mm
working temp. -35°C÷120°C; Pmax 6 bar

Electrolux 046257 065531

338394



Armored hose Ø 22 mm L=550 mm

Electrolux 049444

438371



Hose EPDM Ø 45x54 mm L=300 mm
working temp. -35°C÷120°C; Pmax 6 bar

Electrolux 045457 045768 045806 068640

412205



Armored hose Ø 22 mm L=700 mm

Electrolux 049448

335703



Flexible hose Ø 6 mm (sold by meter)

Electrolux 0H2358 0K7750

311261



Rubber feeder hose 3/4" L=650 mm
straight connection; ring nut in nickel-plated brass Ø 3/4"F; Øint/est 14/18 mm; max pressure 15 bar; Tmax 90°C; WRC/WRAS approved

Electrolux 0L2389

436434



Stiff polyethylene blue hose Ø 4x6 mm L= 2660 mm
Feeding hose rinse peristaltic pump

Electrolux 0L0481

311262



Rubber feeder hose 3/4" L=1500 mm
straight connection; ring nut in nickel-plated brass Ø 3/4"F; Øint/est 14/18 mm; max pressure 15 bar; Tmax 90°C; WRC/WRAS approved

Electrolux 048909 0L2394

Hoses

338395



Rubber feeder hose 3/4" L=660 mm

Electrolux 048217

438475



Rubber feeder hose 3/4" L=2000 mm
straight connection + 90° connection; ring nut in nickel-plated brass Ø 3/4"F; pipe Ø 10x17 mm; Pmax 15 bar; Tmax 90°C; WRC/WRAS approved

Electrolux 047605 049378 0K1135 0L1887

438436



Rubber feeder hose 3/4" L=2100 mm
straight connection 90° plastic connection; plastic ring nut Ø 3/4"F; pipe Ø 13x19 mm; Pmax 10 bar; Tmax 90°C; WRAS/VDE approved

Electrolux 048816

524404



Feeder hose with armour 3/4" L=2000 mm DN13
straight connection + 90° connection; ring nut in nickel-plated brass Ø 3/4"F; Pmax 25 bar; Tmax 100°C; WRAS approved

Electrolux 048621 049540 0KJ439

412515



Drain pipe Ø 36x41 mm
dim. 370x110 mm

Electrolux 048644

508890



Drain pipe PVC Ø 21 mm 180°+ Ø 21 mm 180° L=2000 mm
muffs Øint/ext 21/26, pipe Øext 24 mm

Electrolux 0L3757

700443



Drain pipe PPE Ø 21,5mm 180°+ Ø 21,5mm 180° L=630 mm
muffs Øint/ext 21,5/26 mm, pipe Øext 24 mm, Clean 3

Electrolux 0L2843 0W6731 432230801

441795



Drain pipe PPE Ø 35 mm 180°+ Ø 40 mm 180° L=1600 mm
muffs Øint/ext 35/40 e 40/45 mm, pipe Øext 29 mm

Electrolux 049856

441715



Drain pipe PPE Ø 24 mm 180°+ Ø 24 mm 180° L=271 mm
muffs Øint/ext 24/30 mm, pipe Ø ext 26.5 mm

Electrolux 048249 049747

412175



Drain pipe PVC Ø 40 mm M 180°+ Ø 35 mm F 180° L=1000 mm
muff Øint 40 mm M - muff Øint 35 mm F; Tmax 90°; pipe Ø 35 mm; armored hose, smooth internal surface

Electrolux 047465 0S0149

Hoses

412178



Drain pipe PVC Ø 58 mm F 180°+ Ø 40 mm free L=1000 mm
muff Øint 58 mm; pipe Øint 40 mm; Tmax 90°C;
armored hose, smooth internal surface

Electrolux 030440 030442 047894 0S0148

613645



Drain pipe PPE Ø 21 mm M 180°+ Ø 28 mm F 90° L=2200 mm
muffs Øint/ext 28/36 - 21/27 mm; connection
for overflow pipe Øint/ext 10/10 mm L=800 mm

Electrolux 0L0806

317830



Drain pipe PVC Ø 20 mm F 180° L=2000 mm
muffs Ø 20/25,5 mm; pipe Ø 24 mm

Electrolux 0L3073

321575



Drain pipe PPE Ø 21 mm 180°+ Ø 30 mm F 90° L=900 mm
muffs Øint./ext. 21/28 - Øint./ext. 30/36, pipe
Øext. 27 mm

Electrolux 0L2842

321568



Drain pipe PPE Ø 21 mm M 180°+ Ø 21 mm M 180° L=1700 mm
muffs Øint/ext. 21/27 mm, pipe Øext. 27 mm

Electrolux 0L2841

317821



Drain pipe PPE Ø 25 mm F 180°+ Ø 10 mm F 180° L=1130 mm
muffs Ø 25/34 mm, Ø 10/16 mm, tubo Ø 26,5/12 mm; overflow pipe connection 180° Ø 10/14mm L=470 mm 90° Ø 8/14 mm L=150 mm

Electrolux 0L1516

412173



Drain pipe PVC Ø 18 mm F 180°+ Ø 28 mm F 90° L=2200 mm
muffs Ø 28/36 mm, Ø 25/18 mm, connection
for overflow pipe Ø 6/12 mm (see also cod. 441794)

Electrolux 048845

524273



Drain pipe PPE Ø 21 mm M 180°+ Ø 28 mm F 90° L=2200 mm
Muffs Ø 28/36 mm, Ø 21/27 mm, air gap hose
Ø 8/14 mm L=600 mm

Electrolux 049831

Ball valves, Pipe fittings

441725



Nipple 3/4"÷3/4" - L=30 mm - brass
 Øint. 14/16 mm; CH30

Electrolux 049510

342648



Rubber holder G1/2" - outlet Ø 12 mm
 with O-ring, and threaded outlet

Electrolux 049561 0KB773

322665



Nipple 3/4"÷3/4" - L=30 mm - brass

Electrolux 057862 072457 0E0446 0K9024
 0KG596 0KI452 0KL750 0W3306

435654



Rubber holder G3/8" - outlet Ø 12,5 mm
 Ltot.=36 mm

Electrolux 0L0477

435655



Nipple 3/4"÷3/8" - L=28 mm - brass

Electrolux 0L0479

508396



Water drain fitting Ø 16 mm
 Øext. 20,5xL15,0 mm - Øext. 34,9xL16,9 mm

Electrolux 0L3701

519266



Nipple 1" M/M 13 mm - L=40 mm - brass
 with hole thread M10

Electrolux 0E5544 0H2331 0K7098 0K7681

342977



Pipe fitting 90° Ø int 8 mm, M15x1

Electrolux 046375

317767



Rubber holder 90° Ø 12 mm - M20x1,5
 dim. 88xh60 mm

Electrolux 0L0052

433571



Pipe fitting 90° 1/8" - rubber holder Ø 4,75 mm

Electrolux 0H2303 0K7612

Ball valves, Pipe fittings

431694



Pipe fitting 90° 1/2" x 15 mm

Electrolux 0E5068 0K9050 0K9061 0KX071

317766



Y-connection

hose Ø 25x35x57 mm; rubber holder Ø 11,5 mm

Electrolux 0L2865 0L3080

518638



T-connection T Ø 26-26-26 mm
dim. 105x65 mm

Electrolux 0L0210

423547



Nut Øint 20 mm Htot= 65 mm
flange Ø 45 mm

Electrolux 0E0135 0E0527 0H2141 0K6953

419338



Special pipe fitting 1/2"MF

Electrolux 0H2010 0K6652 460816102

431701



Connection

Electrolux 0H2621 0H2624 0K0004 0K9047

438482



Y-connection Ø 12-12-12 mm

Electrolux 048195

441675



Backflow preventer dishwasher
rubber holder Ø 12 mm

Electrolux 005762 049332 0E5648 0L1892

412473



Y-connection inlet Ø 29 mm - outlet Ø 12 mm

Electrolux 049289 0L0365

459801



Air valve Ø 22,5/23 mm
dim. 51x51x52 mm

Electrolux 0L2729

Ball valves, Pipe fittings

317132



Non-return valve

Electrolux 0C9753 0L0264

349842



Non-return valve DVGW
inlet Ø 11 mm - outlet Ø 25 mm

Electrolux 048191 0H2565 0L3240

317140



Non-return valve 3/4"FF
L=103 mm; PN15; DN20; Tmax. 80°C

Electrolux 0L2980

441796



Non-return valve in brass 1/2"
PN40 DN15

Electrolux 048414 049851

Boilers

538724



Boiler 1 Heating element
LS9 from sn.432...

Electrolux 0L0573

582207



Boiler 1 Heating element AISI 304
Ø 200x390 mm

Electrolux 0L3684

Boilers

339113



Boiler 3 Heating element
Ø 200x365 mm - LS10/LS12

Electrolux 049632 0KG568

317577



Boiler 2 heating elements (Aisi 316)

Electrolux 0L2855 0L3686

317570



Boiler Ø 200x375 mm

Electrolux 0L2098

339117



Boiler 1 Heating elements
Ø 200x410 mm - LS7

Electrolux 048341 048548

436191



Boiler 2 heating elements
Ø 200x375 mm

Electrolux 0L0347 0L1951

518617



Boiler 1 Heating element
Ø 200x410 mm - LU7P / WTU40P / LS9 / WT5E

Electrolux 0L0023 0L0284 0L0734 0L1908

436190



Boiler 1 Heating element
Ø 200x376 mm - LS10-14 / WT 65 / LU7A / WTU40A

Electrolux 0L0346 0L1928

339131



Boiler 2 heating elements LS10/LS12 [Kit]
Ø 200x410 mm; boiler insulation, safety thermostat, hose clamp

Electrolux 048283 048484 048727 0L1639

322426



Boiler 2 heating elements (Aisi 304)
Ø 200x390 mm

Electrolux 0L2854 0L3685

433885



Boiler 1 Heating element [kit]
Ø 200x300x450 mm - LS9AUK/3 - LS9ADG1

Electrolux 049987 0L0514

Boilers


414115



Gasket Ø 222 mm
holes Ø 6 mm

Electrolux 0H2465 0K7088 0K8093

441765

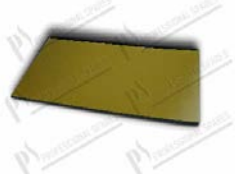

Boiler EPDM insulation for high temperature 670x330x13 mm

Electrolux 048447 049415 0KE918 0L0774

582208



Bracket
dim. 58x37 mm

Electrolux 0L3689

519215



Plug 1/8"
Ø 9,6 mm; h=10,7 mm

Electrolux 0E2887 0H2614 0K9034 0K9035

Lockings

438538



Magnet ND35 Ø 6x29 mm

Electrolux 048254 048667

441724



Protection for magnet 52x9x8 mm

Electrolux 049535

Lockings

347774



Handle support

Electrolux 047730 075926 0E5096 0K2239

411280



Hose

Electrolux 048351

613641



Door latch

Electrolux 0L0803

412299



Support Ø 67xh45 mm

Electrolux 048348

459486



Lower support
dim. 60x62,5x30 mm

Electrolux 0L0056

459485



Upper support
dim 60x30x17 mm

Electrolux 0L0055

Transmission components

524393



Pinion - 18 teeth

Htot.=35 mm, for shaft Ø 10 mm with wedge

Electrolux 049581

Structural components

311400



Hood 1200x680x645 mm

EHTA

Electrolux 0L1924 0L2123

316499



Control panel 665x621 mm

EHTA

Electrolux 0L1685

518766



Hood type 614x774x640 mm

Female connection for plastic rails welded on the structure of the sunroof
ZHT - OHT - KHT - NHT - EHT

Electrolux 0L0053

518754



Rear panel 1290x540 mm

Electrolux 0L0066

437971



Hood type 645x670x665 mm Htot=1185 mm

Electrolux 049637 0L0029 0L0431

433862



Back panel 1290x660x118 mm
LS10/14

Electrolux 0C1406 0L0002

301616



Control panel 665x621 mm

EHTA

Electrolux 0L1134

518820



Right back closure

LS10/14

Electrolux 0L0004

Structural components

518822



Left back closure
LS10/14

Electrolux 0L0003

338686



Control panel

Electrolux 048285 048473 048598 049148


524291



Cover
EHTA

Electrolux 049575 049794

441764

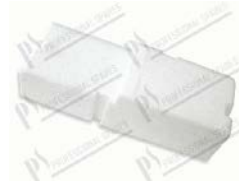

Housing LS-8

Electrolux 048432 048468

585546



Panel
dim. 610x670 mm

Electrolux 0L2783

336686



Hood rear panel 590x470x10 mm
LS - LC - HYDRA - HT

Electrolux 048639

301591



Protection 350x475 mm
RTCS90/WTCS90 - RTCS140/WTCS140 -
RTCS180/WTCS180 - RTCS250/WTCS250

Electrolux 0L1107

Bearings

430830



Plastic bearing Ø 16,5x20x10 mm

Electrolux 0H2292 0K7334 0K7455 0K7572

Slide Ways - Shelf Supports

435006



Rack-rail L=650 mm
dim. 650x20x20 mm

Electrolux 049829 0L0682

317623



Hood guide L=772 mm
dim. 772x16x22,5 mm

Electrolux 0L2798

524316



Rack-rail runner

Electrolux 049770

317578



Hood rail arm
dim.640x635 mm

Electrolux 0L2817

442190



Rack-rail runner

Electrolux 049805

518745



Runner 650x30x34 mm
ZHT / OHT / KHT / NHT / EHT

Electrolux 0L0084

Handles

349203



Handle
dim. 735x250 mm - Ø 27 mm

Electrolux 048706

415789



Shaft Ø 12x108 mm
screw M8x16 mm; L=tot. 130 mm; nut 17 mm

Electrolux 046534

339426



Handle LS

Electrolux 046533 047690

518765



Handle 920x725 mm

Electrolux 0L0054

349205



Handle L=510 mm
hole Ø 5 mm

Electrolux 076050

441669



Runner handle
dim. 230x90x20 mm

Electrolux 049597 0KB774

Knobs

435077**Knob Ø 44 mm**

D shaft hole Ø 6x4,6 mm

Electrolux 048273 048288 048402 0E5217

435776**Knob Ø 55 mm**

D shaft hole Ø 6x4,6 mm

Electrolux 048371 048920 0KG192

433899**Knob Ø 40 mm**

D-shaft hole hole Ø 6x4,8mm

Electrolux 046356 048340 048527

432409**Knob Ø 42 mm**

D-shaft hole Ø 6x4,6 mm

Electrolux 0E3019 0H2189 0H2338 0K7442
0KC012

412063**Knob Ø 42 - h25 mm**

D-shaft hole hole Ø 6x5 mm

Electrolux 047693 0E5284

Small Mechanical Parts

532735



Snap-ring Øint. 9x1 mm INOX (10 pcs)

Electrolux 027023 067004 0E5500 0K8964

433411



Snap-ring Ø int 10x1 mm - Inox

Electrolux 0E1003 0H2598 0K8965 0K8966
0KC482 0W1K92

438419



Snap-ring Ø int. 15,7x1 mm

Electrolux 048979 0D0639

438718



Snap-ring INOX Ø int. 28x1,5 mm

Electrolux 0E5152 0K8970

414970



Antivibration 78x35x29 mm

Electrolux 048261

440748



Antivibration LS 800

Electrolux 048710

518736



Antivibration
dim. 17x13x3 mm

Electrolux 0L0090

435047



Antivibration Ø 25xh20 mm - M8x20 mm

Electrolux 0E0129 0H2030 0K6786 0K6789
463977807

415788



Bush Ø 6,2x12x12,5 mm - brass

Electrolux 049551

438248



Flange bushing Ø 6,6x9,8 - Ø 13 mm - H=7 mm

Electrolux 048262 049761

Small Mechanical Parts

337433



Flange bushing Ø 10x32 mm - H=18.5 mm

Electrolux 049430

441728



Hexagonal nut M20x1,5 mm
H=10 mm; CH30

Electrolux 049436

414431



Flange bushing Ø 10.3x31.5/14.8x24 mm

Electrolux 0H2128 0K7191

519199



Hexagonal nut 3/4" - H=7 mm

Electrolux 0E5056

381319



Hexagonal nut M12 self-locking

Electrolux 0C3522 0L0101

519321



Hexagonal flanged nut M5 INOX

Electrolux 091346 0A9554 0C5309 0C5317
0KG221 0L2469 0Q0010 0Q0011

441924



Hexagonal nut M14x1,5 mm

Electrolux 049268

518852



Hexagonal flanged nut M6 INOX

Electrolux 0H2562 0KJ537

336328



Hexagonal nut 3/8"

Electrolux 027414 0H2611 0H8269 0K9016

418034



Hexagonal nut M6 - H=11,5 mm
INOX

Electrolux 0K8941 732311640

Small Mechanical Parts

438359



**Knurled nut Ø 6x25 mm - H=6 mm
thread M8**

Electrolux 046364 047282

438537



Knurled nut M12x1 Ø 35 mm H=6 mm

Electrolux 048632 0E5638

337639



**Knurled nut Ø 30 mm H=6 mm
thread Ø 11.3 mm**

Electrolux 046365 047283

412307



Spacer Ø est. 15mm

Electrolux 048654

310306



Double wire hose clamp Ø 7,8÷8,3 mm

Electrolux 0C7120 0E5993 0L0082 0L0815

321177



Double wire hose clamp Ø 9,3÷9,9 mm

Electrolux 0L0083

301590



Double wire hose clamp Ø 14,4÷15,1 mm

Electrolux 0L1106

438357



Double wire hose clamp Ø 8÷12/9 mm

Electrolux 046946 048224 0H2566 0KB296
0T4790

438480



Hose clamp Ø 12÷22/9 mm - INOX

Electrolux 007019 046797 048126 049888
065121 0835823600 0C5567 0G2046
0KF382 0KX145

324768



Hose clamp Ø 23÷35/9 mm - INOX

Electrolux 0K0197 0K0464 0K8979 0KB299

Small Mechanical Parts

441699



Hose clamp Ø 25÷40/9 mm - INOX

Electrolux 047578 049446 049772 070318
 0K0198 0K8980 0KB300 0KG600
 0L2280 0L2728

329931



Hose clamp Ø 70÷90/12 mm - INOX

Electrolux 046909 0E0138 0K0200 0KB304
 0KI583 0L0914

438464



Hose clamp Ø 32÷50/9 mm - INOX

Electrolux 046566 046878 060407 066056
 0E2686 0KB302 0KX143 0L2649

441709



Hose clamp Ø 60÷80/12 mm - INOX

Electrolux 046478 046853 065047 0E0992
 0K0199 0K8985 0K8986 0KZ022
 0W1KBZ 0W3295

518655



Hose clamp Ø 40÷60/9 mm - INOX

Electrolux 0E3461 0L0193

459506



Hose clamp Ø 200÷220/12 mm

Electrolux 0L2551 0TH122

433052



Hose clamp Ø 16÷27/12 mm - INOX

Electrolux 0E0900 0E5120 0K8977 0KL951
 0W0ZTU 0W1094 0W1CET 0W1M6X

441606



Hose clamp Ø 210÷230/12 mm

Electrolux 048222 048436 0E2276 0K7106

438463



Hose clamp Ø 50÷70/12 mm - INOX

Electrolux 046855 065537 072582 072583
 0K8983 0L2463 0W02A7 0W02A8
 0W0ZT8 0W0ZU4 0W1CEX 0W1GA7

322427



Hose clamp Ø 8,8÷9,3 mm [set 10 pcs]

Electrolux 0L0770 0L2436

Small Mechanical Parts

613610



Hose clamp Ø 8÷14 mm (10 pcs)

Electrolux 0L0769

524413



Drip tray

Electrolux 049527

613612



Hose clamp Ø 13 mm [set 10 pcs]

Electrolux 0L0771 0L2681

412260



Spacer

Electrolux 048709

438477



Grub screw M4x5 mm

Electrolux 047846 0H2563

436273



Nut

Electrolux 0K8683 0K8943 0W1777

582261



Bush for brand

Electrolux 075599

440791



Plug M20x1,5

Electrolux 049502

317813



Plug M20x1.5 - Ø 28 mm

Electrolux 0L2114 0L3627

518732



Sliding shoe

Electrolux 0L0099

Small Mechanical Parts

415703



Bolt

Electrolux 048232

438481



Flat washer Ø 5,2x10x1 mm (10 Pcs)
UNI 6592

Electrolux 048144 068024

441742



Bolt Ø 12x26,5xLtot. 41,5 mm
thread M6

Electrolux 048635

612770



Flat washer Ø 5,5x10x1 mm - INOX

Electrolux 0E1119 0K8946 0Q0012

415634



Bolt

Electrolux 048652

435493



Set of rings 6,4x12,5 - 50 pz

Electrolux 027022 067332 0H2005 0L1670

441955



Bolt Ø 3/5/10xh7,7 mm

Electrolux 026187

441892



Flat washer Ø 6.4x32 mm

Electrolux 048255 0KG562

438740



Clamping washer Ø 10x4,5 mm

Electrolux 069567 0C6288

432605



Flat washer M6 Ø 6,4x11,6x1,6 mm INOX

Electrolux 0K8947 0U2043 0W1TR8 734115309

Small Mechanical Parts

319730



Flat washer Ø 8,4x17 mm

Electrolux 0C6789 0C6790 0E0124 0HN200
0K8948 0W1S2E 0W1S6V 74022053

323377



Flat washer Ø 10,8x20 mm

Electrolux 0E1859 0K8950 0W0ZWX 0W10G7
0W1D96 0W1JNL

200296



Flat washer M12 - Ø 13,2x23,6x2,4 mm

Electrolux 0TH042

418754



Flat washer Ø 21.3x36.5x3 mm

Electrolux 049435 0E0203 0E2292 0H2538
0K8952 0KG602 734119209

415666



Screw M9x144 mm

Electrolux 048259

435098



Screw
thread M6 - Ø 10 mm

Electrolux 048656

518734



Screw M10x120 mm

Electrolux 0L0091

300143



Screw M6x16 mm
for gearmotor cod. 435095

Electrolux 0L0667

432850



Screw M5x28 mm
Ø 9 mm - Ltot 21.5 mm

Electrolux 0KJ443

424566



Screw TS M4x16 mm INOX

Electrolux 0K8910 80500710

Small Mechanical Parts

335842



Screw M4x9 INOX

Electrolux 0H2594 0H2595 0K8930 0K8931
0KD931

Springs

441901



Compression spring

Electrolux 049584

441900



Tension spring

Electrolux 049585

441890



Torsion spring

Electrolux 048279

419459



Tension spring Ø 10 mm - without hooks L=50 mm

Electrolux 0E0199 0K7269 0KE381 477627601

338565



Tension spring

Electrolux 046540

518763



Tension spring Ø 37x475x770 mm wire Ø 5 mm - for hood type single skin

Electrolux 0L0057

415519



Tension spring

Electrolux 048298

338816



Tension spring Ø 39x193x380 mm wire Ø 4 mm

Electrolux 048655

Springs

338809



Tension spring Ø 39x240x495 mm
wire Ø 4 mm

Electrolux 048258

317794



Bracket 15x58x28 mm

Electrolux 049579

439768



Tension spring Ø 39x475xLtot755 mm
wire Ø 5,5 mm - for hood type double skin

Electrolux 049582

412261



Bush Ø 8.8x12xh11 mm
base Ø 24

Electrolux 048653

338935



Tension spring Ø 40x490 mm

Electrolux 048424

441895



Support 34x56x30 mm

Electrolux 049594

411854



Security Pin Ø 8x59 mm with fitting

Electrolux 048297

317566



Spring bushing L=48 mm

Electrolux 0L2793

411310



Lever for support
dim. 270x25x3; Ø 12 mm; Ø 10 mm

Electrolux 048256

317568



Spring bushing L=88 mm

Electrolux 0L2794

Springs

317816



Spring stretcher Ø 5 mm L=375 mm

Electrolux 0L2797

412168



Spring stretcher

Electrolux 046539 049886 075767

Doors

411311



Door lever

Electrolux 048257

411273



Lever

Electrolux 048649

441898



Shaft Ø 7x46 mm
hole Ø 7 mm

Electrolux 049587

518762



Runner

Electrolux 0L0058

441902



Lever

Electrolux 049578

Rollers

435221



Roller Ø 12,4x47,4x9 mm
LS10-LS12

Electrolux 049598

435097



Roller Ø 34 mm

Electrolux 048657

412110



Roller Øext. 49 mm

Electrolux 048260 0K8749

Shaft sealing

610895



Shaft sealing Ø 24x11x15 mm /
counter-seal Ø26x14x8 mm

Electrolux 048188 0L0340 0L1437

412354



Shaft sealing Ø 24x12x16 mm /
counter-seal Ø 26x12x8 mm
shaft sealing in TEFLON, pump shaft Ø 13 mm

Electrolux 0H2154 0H2155 0H2522 0K7246
0KA834

610885



Shaft sealing Ø 24x12x15 mm / contro
tenuta Ø 26x14x5,5 mm

Electrolux 0L1367 0L1936

342632



Shaft sealing Ø 39x16x16 mm /
counter-seal Ø 42x21x8 mm
for pump FIR 2275

Electrolux 049249 049764 0G1664 0K7896

Shaft sealing

412373**Counter-seal Ø 26x13x6 mm****Electrolux** 069031

Thermometers

416427**Thermometer Ø 52 mm 0÷120°C**
coated capillary L=2500 mm; bulb Ø 6x38 mm**Electrolux** 048564 0E5477 0E5546 0E5793
0PE178**435099****Thermometer 0÷120°C 58x25 mm**
coated capillary L=3000 mm; bulb Ø 6x24 mm**Electrolux** 048544 0E5478**416548****Thermometer Ø 52 mm 0÷120°C**
coated capillary L=3000 mm in PVC - bulb Ø 8,5 mm**Electrolux** 048356**416425****Thermometer 0÷100 56x25 mm**
capillary Ø 2,4x2000 mm in PVC - dim. 58x25 mm**Electrolux** 046553 066350**416426****Thermometer 0÷120°C 48x48 mm**
mod. 915; coated capillary L=2900 mm; bulb Ø 6x36 mm; for boiler and dishwasher tanks**Electrolux** 048525 0E5545 0K7789 0KB617**416444****Thermometer 0÷100°C 56x25 mm**
capillary 1650 mm; bulb Ø 8,5x26,5 mm;**Electrolux** 048084**419996****Thermometer 0÷120°C 48x48 mm**
capillary L=800 mm - bulb Ø 8 mm**Electrolux** 0E5065 0K7026 0K7786 0KB616

Membranes

301619



Adhesive membrane 120x190 mm

Electrolux OL1137

441645



Adhesive membrane 220x120 mm
HT 1200

Electrolux 049609

323090



Adhesive membrane 120x220 mm

Electrolux OL1672

518672



Adhesive membrane 210x93 mm

Electrolux OL0165

317685



Adhesive membrane 120x220 mm

Electrolux OL1676

518675



Adhesive membrane 220x120 mm

Electrolux OL0161

411493



Adhesive membrane (Zanussi)
LS12

Electrolux 049606

518676



Adhesive membrane 220x120 mm

Electrolux OL0160

441646



Adhesive membrane
HT1000

Electrolux 049607

518742



Adhesive membrane 210x92 mm

Electrolux OL0085

Membranes

518755



Adhesive membrane 210x82 mm

Electrolux OL0065

317691



Adhesive membrane 220x120 mm

Electrolux OL1680

524386



Adhesive membrane 220x120 mm

Electrolux 049610

582368



Adhesive membrane 570x50 mm

Electrolux OL2803

317663



Adhesive membrane 194x50 mm

Electrolux OL2800

317672



Adhesive membrane 569x50 mm

Electrolux OL2801

311122



Adhesive membrane HT 220x120 mm

Electrolux OL1930

317667



Adhesive membrane 570x50 mm

Electrolux OL2799

317699



Adhesive membrane 220x120 mm

Electrolux OL1674

Printed Circuit Boards

435560



Button extension Ø 7x6,95 mm
for interface board

Electrolux 002670 0F0086 0G4921 0K8489

322370



Motherboard
MEC12R HT FULL

Electrolux 0L2887 0L3600

425198



Spacer (20 Pcs)

Electrolux 0C3750 0C3751 0G4212 0K5832
0K7071

347959



Motherboard
LS - WT

Electrolux 049391

301716



Motherboard
LS5/WT4 1 phase

Electrolux 049952 0L0046 0L0547 0L0706
0L1410 0L1810 0L2582

300144



Motherboard DIWAP AZ60
LS5/WT4 3 phase, 180/254V 50/60Hz

Electrolux 049622 049653 049654 049750
049752 049753 049845 049854
0KE951 0KE955 0L0012 0L0045
0L0541 0L0705 0L1239 0L1412
0L1972 0L2580 0L2583

301718



Motherboard
Type P. 673609303

Electrolux 0L0731 0L1238 0L1411 0L1812

435222



Motherboard
LS - HYDRA

Electrolux 049495

324293



Motherboard
MEC12R HT FULL W/OUT HACCP

Electrolux 0L2888 0L3601

317217



Power board
dim. 95x216 mm

Electrolux 0L2891

Printed Circuit Boards

435225



Motherboard
SH55 - LO10

Electrolux 049447

432432



Motherboard
WT 60 & D48

Electrolux 0H2168 0K7128 0K7271 0KE382

432509



Motherboard

Electrolux 0KJ243 477628001

435782



Motherboard

Electrolux 049150

613541



Interface board
LS9/WT55

Electrolux 0L0061 0L0550 0L0710 0L1235

613539



Interface board

dim. 154x90 mm; WT65, PW1-2 / WT830-850, LS14EA

Electrolux 049623 049754 049998 0KE956
0L0549 0L0708 0L0709 0L1237
0L1566 0L1568 0L1627 0L1973
0L3876

322376



Interface board
80R/H

Electrolux 0L2897 0L3785

459436



PCB guard

dim. 215x60x21 mm

Electrolux 0L2898

338583



Electric components box 310x230x120 mm

Electrolux 048263

582078



Electric cable

Electrolux 0L2962

Printed Circuit Boards

317612



Filter 115x500x10 mm

Electrolux 0L3348

Probes

344758



Temperature probe NTC
bulb Ø 6x50 mm; PVC cable 2x0,35 mm; L=70 mm

Electrolux 049884

436202



Support 70x37x9 mm

Electrolux 0L0366

344763



Temperature probe NTC
bulb Ø 10x44 mm; rast5 with faston 6,3x0,8 mm

Electrolux 049643 049666 OKR811

440744



Support for temperature probe 50x70 mm
hole Ø 7 mm

Electrolux 049580

419486



Clip

Electrolux 0K6166 0KL600

325057



Temperature probe NTC -10/100°C
dim. Ø 10x49 mm

Electrolux 0L2874

Adhesive Gasket

435261



Adhesive EPDM gasket 8x3 mm (sold by meter)

Electrolux 046583 0L0689

410037



Adhesive gasket 15x3x2000 mm

Electrolux 046256

Gaskets for dishwashers

438479



Gasket 29x62x2mm

Electrolux 048070

441028



**Gasket L=700 mm
profil U**

Electrolux 047095 047513 047571 0E5559
0K8446 0W1306

438402



Gasket 157x306x1,5 mm

Electrolux 048274

416386



**Hood gasket 600x600 mm
profil 18x31 mm**

Electrolux 048758

Flat gaskets

349462



Flat gasket Ø 11,5x24,5x2 mm - Fiber

Electrolux 067935

325273



Gasket Ø 50x59.5x1.5 mm - Silikon

Electrolux 0L2664

430873



Flat gasket Ø 13x20x2 mm

Electrolux 0H2087 0K7070 0KB575

317781



Flat gasket 1-1/2x7 / 8x3 /32 EPDM
Ø 21,3x38x2,3 mm

Electrolux 0L1088

441552



Flat gasket Ø 18x34x2,6 mm

Electrolux 048245

349465



Flat gasket Ø 12x24x2,5 mm - EPDM

Electrolux 061488


613592



Flat gasket Ø 27x40x1 mm

Electrolux 0L0752

317134

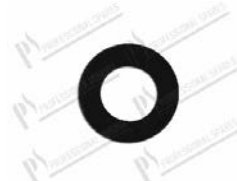

Flat gasket Ø 12,5x26,5x3 mm (50 pcs)

Electrolux 0L1945 0L2037

322586



Flat gasket Ø 30x43 mm

Electrolux 0E0136 0K6952 0KE329

414967



Flat gasket Ø 16x24,5x2 mm - EPDM

Electrolux 046925 049201

O-rings

**O-ring 1,78x**

435323	6,07 mm NBR	067898
531952	8,73 mm NBR	0Q0002
317701	9,25 mm SILICONE	0L2303
337070	11,11 mm EPDM	0U1041
534283	11,11 mm NBR	0E2836
435313	12,42 mm NBR	0Q0014
438361	14,00 mm NBR	047473
337098	15,60 mm EPDM	070347
415979	17,17 mm NBR	0K6222
438348	20,35 mm NBR	0L2166
416214	31,47 mm NBR	046861

**O-ring 3,53x**

379455	32,93 mm EPDM	069468
589468	12,29 mm EPDM (20 pz)	0L1941
438223	26,57 mm NBR	027300
416280	34,52 mm NBR	027301
415640	41,28 mm NBR	047192
438592	42,86 mm NBR	065506
438483	44,45 mm NBR	048229
315338	50,80 mm NBR	075647
438737	60,33 mm NBR	068799
317841	65,10 mm	0L0923
438459	73,03 mm NBR	046366
416082	91,67 mm NBR	045462
416087	95,00 mm	047458
339998	102,00 mm	069531
438405	110,72 mm NBR	048327
441737	120,20 mm NBR	049033

**O-ring 2,40x**

441068	5,30 mm NBR	0E5034
431553	9,30 mm	0KR015
431451	15,30 mm EPDM	0KK043
432996	16,30 mm NBR	0K9001
438301	17,30 mm NBR	0E5118

433156**O-ring 2,50x8,50 mm NBR**

Electrolux 0H2600 0K8997

441739**O-ring 4,00x110,00 mm NBR**

Electrolux 049894

395248**O-ring 5,00x64,00 mm**

Electrolux 0L2958

**O-ring 2,62x**

438735	9,19 mm NBR	068573
340097	10,77 mm EPDM	069644
438728	11,91 mm NBR	067292
416278	13,95 mm NBR	046223
438736	15,54 mm NBR	0W7012
438421	18,72 mm NBR	049036
340151	20,50 mm	069527
435133	25,07 mm NBR	046799
301578	26,65 mm NBR	0L0922
450090	29,82 mm EPDM	0L1564
316422	32,99 mm SILICONE	0L2359
438449	53,65 mm NBR	049460
416218	60,00 mm NBR	047462

**O-ring 5,34x**

435303	46,99 mm NBR	0L2765
435067	56,52 mm NBR	0E5037
441896	72,39 mm NBR	049593

438709**O-ring 5,70x44,20 mm VITON**

Electrolux 0E0010 0HB234 0K7084 0KP724

Detergents

411085



Spray cleaner 500 ml

Electrolux OS0060

586777



Rinse C14 PLUS - 1 canister 5 lt

Product subject to some limitations of transport (ADR)

Electrolux OS2095

585498



Detergent powder C-23 (100 tabs)

Electrolux OS2392

589392



Liquid delimer; C30 - 2 x canister 5 lt
to eliminate residual calcareous; Product subject to some limitations of transport (ADR)

Electrolux OS2362

586774



Detergent C11 - 1 canister 5 lt

Product subject to some limitations of transport (ADR)

Electrolux OS2092

586775



Detergent C13 - 1 canister 5 lt

Product subject to some limitations of transport (ADR)

Electrolux OS2093

586776



Rinse C12 - 1 canister 5 lt

Product subject to some limitations of transport (ADR)

Electrolux OS2094

Dishwashing Baskets

441805



Basket 395x395xh200 mm - INOX for glasses

Electrolux 049365 867054

524348



Basket with saucers container 395x395x105 mm dim. 110x110x123 mm

Electrolux 049366 867055

441932



Basket 395x395xh100 mm - INOX for glasses plastic coated steel wire

Electrolux 049069 867053

412161



Basket 500x500xh120 mm - INOX for cutlery plastic coated steel wire

Electrolux 0S0058 983033

441733



Basket 395x395xh200 mm - sloped bottom for 16 glasses

Electrolux 049367 867056

441930



Insert for 14 saucers L=340xh90 mm

Electrolux 049071 867060


337352



Round basket Ø 350xh135 mm

Electrolux 0HA031

440706

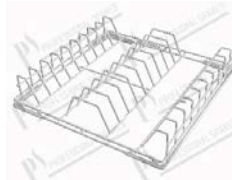

Basket 500x500xh100 mm - INOX 18 dishes plastic coated steel wire

Electrolux 0S0057

524661



Round basket kit with square frame 394x394 mm basket Ø 400xh140 mm

Electrolux 049269

610905



Basket 350x350xh150 mm - plastic, for glasses

Electrolux 0HA029 860138

Dishwashing Baskets

610907



Basket 400x400xh150mm - plastic, for glasses

Electrolux 0S1130 0U1033 860139

441823



Basket 500x500xh255 mm - with sloped bottom for 25 glasses

H=200 mm, Ø max 80 mm; made of:
438278+440488(3pz)+524648+524645

Electrolux 048975 069946


438417



Green 500x500xh105 mm - basket for 12 soup plates or cups
plates Ø max 240 mm; see item cod.610925

Electrolux 048891 0TH200

441842

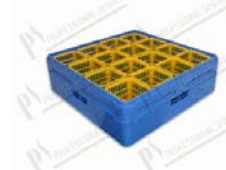

Basket 500x500x155 mm - Blue with 16 cutlery containers
container Ø 110x145 mm

Electrolux 048965 069951

438540



Basket 500x500xh105 mm - Yellow, for 18 dinner plates
plates Ø max 240 mm; check item code.610925

Electrolux 048795 068702 867002

441850



Basket 500x500xh105 mm - Brown, cutlery basket
max capacity 100 pieces; check item cod.610909

Electrolux 048797 068467

441829



Basket 500x500xh155 mm - with inclined bottom for 25 glasses
H=100 mm, Ø max 80 mm; made of:
438278+440488+524648

Electrolux 048969 069944

337095



Container cutlery 55x130x100 mm
2 compart

Electrolux 0HA030

441825



Basket 500x500xh205 mm - with inclined bottom for 36 glasses
H=150 mm, Ø max 70 mm; made of:
38278+440488(2pz)+524644+524643

Electrolux 048973 069948

439807



Basket 500x500xh105 mm - plastic, for 8 trays
dim. 500x500 mm; check item cod.610910

Electrolux 048890 0L1963

Dishwashing Baskets

438418



Basket 500x500x105 mm - blue for 16 soup or dinner plates
plates max Ø 240 mm; check item code.610925

Electrolux 048960

524617



Insert 460x470x75 mm

Electrolux 048947

441844



Basket 500x500x150 mm - red for 5 trays
Stainless steel insert 5 sectors

Electrolux 048962

439530



Basket 540x490x110 mm for 6 trays - red

Electrolux 068701

Feet

317743



Foot AISI Ø 2"
flange Ø 117 mm; H=140 mm

Electrolux 0L1452

581883



Adjustable foot INOX Ø 1"3/4 - H=140÷220 mm
flange 74x74 mm

Electrolux 0L3203

Feet

438485



Adjustable foot AISI 304 Ø 2" - H=145÷220 mm
flange 74x74 mm

Electrolux 048579 0F0201 0HB147

349141



Adjustable foot Ø 64 mm H=240 mm

Electrolux 048378 048382

349538



Foot inox Ø 2" - H=125 mm

Electrolux 053792 056927 080942

Baskets Holder


518616



Basket support 508x510 mm

Electrolux 0L0289

323215

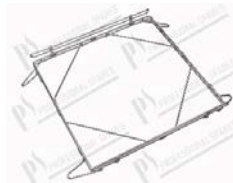

Runner for basket 515x495x85 mm

Electrolux 0L2807 0L4580

412016



Basket support 490x490x55 mm

Electrolux 048634 048677 049486

524495



Runner for basket 515x495x100 mm

Electrolux 049629

WAREWASHER

**ELECTRICAL
PARTS**

**WATER
PARTS**

**MECHANICAL
PARTS**

**ELECTRONIC
PARTS**

GASKETS

CONSUMABLES

ACCESSORIES

Contactors and Relays

435316

Green auxiliary contact 1NO HN10 10A 690V
dim. 10x17x43,5 mm

Electrolux 046995 0C4704 0E0418 0H7043
0K9119 0KA929 0KE890 H58194500

435315

Red auxiliary contact 1NC HN01 10A 690V
dim. 10x17x43,5 mm

Electrolux 047046 059086 0E0888 0H7044
0KC515

435202

Green auxiliary contact 1NO
dim. 10,5x42x31,5 mm

Electrolux 048497 0E5657 0K5986

426339

Contactor K3-07ND40 230V
220-240/50Hz 240V/60Hz - 3 cont. NO + 1 aux NO

Electrolux 0H2643 0K9134 477904122 767516200

435108

Contactor K3-10ND01 180V
4kW 3P; 180-210V 50Hz 200-240V 60Hz - 3 cont NO + 1 aux NC

Electrolux 048736 0E1611 0KC508 0KN732
0W2701 438963603

435109

Contactor K3-10ND01 230V
4KW 3P; 220-240V 50Hz 240V 60Hz - 3 cont. NO + 1 aux NC - dim. 65,5x45x60 mm

Electrolux 045920 047048 048403 048825
069130 072319 0E3757 0L0285

434968

Contactor K3-14ND10 24V
5,5kW 3P; 24V 50Hz - 3 cont. NO + 1 aux NO - dim. 65,5x45x60 mm

Electrolux 046994 054259 058004 075723
0E1291 0K3968 0K8545 0K9127
0L0360 0W1T99

435384

Contactor K3-18ND10 180V
7,5kW 3P; 180-210V 50Hz 200-240V 60Hz - 3 cont. NO + 1 aux NO; dim. 65x45x60 mm

Electrolux 004012 0E5568 0K6151 0K9123

435427

Contactor K3-18ND10 230V
7,5kW 3P; 220-240V 50/60Hz - 3 cont. NO + 1 aux NO - dim. 65,5x45x60 mm

Electrolux 002168 003598 006437 006438
058805 072881 072882 0K9125
0KC417 0L2057 0W0632 0W5271

325269

Thermal overload relay 0,6÷0,9A - contacts 1NO + 1NC with manual reset

Electrolux 0E5124 0E5857 0K9135 0K9142

Contactors and Relays

435193



Thermal overload relay 1,2÷1,8A - contacts 1NO + 1NC
(with manual reset)

Electrolux 0E5450 0E5673 0K9137 0KE155

435076



Relay Tyco EASIAS-230A-H
220-240V 50/60Hz, 16A 250V

Electrolux 048888

440907



Thermal overload relay 1,8÷2,7A - contacts 1NO + 1NC
(with manual reset)

Electrolux 0E5221 0E5628 0K9138

434972



Relay 1 contacts 24V 50/60Hz 16A 250V

Electrolux 0E5172 0K8712

426215



Thermal overload relay 1,8÷2,7A - contact 1NC
(automatic reset)

Electrolux 047133 075667

436242



Relay 2 contacts 230V 50/60Hz 10A

Electrolux 0L0414

438720



Thermal overload relay 4,0÷6,0A - contacts 1NO + 1NC
(with manual reset)

Electrolux 0E5220 0K9140 0KE721

434973



Relay 3 contacts 24V (AC) 50/60Hz 16A 250V
Faston 6.3x0.8 mm - socket 439004 -coil 24V AC

Electrolux 0E5170 0K8710 552212201

329175



Thermal overload relay 6,0÷9,0A - contacts 1NO + 1NC
(with manual reset)

Electrolux 0E0178 0K9141 0L3009

351924



Socket relay 95.85.3
2CO; 250V 10A

Electrolux 0K8711 0KZF01

Contactors and Relays

319815



Socket relay 94
for 613895

Electrolux 0L0415

419649



Socket relay 10A 300V
dim. 80x38 mm

Electrolux 0K8709

419563



Automatic circuit breaker 3P 20A 400V
dim. 75x53x81 mm

Electrolux 0E0179 0E2271 0H9589 0K8730

Fuses, Capacitors, RFI Filters

435292



**Capacitor for power factor correction 5
μF 450V 50/60Hz**
Ø 30 mm; with screw M8; cable L=500 mm

Electrolux 083406

435381



**RFI filter 3 phase 250V 50/60Hz Ø 38x50
mm**
3x(0.27 μF) + 3x(1MΩ) + 3x(2x0.10nF);
faston 6,3x0,8 mm

Electrolux 049303 0KE945

438276



RIF filter with faston
2x0.010 uF (Y2) + MoHm 250V

Electrolux 046226 046227 046941 0K8386

317937



Fuse Ø 5x20 mm 10A 250V slow

Electrolux 0L1295 0PRM39

Fuses, Capacitors, RFI Filters

416090



Fuse Ø 10x38 mm 25A 500V fast

Electrolux 047131

523454

Fuse holder Ø 10x38 mm
32A 690V; DIN bar; dim. 80x18x63 mm

Electrolux 075737

Switches, Push Buttons, Selectors

416036



Yellow push button Ø 22 mm - without contacts

Electrolux 075600 075656 0L1243

416720

Green rotary switch Ø 22 mm - 2 pos. 0-1 with led 240V
stable - 2 auxiliary contacts NO + 1 auxiliary contact led

Electrolux 0H2641 0K9113 767110401

435065

Black push button Ø 22 mm - with contact 1 aux NO
10(6)A 400V; with metal flange

Electrolux 0E5658 0KI629 767110800

380142

Auxiliary contact 1 NO
6A 230V 50Hz

Electrolux 075601 0L0616 0L4653

436217

Push-button Ø 25 mm
faston 3,2x0,5 mm

Electrolux 0L0381

Lamps and Lamp Holders

342132



Lamp 2W 30V BA9S

Electrolux 053894 075026 0KS339

414549



Lamp cover red Ø 22 mm

Electrolux 075604

340398



White pilot lamp Ø 13 mm 24V - L=60 mm
fluorescent lamp Ø 9 mm, with nut and silicon
O-ring

Electrolux 0E5134 0K8276 482422100

417968



White pilot lamp Ø 13 mm - 240V - L=60
mm
lamp Ø 9 mm, with lock washer and silicon
O-ring

Electrolux 0H2633 0K9096 763100102

414702



Lamp holder

Electrolux 075602 0L1244

414547



Lamp cover green Ø 22 mm

Electrolux 075605

Microswitches

344580



Snap action microswitch with lever
16(4) 250V, faston 6,4x0,8 mm; lever L=55 mm

Electrolux 046322 075935

435376



Magnetic microswitch E591-1U
NO contact 230V 3A 60W; cable L=1700 mm; dim. 36x26,2x13 mm

Electrolux 049966 0E0003 0E5185 0K6346
0K8714

518645



Snap action microswitch with roller 5A
250V L=25mm

Electrolux 0L0204 0L1942

441145



Magnetic microswitch 23x16x18 mm
mod. M375 AZ

Electrolux 088361 0E0102 0K6712 0KE287

433848



Snap action Microswitch with roller 5A
250V L=4x15 mm
cable L=300 mm. Mod. D2VW5L2A1M

Electrolux 0E5629 0K8742 552224300

438337



Magnet 63x18x11 mm [Kit]
with self threading screw Ø 2,9x9,5 mm

Electrolux 049627

436235



Magnetic microswitch M10x30 mm
cable L=2500 mm

Electrolux 0L0401

376204



Floating level switch Ø 18x52 mm [Kit]
cable L=1000 mm; thread M16

Electrolux 049309 049454 049478 0E5808

435219



Magnetic microswitch
NO contact 250V 50VA 0,04A - rast 5

Electrolux 037260 049621 0KB775

415414



Bush M14

Electrolux 075632

Microswitches

436216



Support

Electrolux 0L0380

412109



Actuator for microswitch RT

Electrolux 046849 075626 0KE883

337615



Pin

Electrolux 075640

412203



Protection

Electrolux 075625

Terminal Boards

519256



Terminal

Electrolux 0E5567

439982



Terminal board 6-poles cable sq.mm 6 with bypass installed
capacity 450V 40A; T_{min}-max -5/+150°C;
faston 6,3x0,8 mm

Electrolux 005420 032669 046347 048574
0E1603 0E5176 0K3511 0KE434
0KG206 0U3376

Terminal Boards

440895

**Terminal board KADO 1/7**

63A 500V; dim. box 145x145 mm

Electrolux 049618 0L0111

438970

**Terminal board 5 poles cable sq.mm 16**

DIN rail

Electrolux 002691 0E5850 0F0112 0KT397

Motors

431507

**Gearmotor 1 phase 10W 220/240V 50/60Hz
0,2A**shaft \varnothing 12x25 + \varnothing 12x25 mm; Ltot=104,5 mm;
900/1100 rpm; capacitor 2 μ F connection M8

Electrolux 0KR842

431565

**Gearmotor 1 phase 35W 50/60Hz 220/240V**shaft \varnothing 12x32,5; 1400/1700 rpm; capacitor
2 μ F connection M8

Electrolux 0KJ809

Pumps

317491

**Drain pump 60W 220-240V 50Hz**inlet \varnothing 35 mm; outlet \varnothing 30 mm; faston 6,3 mm

Electrolux 0L2740

411544

**Wash pump 3 phase 3480/3000W
230/400V 50Hz**inlet \varnothing 75 mm, outlet \varnothing 75 mm

Electrolux 075651 075934 076014 0L1458

Pumps

342245



Wash pump 3 phase 2700W 220/415 50Hz 10/5,8A
suction Ø 62 mm; outlet Ø 62 mm; cable L=560 mm

Electrolux 049669

342472



Shell (without plug)

342457



Impeller Ø 135 mm

342459



Gasket for pump Øint. 182 mm - H=5x4,5 mm

342632



Shaft sealing Ø 39x16x16 mm / counter-seal Ø 42x21x8 mm

538731



Replacement of Hanning PKS17 Kit pump
pump 280W 220-240V 1P 60Hz

Electrolux 0E2763 0K8344 0L0586

418090



Wash pump 3 phase 2700W 220-240/380-415V 50Hz
suction Ø 62 mm, outlet Ø 53 mm; 8,7/5A CL.F IP54 Q=700 l/min

Electrolux 0E2971 0K8525 482778300

427992



Impeller

428147



Impeller Ø 126 mm

428145



Shaft sealing Ø 35x12x20 mm / counter-seal Ø 25x13x8 mm

418653



Wash pump 3 phase 2900W 220-254V 50Hz 8,3A
suction Ø 63 mm; outlet Ø 50 mm - 60 Hz Cos(fi) 0.82 (ste) 380/440V 4.8A

Electrolux 0E2972 0KU282 482778301

436222



Wash pump 3 phase 2700W 254/440 50Hz 2800 rpm

Electrolux 0L0386

360149



Impeller Ø 135 mm

Pumps

613978



Rinse pump 1 phase 75W 230V 50Hz
 FIR 5213; inlet Ø 30 mm; outlet Ø 26 mm; 2700 rpm; C=5µF/425V; Till S/N 60800000

Electrolux OL1079 OL1640_

418004



Capacitor for power factor correction 5 µF 400V 50/60Hz

316035



Rinse pump 1 phase 75W 230V 50Hz

315752



Shell for pump

610852



O-ring for shell Ø 4,00x80,00 mm EPDM

615057



Pump support FIR 5213

615056



Formed hose 90° Ø 26x36 mm / Ø 30x40 mm from SN 608...

435998



Hexagonal head screw TE M6x20 mm - INOX

316035



Rinse pump 1 phase 75W 230V 50Hz
 inlet Ø 30 mm; outlet Ø 26 mm; 2700 rpm; C=5µF/425V - [KIT]; From S/N 60800001

Electrolux OL1640

418004



Capacitor for power factor correction 5 µF 400V 50/60Hz

613978



Rinse pump 1 phase 75W 230V 50Hz

315752



Shell for pump

610852



O-ring for shell Ø 4,00x80,00 mm EPDM

Pumps

614010



Rinse pump 1 phase 230W 220/240V 60Hz [KIT]
inlet Øest. 30 mm, outlet Øest. 26 mm

Electrolux 0L1100 0L1641

615057



Pump support FIR 5213

615056



Formed hose 90° Ø 26x36 mm / Ø 30x40 mm from SN 608...

435998



Hexagonal head screw TE M6x20 mm - INOX

342265



Rinse pump 1P 280W 230V 50Hz ONLY for LS5WS /WT4WS-OLD
FIR 4213; inlet/outlet Ø 28 mm; capacity 110 lt/min - 2800 rpm - CL.F; C=6,3 µF - cable 160 mm; for other models see 0L1079 - for new undercounter see 0L2597

Electrolux 049310 0L1030

342376



Shell for pump

360121



Impeller Ø 72 mm

412572



Shaft sealing Ø 24x10x14 mm / counter-seal Ø 26x13x8 mm

614014



Rinse pump 1 phase 280W 400V 50Hz
inlet Ø 30 mm; outlet Ø 26 mm; C=6,3 µF

Electrolux 0L1103

435156



Replacement of Hanning CP50 Kit pump
rinse pump FIR 4213 - 280W 230V 50Hz; for Duo Rinse

Electrolux 0E2746 0K8343 0L0149 482509300

427992



Impeller

Electrolux 0E2916 0E2975 0KE112 0KE530

428147



Impeller Ø 126 mm
for pump HANNING PS80S; hole Ø 8 mm

Electrolux 0E2723 0E2973 0K8342 0KN884

Pressure Switches

435220



Pressure switch 1 level 250/130-390 mbar
contacts capacity 16A 250V; Tmax 85°C

Electrolux 049620

343916



Pressure switch 1 level 310/180 mbar
contacts capacity 16A 250V; Tmax 85°C

Electrolux 075660

435994



Pressure switch 2 level 130/60-180/100 mbar
contact capacity 16A 250V; Tmax 85°C

Electrolux 0E5671 0H2369 0K7822 0KI456

582952



Pressure switch 2 levels 390/340-250/130 mbar
contacts capacity 16A 250V; Tmax 85°C

Electrolux 0L2742

Heating Elements

415181



Boiler heating element 4500W 220V
L=390 mm; triangular flange H=83 mm int.Ø 47,5 mm - RPN/EI760

Electrolux 052619 065557 0L1874

414781



Boiler heating element 3500W 230V
dim. 310x65 mm; flange 81x28 mm - LS 10 - LS 12

Electrolux 049615 049757 0KE957

Heating Elements

414463

Boiler heating element 7500W 220V
L=325 mm - D48 - D480

Electrolux 0H2276 0K7526

415006

Boiler heating element 4500W 240V
L=400 mm; triangular flange
RPN/EI760

Electrolux 045518 052620 0L1875

414492

Boiler heating element 12000W 240V
L=450mm; flange Ø est. 72 mm Ø int 47,5 mm

Electrolux 0E5240

415005

Boiler heating element 6000W 230V; from S.n 029....
L=290 mm; triangular flange 83x83 mm Øint. 47,5 mm; connection faston 6,3x0,8 mm RT10/RT180/Z18/WT90

Electrolux 049116 058012 066110 076035
0L1878

414505

Boiler heating element 12000W 220V
L=455 mm, flange Ø 72 mm, with bulb housing - D48 - D480

Electrolux 0E5213 0K7530 478040800

518647

Boiler heating element 7000W 230V
L=310 mm; triangular flange 83x83 mm
PW1M/PW1MH/PW2M/WT830M/WT830MH/W'850M/PW100M/PW100MH/PW200M

Electrolux 0L0203 0L2246 0L2766

415310

Boiler heating element 6000W 240V
L=500; flange Ø 57,5 mm; complet gasket and faston - LS1080

Electrolux 045559 058011 0L1879

414788

Boiler heating element 10500W 230V
L=350 mm; triangular flange 92x92 mm Øint. 57,5 mm
EHTA

Electrolux 049997 0L1772 0L2727

414901

Boiler heating element 12000W 230V
L=462 mm; flange Ø 57,5mm ; with bulb housing Ø 7x24 mm - RT10 / RT180 / Z18 / WT90

Electrolux 0E5116 0H2515 0K8251 0L1837

417182

Boiler heating element 16000W 230/400V since s/n 358...
L=675 mm; triangular flange 80x80 mm; Øint. 52 mm; cable L=2710 mm; with thermostat; GD900 complete

Electrolux 0KR192 0KR193

Heating Elements

414117

Tank heating element 4000W 230V
L=465 mm, H=55 mm; with gasket and nut

Electrolux 0H2415 0K7032 0K7980 0K7983
482017071

414497

Tank heating element 4000W 220V
connection M14

Electrolux 0E0147 0H2396 0K6684 0K7908

415015

Tank heating element 7500W 230V
L=320 mm; flange Øest. 72 mm Øint. 57,5 mm

Electrolux 0H2277

414276

Heating element gasket Ø 110x140 mm

Electrolux 0H2210 0K7354

438593

Contacts protection cover

Electrolux 065560

419844

Nut

Electrolux 0K7985 0K8692

440922

Flange for heating element

Electrolux 0E5492 478085900

412421

Flange for heating element
Ø 50x90; 6 hole Ø 7,5 mm e 2 hole thread M4x1

Electrolux 003362 065558 0K2022 0K2917

414871

Bush
Øint 54.5 mm Hint 13.5 mm

Electrolux 0E5491 0K8320

336748

Flange 190x120x2 mm

Electrolux 0E5534

Thermostats

432344



Operating thermostat 1P 30÷110°C
capillary L=3000 mm; bulb Ø 6x112 mm; with gland nut M9x1

Electrolux 047285 0E5032 0H2117 0K7035
0KE345 475770402

432345



Safety thermostat 1P 126°C
coated capillary L=1800 mm; bulb Ø 6x129 mm
- with manual reset

Electrolux 0E1108 0E5086 0K6886 0K6888
0KX072 481950102

507916



Bulb housing Ø 13,5x6,8 mm - L=100 mm

Electrolux 0E5479 0K8435

438733



Gland nut M12 - Ø 6,25 mm
L=18 mm

Electrolux 067899 0KX146

430474



Gland nut M12 - Ø 6,5 mm
L=18,5 mm

Electrolux 0E5033 0K7534 0KE421 478044600

415426



Gland nut H=40 mm
Connection M/F 16.5/9 mm

Electrolux 067958

418985



Connection 3/8"MF with nut and gasket

Electrolux 0E5031 0H2066 0K7027 0K7791

435110



Gland nut M16xL16 mm

Electrolux 0L0280

Transformers

410165

**Transformer 100VA**

PRI.: 0-220-240-380-415V, SEC.: 12-24V

Electrolux 046993 068907

301639

**Transformer 400VA 50/60Hz**

PRI.: 230-400V ±15V, SEC.: 24-48V

Electrolux 0E5110 0E5247 0KK018 0L0074

Fans

531364

**Compact fan 120x120x38 mm - 20W 230V
50/60Hz**no cable; faston connection 2,8x0,5 mm; 2550
rpm; ball bearingElectrolux 087945 091277 0A9495 0A9640
0C4012 0C4106 0C4922 0CB143
0D6787 0E2261 0K7491 0W5643

Cables

538764

**Wiring harness**

Electrolux 0L0619 0L2497

Drain components

438460

**Gasket Ø 47x59x3 mm**

Electrolux 046595

441799

**Gasket Ø 50x60x1,5 mm**

Electrolux 049828

Drain components

348036

Drain plate Ø 1" 1/2 H=46 mm
 overflow pipe hole Ø 40.3 mm ,
 chromium-plated brass

Electrolux 075624 0E5647

441218

Ring nut for drain plate 1" 1/2

Electrolux 066079

440674

Overflow pipe Ø 40x455 mm

Electrolux 049675 0E5804 0K1122

Dispensers and Peristaltic pump

610871

Rinse aid peristaltic pump w/speed adj. (external use)
 mod. PR-1; flow rate adj. from 0,15÷1 lt/h
 press. 3 bar; 230V 50Hz; protection IP65;
 cable L=1200 mm; Hose in sekobril;
 installation kit included

Electrolux 0S0671

325646

Rinse aid peristaltic pump fixed capacity
 mod. NPG-0,4; fixed flow rate 0,4 L/h; 3 bar;
 without rubber holder, conical nut; 8W 230V
 50/60Hz; cable L=200 mm; hose in sekobril;
 (internal use)

Electrolux 049311 049416 049625 0KE953
 0L0697 0S0704 0S1713 0S1989

508831

Hose for rinse aid pump sekobril Ø 3x8 mm

Dispensers and Peristaltic pump

610862



Detergent peristaltic pump fixed capacity (internal use)
mod. NPG-3; fixed flow rate 3 L/h; 0,1 bar; 230V 50Hz cable L=200 mm; hose in Santoprene; installation kit included

Electrolux 049312 049417 049624 0KE952
0L0704 0S0705 864218

410180



Hose for detergent pump Santoprene Ø 6,25x10,55 mm

582853



Detergent peristaltic pump fixed capacity
mod. NPG-3; fixed flow rate 3 L/h; 0,1 bar; without rubber holder, conical nut; 230V 50Hz cable L=200 mm; hose in Santoprene; installation kit included; (internal use)

Electrolux 0S1711 0S1986

508856



Hose for detergent pump Santoprene Ø 6,25x10,65 mm

610870



Detergent peristaltic pump w/speed adj. (external use)
mod. PR-4; flow rate from 0,6+4 lt/h press. 0,1 bar; 230V 50Hz; protection IP65; hose in Santoprene; cable L=2750; installation kit included;

Electrolux 0S0669


700435



Detergent peristaltic pump w/conductivity probe
mod. PA-6; flow rate 6 lt/h press. 0,1 bar; 230V 50Hz; protection IP65; hose in Santoprene; cable L=2750 mm + L=2750 mm; installation kit included

Electrolux 0G3344 0S0670

610865

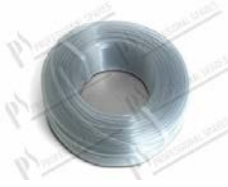

PVC transparent hose Ø 4x6 mm [hank 100 mt]

Electrolux 0S2772

524153



Stiff polyethylene grey hose Ø 4x6 L=2660 mm, Tmax 130°C
suitable for detergent pump, working T. -20 +60°C, max pressure 10 bar.

Electrolux 049360 049905 0L1163

532483



Stiff polyethylene blue hose Ø 4x6 mm [hank 100 mt]
Feeding hose rinse peristaltic pump

Electrolux 0S2101

410373



Suction filter in inox for hose Ø 4x6 mm
Ø 20x18 mm

Electrolux 049356 0S1028

317496



Ring nut M10x1 (2 pcs)
for hose Ø 4x6 mm

Electrolux 0L2071

Dispensers and Peristaltic pump

436193



Plug

Electrolux 0L0349

438249



Pipe fitting 90° M10 mm inox
thread L=12 mm; for hose Ø 4x6 mm

Electrolux 049557 049801 0KA991

410181



Hose for rinse aid pump sekobrill Ø 3x8
mm
L=175 mm - rubber holder Ø 4x6 mm

Electrolux 049418

410180



Hose for detergent pump Santoprene Ø
6,25x10,55 mm
L=180 mm - rubber holder Ø 4x6 mm

Electrolux 049419 0S0678

412192



Funnel for rinse

Electrolux 047548 049331

Solenoid Valves and Reducers

349150

Solenoid valve 90° - 1 way - 24Vac 50/60Hz - Ø 14 mm
with fastons; inlet Ø 3/4" with filter; Tmax 90°C

Electrolux 0H2513 0K8226 0L0175 482373600

533521

Solenoid valve 180° - 1 way - 220/240V 50/60Hz - Ø 14 mm
rast 5; inlet Ø 3/4" with filter and inlet reducer 5,5 lt/min; Tmax 90°C

Electrolux 0L0121 0L0567

200131

Inlet pressure reducer 10 lt/min [natural-Elbi]

Electrolux 049650

533522

Solenoid valve 180° - 1 way - 220/240V 50-60Hz - Ø 14 mm
rast 5; inlet Ø 3/4" with filter and inlet reducer 10 lt/min; Tmax 90°C

Electrolux 0L0568 0L3446

435218

Solenoid valve 90° - 1 way - 220/240V 50/60Hz - Ø 14 mm
rast 5; inlet Ø 3/4" with filter and inlet reducer 10 lt/min; Tmax 90°C; without bracket

Electrolux 049626

435217

Solenoid valve 180° - 2 ways - 220/240V 50/60Hz - Ø 14 mm
rast 5; inlet Ø 3/4" with filter and reducer 20 lt/min; Tmax 90°C

Electrolux 049668

349158

Solenoid valve 90° - 1 way - 220/240V 50/60Hz - Ø 14 mm
rast 5; inlet Ø 3/4" with filter and inlet reducer 5,5 lt/min; Tmax 90°C; coil 90°

Electrolux 049452 049983

410235

Solenoid brass valve L182 - NC - G1" - 24V 50/60Hz
L=105 mm - NBR membrane - Fluid. Temp -10°C+90°C; 0,35-16bar

Electrolux 033480 075674

613616

Solenoid valve 180° - 1 way - 220/240V 50/60Hz - Ø 14 mm
rast 5; inlet Ø 3/4" with filter and inlet reducer 5 lt/min; Tmax 90°C

Electrolux 0E2531 0L0776 0L3447 0W0706

532485

Solenoid brass valve L182 - NC - G3/8"-208-240V 50/60Hz
L=60 mm; EPDM membrane - UL/CSA; 0,35-16bar

Electrolux 0L0488 0L0569 0L2656

Solenoid Valves and Reducers

459135



Solenoid brass valve G1/2" 24V 50Hz 8W
L=58 mm; Pmax. 10bar; Fluid. Temp -30/+90°C

Electrolux 0KJ843

435996



Solenoid brass valve L153 - NC - G3/4" - 230V 50Hz
L=79 mm - PTFE membrane (steam) - Fluid. Temp -10°C + +140°C

Electrolux 0E5974 0KP279 0L1482

417611



Solenoid brass valve EV220 - NC - G1/2" - 9W 230V 50Hz
L=58 mm; Tmax -30/+100°C; 0,3-10bar

Electrolux 0H2412 0K6761 0K7060 0K7507
0KA629

Filters

438416



Water filter 1/2" - L=110 mm

Electrolux 048834

441269



Water filter 3/4" - L=68 mm
bronze body and filter in INOX

Electrolux 053037 068121 0KL216

433654



Water filter 3/4" L=121 mm

Electrolux 048746

441387



Tank filter 490x180x30 mm

Electrolux 075685

Filters


507681



Rear filter 180x330 mm

Electrolux 049674

439763

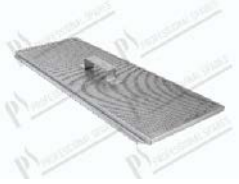

Tank filter 633x220/233x11,5 mm

Electrolux 049673

524455



Pump filter

Electrolux 049689

440908



Basket filter 635x105x115 mm

Electrolux 0E5183 482262800

Shower units and Water columns

544763



Shower unit with one-hole mixer tap with taps heads
fitting Ø 3/4"; connection pipe Ø 1/2" L=350 mm; H=1100 mm; series Klarco

Electrolux 069570 069968 OS1036 855315

310503



Shower unit with one-hole mixer tap single-lever
connection Ø 3/4"; water delivery spout L=275x25 mm

Electrolux OS0874 855324

318744



Hand shower M1/2" - EUROP

347886



Hand shower STAR 1/2"M

586022



Water saving Hand shower NEW/4L - 3,8l/min - 3bar

318744



Hand shower M1/2" - EUROP

613574



Plastic support L=115 mm

586022



Water saving Hand shower NEW/4L - 3,8l/min - 3bar

348523



Spring for shower unit

348523



Spring for shower unit

613575



Tap head G1/2" 8x20 mm

348303



Water spout aerator 3/4" - Klarco

318741



O-ring 1,78x15,6 mm EPDM [10 Pcs]

412560



Mixing cartridge Klarco Ø 47x30 mm

Shower units and Water columns

538786



Shower unit with two-holes mixer tap with taps heads
connection Ø 3/4" - centre distance 155 mm;
Klarco serie

Electrolux 0L0643 855311

318744



Hand shower M1/2" - EUROP

586022



Water saving Hand shower NEW/4L - 3,8l/min - 3bar

348523



Spring for shower unit

348428



Piston for shower

540823



Knob symbol red with tap head 3/4"

540822



Knob symbol blue with tap head 3/4"

348326



Spring

312070



Shower unit MAXI Reel 10 m - without water-gun
with automatic hose-reel, in INOX 304

Electrolux 0S0877

312065



Shower unit MAXI Reel 15 m - without water-gun
with automatic hose-reel, in INOX 304

Electrolux 0S0878

347886



Hand shower STAR 1/2" M
dim: 245x90x50 mm

Electrolux 069973 0S0347

318744



Hand shower M1/2" - EUROP

Electrolux 069569 0L0640 0S1075 0S1102

311811



Hand shower NITO 1

Electrolux 0S0823

Shower units and Water columns

311812



Hand shower NITO 2

Electrolux 0S1132

Wash units

436225

Wash arm complete with hub
PW1-2 / WT830-850

Electrolux 0E5637 0L0389

438408



Hub for jets Ø 76/67x35 mm

Electrolux 048246 048401

524453

Feed pipe Ø 30 mm
dim. 665x810 mm

Electrolux 049691

337606



Shaft for support

Electrolux 075628

441044

Rinse arm L=600 mm
without injectors and corks, loch hole Ø 12 mm

Electrolux 0E5640

524451

Support for lower jets dx pw
pipe-fitting Øest. 42 mm, Øest. 12 mm

Electrolux 049695

441065



Rinse Jet plug 1/4"

435106



Rinsing nozzle Nr 9506

610809



Support for upper jets with shaft Ø 14mm

Electrolux 0L0695

Wash units

415412



Rinse Jet plug

Electrolux 066396

435106



Rinsing nozzle Nr 9506

Electrolux 0E5107 0H2378 0K7836 0K8282

319901

Washing arm plug 1" F
brass-chromate

Electrolux 0E5016 0K9039

348060

Rinsing nozzle
for LO480 and LO250

Electrolux 045753

441065

Rinse Jet plug 1/4"
inox

Electrolux 0E5639

431348

Washing nozzle
Ø 25x40xh45 mm

Electrolux 0KG956 0KJ817

441074



Plug

Electrolux 0E5227

435311



Pin for jets M12x1 L=43 mm

Electrolux 048290 0E5641 0T2704

335854



Rinsing nozzle Nr 9505

Electrolux 0E2247 0E5101 0K7992 0KA703

431479



Rinsing nozzle M10 - H=19,3 (4 pcs)

Electrolux 0KJ841 0KZC86

Wash units

349424



Gasket Ø 50x13x2 mm

Electrolux 075648

413093



Ring nut Ø 50 mm
M20

Electrolux 075627

Steam element/Condenser and Evaporator

438997



Steam element

Electrolux 0E5359

Air-gaps

582062



Air-break (closed window) - [Kit]
inlet/outlet Ø 27/12 mm; dim. 270x200x60 mm

Electrolux 0G6643

435224



Air-break [closed window]
inlet/outlet Ø 27/12 mm; dim. 270x200x60 mm

Electrolux 049459 0KB770 0L2666

435254



Air break 47x59xh26,5 mm
pipe fitting Ø 7 mm

Electrolux 048308 0K8750

434662



Air break [open window]
inlet/outlet Ø 27/12 mm; dim. 25x26x70 mm

Electrolux 049481 0L2435

Air-gaps

435187



Air break boiler

Electrolux 049628 049776 0L0098

438734



Ring

Electrolux 045507 046881 067930

435134



Air break Ø 44x113 mm

Electrolux 046631 0H2542 0K8662 542601001

583430



Flat gasket Ø 38x50x2 mm

Electrolux 0L0413

412158



Air break 150x65x65 mm

Electrolux 045351 045459

438450



**Ring nut for LS10
Ø 50x64 mm**

Electrolux 049480 0KB772

317436



Protection air break 85x165x20 mm

Electrolux 0L2560

Water conditioning

529584
**Automatic water softener 8 lt valve
AUTOTROL 366**

dim. 245x450x440 mm; water connections Ø 3/4" - pressure 1+8 bar; power supply 230V 50/60Hz; AISI 304 tank 5,6 lt; flow rate at 20°F 1680 l/h

Electrolux OS0331 OS1077 OS1946

410068
**Manual water softener 12 lt inlet Ø
3/8"-3/4"**

12 lt AISI 304 stainless steel cylinder with 9 lt resin; 4-50°C; regeneration salt 1,5 Kg; flow rate 1000 lt/h; dim. Ø 190x500 mm; with reduction inlet-outlet Ø 3/8"-3/4"

Electrolux OS0330

410190
**Automatic water softener 8 lt AUTOTROL
255 Logix 740**

LOGIX TIMER, 8 lt AISI 304 stainless steel cylinder with 5,6 kg resin; water connection Ø 3/4" temp. 4-50°C; power supply 230V 50/60Hz; regeneration salt 1 kg; dim. 245x480x540 mm

Electrolux OS0716 OS1079

545623
**Manual water softener 20 lt inlet Ø
3/8"-3/4"**

20 lt AISI 304 stainless steel cylinder with 15 lt resin; 4-50°C; regeneration salt 2,5 Kg; flow rate 1000 lt/h; dim. Ø 190x900 mm; with reduction inlet-outlet Ø 3/8"-3/4"

Electrolux OS0329 860430

410189
**Automatic water softener 12 lt-valve
AUTOTROL 255 Logix 740**

dim. 320x500x660 mm; water connections Ø 3/4" - pressure 2+8 bar; power supply 230V 50/60Hz; flow rate at 20°F 2520 l/h; fiber tank 9 lt, salt container 30 kg

Electrolux OS0332 OS1083

540863
**Manual water softener 8 lt by pass,
water inlet Ø 3/8"**

8 lt AISI 304 stainless steel cylinder with 5,8 lt resin; 4-50°C; regeneration salt 1 Kg; dim. Ø 190x400 mm; with reduction inlet-outlet Ø 3/8"-3/4"

Electrolux OS0578 OS1074

515343
**Automatic water softener 24 lt valve
AUTOTROL 255 Logix 740**

dim. 320x500x1120 mm; water connections Ø 3/4" - pressure 2+8 bar; power supply 230V 50/60Hz; flow rate at 20°F 5.040 l/h; fiberglass tank 17 lt, salt container 50 kg

Electrolux OS1089

540864
**Manual water softener - 12 lt by pass,
water inlet Ø 3/8"**

12 lt AISI 304 stainless steel cylinder with 9 lt resin; 4-50°C; regeneration salt 1,5 Kg; dim. Ø 190x500 mm; with reduction inlet-outlet Ø 3/8"-3/4"

Electrolux OS0579 OS1076

535868
**Manual water softener 8 lt inlet Ø
3/8"-3/4"**

8 lt AISI 304 stainless steel cylinder with 5,8 lt resin; 4-50°C; regeneration salt 1 Kg; flow rate 1000 lt/h; dim. Ø 190x400 mm; with reduction inlet-outlet Ø 3/8"-3/4"

Electrolux OC1903

339685
Funnel for salt tank

Ø 34x96 mm

Electrolux 047604

Water conditioning

301623



Water filter for manual water softener 3/4"
wound wire cartridge 5"

Electrolux OL1141

301622



Water filter for manual water softener 3/8"
wound wire cartridge 5"

Electrolux OL1140

316135



Wound wire filter cartridge 50 micron
Ø 28,5x62,5x130 mm (NK111 e NK112)

Electrolux OS1027

325024



Refil filter cartridge Profine blue (small)
capacity 15000 lt

Electrolux OS1821 864393

410125



Cationic resin pack 25 lt

Electrolux OS0333

340451



Membrane for softener

Electrolux OC0048

312910



Refil cartridge Purity 1200 Clean (blu)
capacity 13000 lt; partial demineralisation

Electrolux OS0802

310336



Refil cartridge Purity 1200 Clean Extra (red)
capacity 3100 lt; total demineralisation

Electrolux OS0804

200288



Flow meter with digital 100-700 L
sensor 3/4" MF; L=83 mm; cable L=1500 mm;
4-60°C; Max 8,6 bar

Electrolux OS0945

582443



Water purifier
JG pipe Ø 7x10 mm, JG pipe Ø 1/4 "x 0.170"
(Ø 4.3x6.35 mm 90 ° fitting JG MF10 mm, JG MF fitting 6.4 mm)

Electrolux OS0718 OS1822 864026 864388

Water conditioning

302068



Descaling cleaning membranes osmosi,
mod. RO600C
Complet 2 filter carboni e 1 descaling 200 gr

Electrolux OS0730

Hoses

613601



Formed hose Ø 25x33 mm / Ø 33x40 mm
L=70 mm EPDM

Electrolux OL0759

438992



Formed hose 90° Ø 40x50 mm

Electrolux 0E5512 0K8353

414553



Formed hose Ø 63x73 mm L=74 mm
for pump suction

Electrolux 0E5023 0K7452 477921100

325220



Formed hose Ø 53x63 mm EPDM
dim. 190x120 mm

Electrolux 0E2970 0E5024 0H2516 0K8271
0KE518 0KI410 482420701

342003



Sleeve Ø 65x74 mm L=110 mm EPDM
working temp. -35°C+120°C; Pmax 6 bar

Electrolux 046565

318938



Formed hose Ø 82x90 mm

Electrolux 0E5999 0K8605

317880



Formed hose 90° Ø 24x30 mm - L=125/50
mm

Electrolux 0E0134 0E5166 0H1998 0K4558
482458900

321512



Hose EPDM Ø 4x7 mm L=1300 mm
working temp. -35°C+110°C; Pmax 10 bar;
WRAS certified

Electrolux 072294 072502 0E0522 0E0523
0E0772 0E0883 0E1368 0E1426
0E1546 0W02B5 0W0328 0W0338

Hoses

319338



Hose EPDM Ø 4x7 mm L=5000 mm
working temp. -35°C+110°C; Pmax 10 bar;
WRAS certified

Electrolux 072393 0C4205 0HM323 0K9162
0KC518

700448



Hose EPDM Ø 25,5x35,5 mm (sold by meter)
working temp. -35°C+110°C; Pmax 10 bar

Electrolux 049773 0W0194 0W0195 0W01JR
0W1RL4 0W1RLK 0W3935 0W3953

435233



Hose EPDM Ø 5x12 mm L=2300 mm
Tmax 110°C

Electrolux 048168 048225 048226 048883
068638 068792 068793 068794


200006



Hose EPDM Ø 25,5x32,5 mm (sold by meter)
working temp. -35°C+100°C; Pmax 10 bar

Electrolux 049287 0L4453

200004

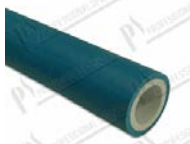

Hose EPDM Ø 11x19 mm - blue - (sold by meter)
Pmax 10 bar; Work Temp. -35°C+110°C; FDA approved

Electrolux 049379 0L3641 0U1051

429261



Hose EPDM Ø 38x50 mm (sold by meter)
working temp. -35°C+120°C; Pmax 6 bar

Electrolux 0H2372 0K7825 481856400

200002



Hose EPDM Ø 12x19,5 mm (sold by meter)
for hot water - not toxic - Pmax 10 bar -
working temp -35°C+120°C

Electrolux 045451 045807 045808 045942
048531 057763 057791 065535
066081 066082 069091 0E5053
0K8116 0K8670 0L3064 0T3901

411738



Hose EPDM Ø 45x54 mm L=160 mm
working temp. -35°C+120°C; Pmax 6 bar

Electrolux 0E5698 0KI412 0KI492 482525600

418178



Hose EPDM Ø 12x19,5 mm L=2000 mm
for hot water Tmax 110°C; atossic

Electrolux 0K8671

438371



Hose EPDM Ø 45x54 mm L=300 mm
working temp. -35°C+120°C; Pmax 6 bar

Electrolux 045457 045768 045806 068640

Hoses

431584



Hose EPDM Ø 45x54 mm L=850 mm
working temp. -35°C+120°C; Pmax 6 bar

Electrolux 0KS300 0KS303 0KS304

519203



Drain pipe Ltot = 900 mm - pipe Ø 50 mm

Electrolux 0E5035

411850



Hose EPDM Ø 75x85 mm L=350 mm
working temp. -35°C+110°C; Pmax 6 bar

Electrolux 075609

508857



Flexible Drain pipe Ø 21 mm 180°+ Ø 20 mm L=2120 mm
muffs Øint/ext 21x27 mm, tubo Øext 25,5 mm

Electrolux 0L2739

436434



Stiff polyethylene blue hose Ø 4x6 mm L= 2660 mm
Feeding hose rinse peristaltic pump

Electrolux 0L0481

581835



Drain pipe PPE Ø 21 mm M 180°+ Ø 29 mm F 90° L=1200 mm
muff Ø 21/28 mm, Ø 29/36,5 mm, tubo Ø 26,5 mm

Electrolux 0L2730

438475



Rubber feeder hose 3/4" L=2000 mm
straight connection + 90° connection; ring nut in nickel-plated brass Ø 3/4"F; pipe Ø 10x17 mm; Pmax 15 bar; Tmax 90°C; WRC/WRAS approved

Electrolux 047605 049378 0K1135 0L1887

438436



Rubber feeder hose 3/4" L=2100 mm
straight connection 90° plastic connection; plastic ring nut Ø 3/4"F; pipe Ø 13x19 mm; Pmax 10 bar; Tmax 90°C; WRAS/VDE approved

Electrolux 048816

Ball valves, Pipe fittings

519249



Nipple 1/2"÷1/2" - L=27 mm - brass

Electrolux 0E5583 0K9022

322665



Nipple 3/4"÷3/4" - L=30 mm - brass

Electrolux 057862 072457 0E0446 0K9024
0KG596 0KI452 0KL750 0W3306

435655



Nipple 3/4"÷3/8" - L=28 mm - brass

Electrolux 0L0479

519266



Nipple 1" M/M 13 mm - L=40 mm - brass with hole thread M10

Electrolux 0E5544 0H2331 0K7098 0K7681

418313



Rubber holder 90° G1/2" - outlet Ø 14 mm brass-nickel

Electrolux 0E5489 0E5510 0K8721 0K8723
552217100 552217300

318108



Rubber holder G3/4" - outlet Ø 25 mm - brass

Electrolux 0E0159 0E2594 552214028

435654



Rubber holder G3/8" - outlet Ø 12,5 mm Ltot.=36 mm

Electrolux 0L0477

319206



Pipe fitting 90° Ø 3/4" FF dim. 41x41 mm

Electrolux 0E0686 0HN504 0K9042 0KE705

524461



Pipe fitting 90° 3/4" M/F

Electrolux 049679 089854

441002



T-connection Ø 14-14-14 mm

Electrolux 0E5423 0K8724

Ball valves, Pipe fittings

518638



T-connection T Ø 26-26-26 mm
dim. 105x65 mm

Electrolux 0L0210

524377



Y-connection inlet Ø 63 mm - outlet 2x Ø 42 mm

Electrolux 049726

419338



Special pipe fitting 1/2"MF

Electrolux 0H2010 0K6652 460816102

423547



Nut Øint 20 mm Htot= 65 mm
flange Ø 45 mm

Electrolux 0E0135 0E0527 0H2141 0K6953

519271



T-connection 3/4" F - L=51x40,5 mm - brass

Electrolux 072456 0E5522 0K9043 0W0ZYB

518851



Pipe fitting

Electrolux 0E5495 0H2583

438482



Y-connection Ø 12-12-12 mm

Electrolux 048195

418965



Bush M20 Ø26x32 mm - brass

Electrolux 0K9020

412473



Y-connection inlet Ø 29 mm - outlet Ø 12 mm

Electrolux 049289 0L0365

441675



Backflow preventer dishwasher
rubber holder Ø 12 mm

Electrolux 005762 049332 0E5648 0L1892

Ball valves, Pipe fittings

459801



Air valve Ø 22,5/23 mm
dim. 51x51x52 mm

Electrolux 0L2729

Boilers

339101



Boiler 3 Heating elements
Ø 195x560 mm - PW / LV / WT

Electrolux 049665

524103



Boiler insulation 670x550x13 mm

Electrolux 049859

436192



Boiler 1 Heating element
Ø 195x570 mm, pipe fitting Øext 26,5/12 mm - PW1-2 / WT 830-850

Electrolux 0L0348 0L1954

519215



Plug 1/8"
Ø 9,6 mm; h=10,7 mm

Electrolux 0E2887 0H2614 0K9034 0K9035


319785



Boiler 2 heating elements
Ø 200x570 mm; connection for hose tubo Ø 25 mm - WT830M/WT830H/WT850M

Electrolux 0L1151 0L1952

441765

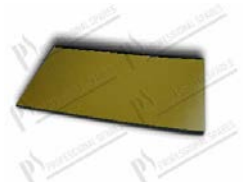

Boiler EPDM insulation for high temperature 670x330x13 mm

Electrolux 048447 049415 0KE918 0L0774

Hinges

315914



Shaft for hinge SN. 143

Electrolux 0L2612 0L2748

Lockings

613884



Magnet 63x18x7 mm
RCT/WTM

Electrolux 0L1001 0L2534

322606



Security shaft right (from Sn. 1421)
dim. Ø 7x69 mm

Electrolux 0L2620

347774



Handle support

Electrolux 047730 075926 0E5096 0K2239

411270



Security shaft right

Electrolux 049693

585852



Bracket [Kit]
dim. 100x17 mm

Electrolux 0L2615

411271



Security shaft left

Electrolux 049711 0L0036

322605



Security shaft left (from Sn. 1421)
dim. Ø 7x69 mm

Electrolux 0L2619

318837



Lever

Electrolux 0L2613 0L2749

Lockings

440899



Door lever 221x30 mm

Electrolux 049687 0L0034

315916



Platelet 32x44x1 mm

Electrolux 0L2626 0TT374

524457



Lever 222x10x10 mm

Electrolux 049688

Transmission components

434028



Glide shoe 60x40x15 mm
hole Ø 20,7 mm

Electrolux 0E5006 0K8173 0KE503 482257600

518890



Chain

Electrolux 0E5802

438884



Connecting link

Electrolux 0E5663

518889



Chain L=1035 mm

Electrolux 0E5805

Transmission components

347767



Plastic Chain 92 rings

Electrolux 0E5668 0K8589 0L0402

Structural components

583429



Drain water
dim. 105x92x55 mm

Electrolux 0L2024 0L2031

518699



Splash guard

Electrolux 0L0136

518689



Upper door 1450x425x50 mm
thread rohr M5

Electrolux 0L0143

524165



Splash guard
L=770 mm

Electrolux 049868

438995



Splash guard

Electrolux 0E5490 0KJ650

Slide Ways - Shelf Supports

315907



Left runner support

Electrolux 0L2608

533541

Right hinge support 100x42x15 mm as of
SN. 246...
hole Ø 25,7 mm

Electrolux 0L0627

315913



Right runner support

Electrolux 0L2611

441747

Nut for runner L=44 mm
thread M8

Electrolux 049685

322608

Left runner support (from Sn. 1421)
dim. 100x42x14 mm

Electrolux 0L2609

538771

Left runner L= 870 mm from SN. 246...
PW1M H / WT830M H

Electrolux 0L0140 0L0623

322617

Right runner support (from Sn. 1421)
dim. 100x42x14 mm

Electrolux 0L2610

538769

Right runner L= 1072 mm from SN. 246...
PW1M H / WT830M H

Electrolux 0L0139 0L0622

533540

Left hinge support 100x42x15 mm as of
SN. 246...
hole Ø 25,7 mm

Electrolux 0L0626

338625

Left runner L=1062 mm until SN. 245
PW1M H / WT830M H

Electrolux 049732 049838

Slide Ways - Shelf Supports

315897



Left runner L=796 mm

ZPPWES / APPWES / EPPWES / NPPWES /
ZPPWEH / APPWEH / EPPWEH / NPPWEH /
ZPPWSSG / ZPPWEL / APPWEL / EPPWEL /
NPPWEL / ZPPWSLG

Electrolux 0L2616

538772



Right runner L= 870 mm as of SN. 246...

PW1M / PW2M / WT830M / WT850M

Electrolux 0L0137 0L0624

315905



Right runner L=796 mm

ZPPWES / APPWES / EPPWES / NPPWES /
ZPPWEH / APPWEH / EPPWEH / NPPWEH /
ZPPWSSG / ZPPWEL / APPWEL / EPPWEL /
NPPWEL / ZPPWSLG

Electrolux 0L2617

415381



Right runner L=930 mm

LO / PLO / LOPE

Electrolux 048576

338543



Right runner L=860 mm till SN. 245

PW1M / PW2M / WT830M / WT850M

Electrolux 049725 049835

338240



Left runner L=860 mm till SN. 245

PW1M / PW2M / WT830M / WT850M

Electrolux 049682 049836

538774



Left runner L= 870 mm as of SN. 246...

PW1M / PW2M / WT830M / WT850M

Electrolux 0L0138 0L0625

Handles

414168



Handgrip M8 - L=50 mm Ø 21 mm

Electrolux 067411 075545

412223



Plug
Ø27 mm - h 14 mm

Electrolux 081727 081778

Knobs

435077



Knob Ø 44 mm
D shaft hole Ø 6x4,6 mm

Electrolux 048273 048288 048402 0E5217

412122



Knob Ø 37 mm
D-shaft hole Ø 9x6 mm

Electrolux 0F0005 0K2339 0K8470

Small Mechanical Parts

532735



Snap-ring Øint. 9x1 mm INOX (10 pcs)

Electrolux 027023 067004 0E5500 0K8964

325128



Snap-ring Øint. 18,5x1,2 mm - INOX

Electrolux 0E0108 0E0832 0HM630 0K8969

Small Mechanical Parts

418872



Insert plug

Electrolux 0E5379 0KU305 482515200

336328



Hexagonal nut 3/8"

Electrolux 027414 0H2611 0H8269 0K9016

431229



Bushing Ø 16x18/24x17 mm

Electrolux 0KK044

519199



Hexagonal nut 3/4" - H=7 mm

Electrolux 0E5056

431234



Flange bushing Ø 16,2x20/25xh35 mm

Electrolux 0KR076

440928



Hexagonal flanged nut M8 INOX

Electrolux 0E5063 0K8708 0W1S5X 0W4233

334291



Wedge 6x6x20 mm [10 pcs]

Electrolux 0H1027 0K7846 0KQ488

418034



Hexagonal nut M6 - H=11,5 mm INOX

Electrolux 0K8941 732311640

441924



Hexagonal nut M14x1,5 mm

Electrolux 049268

438537



Knurled nut M12x1 Ø 35 mm H=6 mm

Electrolux 048632 0E5638

Small Mechanical Parts

337665



Knurled nut

Electrolux 075635

533548



Spacer Ø 8.2x17.50x7.6

Electrolux 0L0632

310306



Double wire hose clamp Ø 7,8÷8,3 mm

Electrolux 0C7120 0E5993 0L0082 0L0815

321177



Double wire hose clamp Ø 9,3÷9,9 mm

Electrolux 0L0083

438357



Double wire hose clamp Ø 8÷12/9 mm

Electrolux 046946 048224 0H2566 0KB296
0T4790

438480



Hose clamp Ø 12÷22/9 mm - INOX

Electrolux 007019 046797 048126 049888
065121 0835823600 0C5567 0G2046
0KF382 0KX145

324768



Hose clamp Ø 23÷35/9 mm - INOX

Electrolux 0K0197 0K0464 0K8979 0KB299

441699



Hose clamp Ø 25÷40/9 mm - INOX

Electrolux 047578 049446 049772 070318
0K0198 0K8980 0KB300 0KG600
0L2280 0L2728

438464



Hose clamp Ø 32÷50/9 mm - INOX

Electrolux 046566 046878 060407 066056
0E2686 0KB302 0KX143 0L2649

518655



Hose clamp Ø 40÷60/9 mm - INOX

Electrolux 0E3461 0L0193

Small Mechanical Parts

438463



Hose clamp Ø 50÷70/12 mm - INOX

Electrolux 046855 065537 072582 072583
 0K8983 0L2463 0W02A7 0W02A8
 0W0ZT8 0W0ZU4 0W1CEX 0W1GA7

329931



Hose clamp Ø 70÷90/12 mm - INOX

Electrolux 046909 0E0138 0K0200 0KB304
 0K1583 0L0914

441709



Hose clamp Ø 60÷80/12 mm - INOX

Electrolux 046478 046853 065047 0E0992
 0K0199 0K8985 0K8986 0KZ022
 0W1KBZ 0W3295

459506



Hose clamp Ø 200÷220/12 mm

Electrolux 0L2551 0TH122

441606



Hose clamp Ø 210÷230/12 mm

Electrolux 048222 048436 0E2276 0K7106

419644



Grub screw M5x12

Electrolux 0E5301 728836609

582261



Bush for brand

Electrolux 075599

507366



Clip for gas tension spring
 shaft Ø 8x19 mm

Electrolux 0L2614

440618



Cross; suction protection
 dim. 100x100x31 mm

Electrolux 0E5476 0L0382

418781



Plug

Electrolux 0K9038 0KG594

Small Mechanical Parts

436273



Nut

Electrolux 0K8683 0K8943 0W1777

415769



Bolt M6

Htot=47 mm, CH16

Electrolux 075638

431233



Shaft

Electrolux 0KK042

441786



Bolt

Electrolux 049672

507659



Stopping; right

Electrolux 0L0594

581856



Plastic washer Ø 26,5x32x1 mm

Electrolux 0L2602

507658



Stopping; left

Electrolux 0L0595

438481



Flat washer Ø 5,2x10x1 mm (10 Pcs)
UNI 6592

Electrolux 048144 068024

519258



Clamp

Electrolux 0E5566 0KX014

612770



Flat washer Ø 5,5x10x1 mm - INOX

Electrolux 0E1119 0K8946 0Q0012

Small Mechanical Parts

435493



Set of rings 6,4x12,5 - 50 pz

Electrolux 027022 067332 0H2005 0L1670

431506



Pin Ø 4x12 mm

Electrolux 0KR626

432605



Flat washer M6 Ø 6,4x11,6x1,6 mm INOX

Electrolux 0K8947 0U2043 0W1TR8 734115309

331930



Pin Ø 5x20 mm (10 pcs)

Electrolux 0D0396 0U0435

319730



Flat washer Ø 8,4x17 mm

Electrolux 0C6789 0C6790 0E0124 0HN200
0K8948 0W1S2E 0W1S6V 74022053

418446



Screw

Electrolux 0K7606 0K8744

323377



Flat washer Ø 10,8x20 mm

Electrolux 0E1859 0K8950 0W0ZWX 0W10G7
0W1D96 0W1JNL

418754



Flat washer Ø 21.3x36.5x3 mm

Electrolux 049435 0E0203 0E2292 0H2538
0K8952 0KG602 734119209

Springs

321726**Gas spring Ø 19x209 mm L=385 mm**

Electrolux 0L2607

431399**Roller Ø 7/11x14/20x16 mm**

Electrolux 0KR027

586220**Support L=285 mm**

Electrolux 0L0400

Doors

524378**Door 750x475x40 mm**ZPPWES / APPWES / EPPWES / NPPWES /
ZPPWEH / APPWEH / EPPWEH / NPPWEH /
ZPPWSSG / ZPPWEL / APPWEL / EPPWEL /
NPPWEL / ZPPWLSG

Electrolux 049724 0L2650

524428**Door**

PW2M / WT850M / PW200M / LV200M

Electrolux 049721

438246**Door 752x475 mm**PW1M / PW1MH / PW2M / WT830M / WT830M /
WT850M / PW100M / PW100MH / PW200M

Electrolux 049719

524379**Door 1430x410x55 mm**

Electrolux 049723 0L2603

Doors

441749

**Door lever**

PW100, PW1-2M, WT830-850

Electrolux 049683

411272

**Door lever**

320x30x5 mm

Electrolux 049731

441716

**Door lever Ø 12x600 mm**

pin Ø 10 mm

Electrolux 049730

318836

**Door lever L=510 mm**

Electrolux 0L2618

Rollers

412077

**Roller Ø 32x33 mm**

Electrolux 046841

441746

**Roller PW Ø 10x40x18 mm**

Electrolux 049692

Thermostatic steam trap

425794



**Thermostatic steam trap 90° Ø3/4" MF
(with connection) brass**
PMA 16 bar - TMO 250°C

Electrolux 0E0153 0K6189 0KG499

Shaft sealing

610895



**Shaft sealing Ø 24x11x15 mm /
counter-seal Ø26x14x8 mm**

Electrolux 048188 0L0340 0L1437

610885



**Shaft sealing Ø 24x12x15 mm / contro
tenuta Ø 26x14x5,5 mm**

Electrolux 0L1367 0L1936

342632



**Shaft sealing Ø 39x16x16 mm /
counter-seal Ø 42x21x8 mm**
for pump FIR 2275

Electrolux 049249 049764 0G1664 0K7896

428145



**Shaft sealing Ø 35x12x20 mm /
counter-seal Ø 25x13x8 mm**

Electrolux 0E2721 0E2974 0K7741 0K8340

Thermometers

416426



Thermometer 0÷120°C 48x48 mm

mod. 915; coated capillary L=2900 mm; bulb Ø 6x36 mm; for boiler and dishwasher tanks

Electrolux 048525 0E5545 0K7789 0KB617

435099



Thermometer 0÷120°C 58x25 mm

coated capillary L=3000 mm; bulb Ø 6x24 mm

Electrolux 048544 0E5478

Membranes

323090



Adhesive membrane 120x220 mm

Electrolux 0L1672

441645



**Adhesive membrane 220x120 mm
HT 1200**

Electrolux 049609

317685



Adhesive membrane 120x220 mm

Electrolux 0L1676

518675



Adhesive membrane 220x120 mm

Electrolux 0L0161

524477



Adhesive membrane 305x155 mm

Electrolux 049656

Printed Circuit Boards

300144



Motherboard DIWAP AZ60

LS5/WT4 3 phase, 180/254V 50/60Hz

Electrolux	049622	049653	049654	049750
	049752	049753	049845	049854
	0KE951	0KE955	0L0012	0L0045
	0L0541	0L0705	0L1239	0L1412
	0L1972	0L2580	0L2583	

613539



Interface board

dim. 154x90 mm; WT65, PW1-2 / WT830-850, LS14EA

Electrolux	049623	049754	049998	0KE956
	0L0549	0L0708	0L0709	0L1237
	0L1566	0L1568	0L1627	0L1973
	0L3876			

582078



Electric cable

Electrolux	0L2962
-------------------	--------

Probes

344763



Temperature probe NTC

bulb Ø 10x44 mm; rast5 with faston 6,3x0,8 mm

Electrolux	049643	049666	0KR811
-------------------	--------	--------	--------

438988



Pipe fitting for bulb

Electrolux	0E5547	0K8442
-------------------	--------	--------

419486



Clip

Electrolux	0K6166	0KL600
-------------------	--------	--------

436202



Support 70x37x9 mm

Electrolux	0L0366
-------------------	--------

Probes

440744



Support for temperature probe 50x70 mm
hole Ø 7 mm

Electrolux 049580

Adhesive Gasket

435261



Adhesive EPDM gasket 8x3 mm (sold by meter)

Electrolux 046583 0L0689


410037



Adhesive gasket 15x3x2000 mm

Electrolux 046256

441075

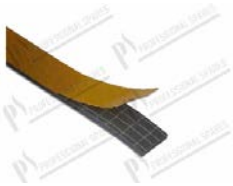

Adhesive EPDM gasket 20x4 mm (sold by meter)

Electrolux 0E2262 0E5225 0G5004 0K8669
0K9155

Gaskets for dishwashers

518930



Gasket

Electrolux 0E6025

441028



Gasket L=700 mm
profil U

Electrolux 047095 047513 047571 0E5559
0K8446 0W1306

Gaskets for dishwashers

416064



Hood gasket 720x1400 mm

Electrolux 0E5777 0KG214 482564201

412503



Gasket L=4200 mm
FLEXI/GASTRO/COMBI/MAXI

Electrolux 0E3432 0E3516 0KB048 0KJ835

431244



Door gasket
dim. 14,4x14,4x900 mm

Electrolux 0KJ813

431512



Left door gasket
dim. 14,4x14,4x1230 mm

Electrolux 0KR763

431530



Gasket
dim. 25x340 mm, H=3,3 mm

Electrolux 0KJ815

Flat gaskets

329114



Flat gasket Ø 10x16x1,5 mm - Fiber

Electrolux 075646 0E5524 0KK028 552211000

349469



Flat gasket Ø 48x56x2 mm - Fiber

Electrolux 066088

336124



Flat gasket Ø 11,5x19x2 mm

Electrolux 0K6103 0K6660 0K8701 0W1778

322586



Flat gasket Ø 30x43 mm

Electrolux 0E0136 0K6952 0KE329

349462



Flat gasket Ø 11,5x24,5x2 mm - Fiber

Electrolux 067935

414967



Flat gasket Ø 16x24,5x2 mm - EPDM

Electrolux 046925 049201

440913



Flat gasket Ø 21,5x30x2 mm - Fiber

Electrolux 005921 0E5122 0G4147 0K6656
0KA777 0L1487 0L2402 552211003

317953



Flat gasket Ø 15,2x24,2x2,8 mm

Electrolux 0L1560 0L2236

344379



Flat gasket Ø 34x44x2 mm - Fiber

Electrolux 0E2240 0H2578 0K6137 0K8703

431555



Lip gasket Ø 62x72x8 mm

Electrolux 0KJ840

O-rings



O-ring 1,78x

435323	6,07 mm NBR	067898
531952	8,73 mm NBR	0Q0002
317701	9,25 mm SILICONE	0L2303
337070	11,11 mm EPDM	0U1041
534283	11,11 mm NBR	0E2836
435313	12,42 mm NBR	0Q0014
438361	14,00 mm NBR	047473
337098	15,60 mm EPDM	070347
415979	17,17 mm NBR	0K6222
438348	20,35 mm NBR	0L2166
416214	31,47 mm NBR	046861



O-ring 2,40x

441068	5,30 mm NBR	0E5034
431553	9,30 mm	0KR015
431451	15,30 mm EPDM	0KK043
432996	16,30 mm NBR	0K9001
438301	17,30 mm NBR	0E5118

Detergents

411085



Spray cleaner 500 ml

Electrolux OS0060

586775



Detergent C13 - 1 canister 5 lt

Product subject to some limitations of transport (ADR)

Electrolux OS2093

585498



Detergent powder C-23 (100 tabs)

Electrolux OS2392

586776



Rinse C12 - 1 canister 5 lt

Product subject to some limitations of transport (ADR)

Electrolux OS2094

586774



Detergent C11 - 1 canister 5 lt

Product subject to some limitations of transport (ADR)

Electrolux OS2092

586777



Rinse C14 PLUS - 1 canister 5 lt

Product subject to some limitations of transport (ADR)

Electrolux OS2095

Detergents

589392



Liquid delimer; C30 - 2 x canister 5 lt
to eliminate residual calcareous; Product
subject to some limitations of transport (ADR)

Electrolux 0S2362

Dishwashing Baskets

441805



**Basket 395x395xh200 mm - INOX for
glasses**

Electrolux 049365 867054

337352



Round basket Ø 350xh135 mm

Electrolux 0HA031

441932



**Basket 395x395xh100 mm - INOX for
glasses**
plastic coated steel wire

Electrolux 049069 867053

524661



**Round basket kit with square frame
394x394 mm**
basket Ø 400xh140 mm

Electrolux 049269

441733



**Basket 395x395xh200 mm - sloped
bottom for 16 glasses**

Electrolux 049367 867056

524348



**Basket with saucers container
395x395x105 mm**
dim. 110x110x123 mm

Electrolux 049366 867055

524467



**Basket 715x690x120 mm - INOX for
utensil washer**

Electrolux 049664

412161



**Basket 500x500xh120 mm - INOX for
cutlery**
plastic coated steel wire

Electrolux 0S0058 983033

Dishwashing Baskets

441930

Insert for 14 saucers L=340xh90 mm


Electrolux 049071 867060

438540

Basket 500x500xh105 mm - Yellow, for 18 dinner plates

plates Ø max 240 mm; check item code.610925

Electrolux 048795 068702 867002

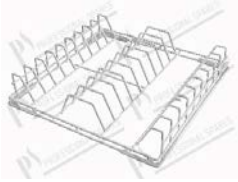440706

Basket 500x500xh100 mm - INOX 18 dishes
plastic coated steel wire

Electrolux OS0057

441829

Basket 500x500xh155 mm - with inclined bottom for 25 glasses

H=100 mm, Ø max 80 mm; made of: 438278+440488+524648

Electrolux 048969 069944

610905

Basket 350x350xh150 mm - plastic, for glasses

Electrolux 0HA029 860138

441825

Basket 500x500xh205 mm - with inclined bottom for 36 glasses

H=150 mm, Ø max 70 mm; made of: 38278+440488(2pz)+524644+524643

Electrolux 048973 069948

610907

Basket 400x400xh150mm - plastic, for glasses

Electrolux OS1130 0U1033 860139

441823

Basket 500x500xh255 mm - with sloped bottom for 25 glasses


H=200 mm, Ø max 80 mm; made of: 438278+440488(3pz)+524648+524645

Electrolux 048975 069946

438417

Green 500x500xh105 mm - basket for 12 soup plates or cups
plates Ø max 240 mm; see item cod.610925

Electrolux 048891 0TH200

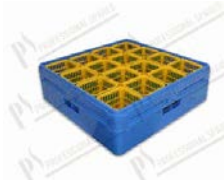441842

Basket 500x500x155 mm - Blue with 16 cutlery containers
container Ø 110x145 mm

Electrolux 048965 069951

Dishwashing Baskets


441850



Basket 500x500xh105 mm - Brown, cutlery basket
max capacity 100 pieces; check item cod.610909

Electrolux 048797 068467

524617

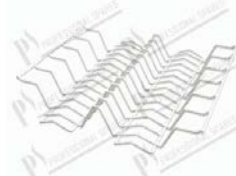

Insert 460x470x75 mm

Electrolux 048947

337095



Container cutlery 55x130x100 mm
2 compart

Electrolux OHA030

441844



Basket 500x500x150 mm - red for 5 trays
Stainless steel insert 5 sectors

Electrolux 048962

523991



Basket 500x500xh105 mm - grey 18 flat plates, 12 soup plates
plates max Ø 240 mm; 9 dishes 405x370 mm; check item code.610925

Electrolux 068692

439530



Basket 540x490x110 mm for 6 trays - red

Electrolux 068701

439807



Basket 500x500xh105 mm - plastic, for 8 trays
dim. 500x500 mm; check item cod.610910

Electrolux 048890 0L1963

438418



Basket 500x500xh105 mm - blue for 16 soup or dinner plates
plates max Ø 240 mm; check item code.610925

Electrolux 048960

Feet

581883

Adjustable foot INOX Ø 1"3/4 - H=140÷220 mm
flange 74x74 mm

Electrolux 0L3203

440941

Adjustable foot
flange 130x100 mm - hole Ø 9mm

Electrolux 0E5009 0KL882 482255200

518653

Adjustable foot AISI 66x66 mm/Ø 57 mm - H=155÷230 mm
flange 100x130 mm

Electrolux 0L0194

438485

Adjustable foot AISI 304 Ø 2" - H=145÷220 mm
flange 74x74 mm

Electrolux 048579 0F0201 0HB147

349538

Foot inox Ø 2" - H=125 mm

Electrolux 053792 056927 080942

RACK TYPE

**ELECTRICAL
PARTS**

**WATER
PARTS**

**MECHANICAL
PARTS**

**ELECTRONIC
PARTS**

GASKETS

CONSUMABLES

ACCESSORIES

Commutators, Energy Regulators

432317



Commutator 0-1 positions
16A 250V; D-shaft Ø 6x4,6 mm

Electrolux 048271 0KZH02

435105



Commutators 0-2 positions
16A 250V; D-shaft Ø 6x4,6 mm

Electrolux 0E3017 0E5131 0K8165 482237200

319432



Commutator 0-3 positions
16A 250V; D-shaft Ø 6x4,6 mm

Electrolux 0E5132 0K8253 482407500

434971



Commutators 0-5 position
16A 250V; D-shaft Ø 6x4,6 mm

Electrolux 0E5222 0K8266 482412400

Contactors and Relays

435316



Green auxiliary contact 1NO HN10 10A 690V
dim. 10x17x43,5 mm

Electrolux 046995 0C4704 0E0418 0H7043
0K9119 0KA929 0KE890 H58194500

435315



Red auxiliary contact 1NC HN01 10A 690V
dim. 10x17x43,5 mm

Electrolux 047046 059086 0E0888 0H7044
0KC515

Contactors and Relays

435202



Green auxiliary contact 1NO
dim. 10,5x42x31,5 mm

Electrolux 048497 0E5657 0K5986

436196



Contactor K3-14ND10 230V
5,5kW 3P; 220-240V 50Hz 240V 60Hz - 3
cont. NO + 1 aux NO - dim. 65,5x45x60

Electrolux 090050 0L0354 0L0679

426339



Contactor K3-07ND40 230V
220-240/50Hz 240V/60Hz - 3 cont. NO + 1
aux NO

Electrolux 0H2643 0K9134 477904122 767516200

435384



Contactor K3-18ND10 180V
7,5kW 3P; 180-210V 50Hz 200-240V 60Hz - 3
cont. NO + 1 aux NO; dim. 65x45x60 mm

Electrolux 004012 0E5568 0K6151 0K9123

435166



Contactor K3-10ND10 230V
4kW 3P; 220-240V 50Hz 240V 60Hz - 3 cont.
NO + 1 aux NO - dim. 65,5x45x60 mm

Electrolux 003027 045981 045982 048519
053116 054544 057896 075796
088477 0KL557

435427



Contactor K3-18ND10 230V
7,5kW 3P; 220-240V 50/60Hz - 3 cont. NO + 1
aux NO - dim. 65,5x45x60 mm

Electrolux 002168 003598 006437 006438
058805 072881 072882 0K9125
0KC417 0L2057 0W0632 0W5271

435109



Contactor K3-10ND01 230V
4KW 3P; 220-240V 50Hz 240V 60Hz - 3 cont.
NO + 1 aux NC - dim. 65,5x45x60 mm

Electrolux 045920 047048 048403 048825
069130 072319 0E3757 0L0285

426300



Contactor K3-22ND10 24V
11kW 3P; 24V 50/60Hz - 3 cont. NO + 1 aux
NO - dim. 65x45x60 mm

Electrolux 006157 056600 0E0177 0K3969
0K9124 767511112

434968



Contactor K3-14ND10 24V
5,5kW 3P; 24V 50Hz - 3 cont. NO + 1 aux NO -
dim. 65,5x45x60 mm

Electrolux 046994 054259 058004 075723
0E1291 0K3968 0K8545 0K9127
0L0360 0W1T99

319482



Contactor K3-22ND10 230V
11kW 3P; 220-240V 50/60Hz - 3 cont. NO + 1
aux NO; 2 x cont. 1NC HN01; - 65,5x45x60
mm

Electrolux 052329 054928 057950 059943
0K9132 0KC513 0W0690 767511412

Contactors and Relays

436199

**Contactor K3-24A00 24V**

11kW 3P; 24V 50/60Hz - 3 cont. NO - dim.
87,5x45x74 mm

Electrolux 0KZN75 0L0361

440907



**Thermal overload relay 1,8÷2,7A -
contacts 1NO + 1NC**
(with manual reset)

Electrolux 0E5221 0E5628 0K9138

518594

**Contactor K3-24A00 230V**

11kW 3P; 220-240V 50/60Hz - 3 cont. NO -
dim. 87,5x45x74 mm

Electrolux 0L0355 0L0678

426215



**Thermal overload relay 1,8÷2,7A - contact
1NC**
(automatic reset)

Electrolux 047133 075667

321420

**Contactor K3-24A00 230V**

11kW 3P; 220-240V 50Hz 240V 60Hz - 3 cont.
NO + 1 aux NO - dim. 87,5x45x74 mm

Electrolux 0C9763 0K9129 0KE717

438776



**Thermal overload relay 2,7÷4,0A -
contacts 1NO + 1NC**
(with manual reset)

Electrolux 0E0175 0E5878 0K9139 0K9144

325269



**Thermal overload relay 0,6÷0,9A -
contacts 1NO + 1NC**
with manual reset

Electrolux 0E5124 0E5857 0K9135 0K9142

438720



**Thermal overload relay 4,0÷6,0A -
contacts 1NO + 1NC**
(with manual reset)

Electrolux 0E5220 0K9140 0KE721

435193



**Thermal overload relay 1,2÷1,8A -
contacts 1NO + 1NC**
(with manual reset)

Electrolux 0E5450 0E5673 0K9137 0KE155

426340



**Thermal overload relay 0,8÷1,2A -
contacts 1NO + 1NC**
(manual reset)

Electrolux 0E0176 0E5672 0K9136 0K9143

Contactors and Relays

426263



Thermal overload relay 6,0÷9,0A - contacts 1NO + 1NC (automatic reset)

Electrolux 047134

613895



Relay 2 contacts 24V 50/60Hz 10A 250V

Electrolux 0L1009

329175



Thermal overload relay 6,0÷9,0A - contacts 1NO + 1NC (with manual reset)

Electrolux 0E0178 0K9141 0L3009

434973



Relay 3 contacts 24V (AC) 50/60Hz 16A 250V
Faston 6.3x0.8 mm - socket 439004 -coil 24V AC

Electrolux 0E5170 0K8710 552212201

438330



Thermal overload relay 8,0÷11A - contacts 1NO + 1NC (with manual reset)

Electrolux 0E5449 0KG570

440636



Socket relay 10A 250V 95.65 for 438774

Electrolux 0E5173

434972



Relay 1 contacts 24V 50/60Hz 16A 250V

Electrolux 0E5172 0K8712

351924



Socket relay 95.85.3 2CO; 250V 10A

Electrolux 0K8711 0KZF01

438774



Relay 2 contacts 230V 50/60Hz 8A 250V

Electrolux 0E5849 0K4551 0K4947 0K6309

439004



Socket relay 94 for 434973

Electrolux 0E5171

Contactors and Relays

319815



Socket relay 94
for 613895

Electrolux 0L0415

518939



Thermal-magnetical switch 1P 10A
230/400V

Electrolux 0E6015

419649



Socket relay 10A 300V
dim. 80x38 mm

Electrolux 0K8709

613909



Thermal-magnetical switch 1P 20A
230/400V

Electrolux 0L1021

435127



Time relay 1NO H3DK-M1
0,1s-1200h - 24-240Vac/dc 50/60Hz

Electrolux 0E0019 0E5342 0E5669 0K7996
0K8727 0KA728 0KA729

613907



Thermal-magnetical switch 1P 4A
230/400V

Electrolux 0L1019

340712



Thermal-magnetical switch 1P 3A
230/400V

Electrolux 0E5564 0KI044

613908



Thermal-magnetical switch 2P 10A 400V

Electrolux 0L1020

340706



Thermal-magnetical switch 1P 10A
230/400V

Electrolux 0E5451

337707



Thermal-magnetical switch 3P 50A
ABB S203.50C; dim. 70x53x88 mm

Electrolux 0E5900

Contactors and Relays

416603

Thermal-magnetical switch 3P 8,5A
240V 50/60Hz
 Icu 20kA

Electrolux 0E5452 0KT674

418316

Automatic circuit breaker C60N C16
 400Vac 50/60Hz; 3NO; dim. 65x54x82 mm

Electrolux 0E0777 0E2269 0K8729 0KG573

416665

Thermal-magnetical switch 3P 25A

Electrolux 0E5139 0E5453 0K8731 0KC505

419563

Automatic circuit breaker 3P 20A 400V
 dim. 75x53x81 mm

Electrolux 0E0179 0E2271 0H9589 0K8730

Fuses, Capacitors, RFI Filters

342416

Capacitor for power factor correction 2
μF 450V 50/60Hz
 Ø 30x50 mm; with screw M8

Electrolux 0E0174 0K9106

418004

Capacitor for power factor correction 5
μF 400V 50/60Hz
 Ø 30x51 mm; with screw M8

Electrolux 037268 078024 0K9108 0L2035

Fuses, Capacitors, RFI Filters

438276



RIF filter with faston
2x0.010 uF (Y2) + MoHm 250V

Electrolux 046226 046227 046941 0K8386

611288



Fuse Ø 5x20 mm 1.6A 250V fast

Electrolux 045432 099770 0KU598

435381



RFI filter 3 phase 250V 50/60Hz Ø 38x50 mm
3x(0.27 µF) + 3x(1MΩ) + 3x(2x0.10nF);
faston 6,3x0,8 mm

Electrolux 049303 0KE945

317937



Fuse Ø 5x20 mm 10A 250V slow

Electrolux 0L1295 0PRM39

441549



RFI filter 1 phase 250V 50/60Hz 7A/40°C Ø 38x53mm
(X2) 0.47 uF + 0.68 MoHm (Y2)2x0.01 uF+2x1.5 mH

Electrolux 049901

416090



Fuse Ø 10x38 mm 25A 500V fast

Electrolux 047131

317929



RFI filter 0.22µf 47ohm 250V
cable L=125 mm

Electrolux 0L1771

523454



Fuse holder Ø 10x38 mm
32A 690V; DIN bar; dim. 80x18x63 mm

Electrolux 075737

342145



Fuse Ø 5x20 mm 0,315A fast

Electrolux 002170 005032 0C4996 0C5584
0K3350 0K4542 0K4994

417948



Fuse holder
for fuse 5x20 mm

Electrolux 0E1703 0K8695 552203701

Fuses, Capacitors, RFI Filters

433800



Fuse holder Ø 16 mm 16A 250V [Kit]
L=49 mm - faston 6,3x0,8 mm - for fuse 5x20 mm

Electrolux 0C2228 0CB127 0CB128 0F0031
0K8694 0KZV38 0T3933

Switches, Push Buttons, Selectors

433999



Red push button Ø 22 mm
1 contact NC 10(6)A 400V

Electrolux 037292 0HB246 0K9114 0KA806
0KF982 0U2084 0U2085

438441



Emergency push button

Electrolux 0E2208

418066



White push button Ø 22 mm
1 contact NO 10(6)A 400V

Electrolux 0E0005 0HB250 0K6145 0K9111

430022



START/STOP switch 400V 50/60Hz 15A

Electrolux 0E3588

418061



Emergency push button dima Ø 40 mm
manual reset, 2 contacts NC; dim. 67x67x54 mm; Htot. 95 mm

Electrolux 0E5305 0K8450 0K8638 482671100

339438



Switch-disconnector 4P 8kW 50Hz - 125A [Kit]
for cables 10÷70 mmq

Electrolux 0E5347 0E5348 0E5813 0E5922
0K8351 0K8609 0K8610 0L0362
0L2066

418201



Emergency push button dima Ø 25 mm - mushroom Ø 40 mm
automatic reset, 1 contact NC

Electrolux 0K6639 0KI045 428076000 482358000

438777



Switch-disconnector 3P 40A

Electrolux 0E5346 0E5931 0K8608 0KE532

Switches, Push Buttons, Selectors

613525



Knob ON-OFF

mounting diameter Ø 22 mm - dim 65x65 mm

Electrolux 0L0698 0L2067

582521



Contact LUFC 00S204

dim. 85x45x20 mm

Electrolux 0L1441

Lamps and Lamp Holders

417954



Lamp 2W 24V BA9S

Electrolux 0E0016 0K9110 763910300

340400



Orange pilot lamp Ø 13 mm 24V - L=60 mm
fluorescent lamp Ø 9 mm, with nut and silicon O-ring

Electrolux 0E5195 0K8273 0K8277 482422200

340398



White pilot lamp Ø 13 mm 24V - L=60 mm
fluorescent lamp Ø 9 mm, with nut and silicon O-ring

Electrolux 0E5134 0K8276 482422100

435511



Green pilot lamp Ø 13 mm - 240V - L=60 mm
with nut and silicon O-ring

Electrolux 003531 004393 005010 005445
058658 0C3171 0C3487 0H6619
0K3462 0K3475 0KF056 0L3030

417968



White pilot lamp Ø 13 mm - 240V - L=60 mm
lamp Ø 9 mm, with lock washer and silicon O-ring

Electrolux 0H2633 0K9096 763100102

414094



Green pilot lamp Ø 22 mm, lens Ø 29 mm
complete with lamp

Electrolux 052983 054435 054483 0E0110
736110600

Lamps and Lamp Holders

355988



Red pilot lamp Ø 22 mm, lens Ø 29 mm
complete with lamp

Electrolux 0E0109 0K9104 736110700

338639



Orange lens Ø 13 mm L=22 mm

Electrolux 031611 075095 0C2182 0HB339

340417



Fluorescent pilot lamp Ø 9 mm 24V
L=55 mm - faston 6,3x0,8 mm

Electrolux 075110 0K6374

432945



Neon lamp 8W Ø 15.5x286 mm

Electrolux 0E5236 0K8254

340418



Red lens Ø 13 mm L=22 mm

Electrolux 075097 0C2586

340428



White lens Ø 13 mm L=22 mm

Electrolux 046289

340407



Green lens Ø 13 mm L=22 mm

Electrolux 075096 0C2587

Microswitches

435424



Snap action microswitch with lever 5x60 mm
16(6)A 250V; T85°C; terminals 6,3x0,8 mm

Electrolux 053671 054550 057580 058405
0E0209 0G6357 0K7559 478061400

344580



Snap action microswitch with lever
16(4) 250V, faston 6,4x0,8 mm; lever L=55 mm

Electrolux 046322 075935

435132



Limit switch with wheel 240V 10A
1NO/1NC

Electrolux 046884 053241 054423 054424

419818



Limit switch 240V 3A
dim. 75x30x30 mm; IP65

Electrolux 0E3580

432386



Magnet Ø 10x27 mm

Electrolux 0E0116 0K7361 0KE395

435373



Magnetic microswitch B091 Ø 9x30 mm
NC contact 175V 10W; cable L=1400 mm

Electrolux 049970 0E0006 0E2321 476013602

432794



Magnetic microswitch Ø 10x27mm

Electrolux 0H2110 0K7143

432815



Magnetic microswitch Ø 10x28 mm
cable L=1500 mm

Electrolux 0K7144 0K8504 476013602_

434875



Magnetic microswitch Ø 10x27 mm
cable L=1600 mm

Electrolux 0E2185 0K8715

435219



Magnetic microswitch
NO contact 250V 50VA 0,04A - rast 5

Electrolux 037260 049621 0KB775

Microswitches

435376**Magnetic microswitch E591-1U**

NO contact 230V 3A 60W; cable L=1700 mm;
dim. 36x26,2x13 mm

Electrolux 049966 0E0003 0E5185 0K6346
0K8714

435374**Magnetic microswitch E591 PU**

NC contact 230V 3A 60W; cable L=2000 mm;
dim. 36x26,2x13 mm

Electrolux 049969 0E5854

435375**Magnetic microswitch E590 1U**

NO contact 230V 3A 60W; cable L=5200 mm;
dim. 36x26,2x13 mm

Electrolux 049967 0E5369 0K7172

311752**Magnetic microswitch with support**

Electrolux 0L1866 0L1871

419340**Magnetic microswitch 12÷24Vdc 100mA**

dim. 26x40x12 mm; cable L=2000 mm

Electrolux 0KU573 428068900

441145**Magnetic microswitch 23x16x18 mm**

mod. M375 AZ

Electrolux 088361 0E0102 0K6712 0KE287

415414**Bush M14**

Electrolux 075632

336769**Support 45x55x11 mm**

Electrolux 0E2330 0K8502

438882**Connection**

Electrolux 0E5683 0K8212

438841**Support 35x25x14 mm**

holes Ø 7 mm, Ø 4,3 mm

Electrolux 049968

Microswitches

318149



Bracket
dim. 56x39x29 mm

Electrolux OL1731

519401



Actuator for microswitch

Electrolux OE5484

336793



Support 35x23x14 mm
Ø 6,6 mm, Ø 44 mm

Electrolux OE2332 OE5483 OK8503

519273



Actuator for microswitch left

Electrolux OE5519

419361



Microswitch protection

Electrolux OE3114 OH2290 OK7560 OKE427

519272



Actuator for microswitch right

Electrolux OE5520

301645



Lever START left (for right machine)
dim. 65x210x145 mm

Electrolux OL1165

519275



Actuator for microswitch L=480 mm

Electrolux OE5516

317984



Lever START right (for left machine)
dim. 65x210x145 mm

Electrolux OL1164

441031



Actuator for microswitch

Electrolux OE5835

Microswitches

524108



Actuator for microswitch right
275x120x44mm

Electrolux 049857

412203



Protection

Electrolux 075625

524104



Actuator for microswitch left
275x120x44mm

Electrolux 049858

301790



Fixing angle

Electrolux 0L1003 0L1310 0L3164

412109



Actuator for microswitch RT

Electrolux 046849 075626 0KE883

342954



Support
L=97 mm; hole Ø 7 mm

Electrolux 046869

519283



Pin Ø 5x58 mm
M5

Electrolux 0E5485

343200



Lever
hole Ø 6 mm

Electrolux 046871

337615



Pin

Electrolux 075640

Terminal Boards

439516



4-pole steatite terminal board
for cable max 10 sq.mm; capacity 76A/450V;
dim. 40x30h23 mm

Electrolux 054042

438970



Terminal board 5 poles cable sq.mm 16
DIN rail

Electrolux 002691 0E5850 0F0112 0KT397

519256



Terminal

Electrolux 0E5567

583200



Terminal block

Electrolux 0L2019

439982



Terminal board 6-poles cable sq.mm 6 with bypass installed
capacity 450V 40A; Tmin-max -5/+150°C;
faston 6,3x0,8 mm

Electrolux 005420 032669 046347 048574
0E1603 0E5176 0K3511 0KE434
0KG206 0U3376

319827



Connector 4 way

Electrolux 0L2386

336547



Terminal board 7-poles 96,5x31 mm
capacity 400V; Tmax85°C; faston 6,3x0,8 mm

Electrolux 078026 0E5174 0K6833 0KG207

319836



Connector 8 way

Electrolux 0L2387

433863



Terminal board 8-poles
L=68,3 mm

Electrolux 045794

317904



Connector 8P

Electrolux 0L1227

Terminal Boards

319816



Terminal board 3 contact 63A

Electrolux OL1013

Motors

301760



Motor 3 phase 240W 110/190V 50Hz from s/n 640..
shaft Ø 14x30 mm; flange Ø 160 mm

Electrolux OL1280

438773



Gearmotor 3 phase 90W 240/415V 50Hz 870rpm
280/480V 100W 60Hz 1040rpm -
dim.340x200x160 mm

Electrolux OE5833

613691



Gearmotor 3 phase 240W 110/190V 50Hz up to s/n 639

319771



Gearbox L=49 from s/n 640..

434970



Gearmotor 3 phase 100/70W 380/420V 50/60Hz
cable L=1000 mm

Electrolux OE5105 OE5340 OE5351 OH2525
OKB646 482251801 482599001 482718001

441033



Motor 3 phase 1100W 230/400V 50Hz
1250W 265/460V 60Hz

Electrolux OE5616 OE5798 OKZ100

519327



Gearmotor 3 phase 100/70W 220-240 50/60Hz
0,95A 665rpm; 1,12A 445rpm; shaft Ø 20x40 mm with wedge 6x30 mm; cables L=1100 faston F6,3 mm

Electrolux OE5353

440953



Fan blade Ø 425x110 mm - 17 blades

431018



Gearmotor 3 phase 120W 230/400V 0,81/0,47A 50Hz
140W 265/460V 080/0,46A 60Hz

Electrolux OH2531 OK7226 OK8633

Motors

418426



Gearmotor 3 phase 180W 240/415V 50Hz 840rpm
280/480V 220W 60Hz - hole for shaft Ø 18 mm, wedge 6 mm

Electrolux 0KU164

418242



Gearmotor 3 phase 150W 400V 50Hz 670rpm 1,2A
400V 50Hz 0.4hp 0.3kW 1380rpm 1.1A

Electrolux 0E3116 0K8564 0KB649 490145900

418610



Gearmotor 3 phase 150/260W 220-240V 50/60Hz
620/1330rpm

Electrolux 0E3117 490145902

429798



Gearmotor 3 phase 180W

Electrolux 0E5310 0KG273

431206



Gearmotor 3 phase 180W 230/400V 50Hz 1320rpm
210W 265/460V 60Hz 1630rpm

Electrolux 0KG468 0KI306 0KJ297 482244800

613691



Gearmotor 3 phase 240W 110/190V 50Hz up to s/n 639
L=49

Electrolux 0L0848

301760



Motor 3 phase 240W 110/190V 50Hz from s/n 640..

319771



Gearbox L=49 from s/n 640..

434962



Gearmotor 3 phase 270/160W 380/420V 50/60Hz
cable L=1000 mm - 1410-926rpm

Electrolux 0E5111 0E5336 0E5341 0E5352

418473



Gearmotor 3 phase 550/650W 230-480V 50/60Hz
I=1:49

Electrolux 0E3750

319771



Gearbox L=49 from s/n 640..
FRS50

Electrolux 0L1281

Motors

434974



Motor 1 phase 110W 220-240V 50Hz 1,2A
2610rpm; cable L=4400 mm


Electrolux 0E5951 611619601

441008



Fan blade Ø 200x87 mm - 8 blades

434063



Support fan blade 285x288 mm

322684



Motor 1 phase 120/170W 230V 50/60Hz
shaft Ø 9x38 mm, M5x12mm, Ltot. 50 mm, with
wedge 3x14 mm, cavo L= 190 mm, connection
rast5, cable L=210 mm faston F 6,3x0,8 mm

Electrolux 0L1536

613806



Motor 3 phase 130W 400V 50Hz
acshe Ø 9x19,5 mm

Electrolux 0L0946

518892



Motor 3 phase 240W 230/400V 50/60Hz
AM 71Z AA4, IP55

Electrolux 0E5599 0E5800

440916



Fan blade Ø 305 mm - 16 blades

439006



Wedge 6x6x25 mm - INOX

438898



Spacer Ø 14,2x17,2x10H mm

538226



Washer

342270



Motor cooling fan blade □Ø 108 mm

Electrolux 0K7256

441008



Fan blade Ø 200x87 mm - 8 blades
plastic

Electrolux 0E5952 0L1531

Motors

440916



Fan blade Ø 305 mm - 16 blades
hole for shaft Ø 14 mm

Electrolux 0E5081

317911



Cover for motor impeller; new cu
dim. 95x285x260 mm

Electrolux 0L3569 0L3765

440953



Fan blade Ø 425x110 mm - 17 blades

Electrolux 0E5087 0E5618 0K6944

418403



Motorshelf
dim. 130x44x22 mm

Electrolux 0E5689 0K8289

416215



Retaining ring Ø 64x80x8 mm

Electrolux 046056 046057

318157



Motor support
dim. 148x78x105 mm

Electrolux 0L0849 0L2091 0L2317

519123



Motorshelf
dim. 315x32x134 mm

Electrolux 0E5782 0K8330

441077



Ring Ø 20x32x14 mm

Electrolux 0E5187 0K8225 0KE512

519082



Motorshelf
dim. 175x125x75 mm

Electrolux 0E5705 0K8436

613690



Rod M24xLtot. 145 mm

Electrolux 0L0847

Motors

518687

**Adapter joint**

Ø 25x140 mm - hole Ø 15 mm

Electrolux 0L0150

613797

**Fan blade Ø 180x100 mm - 8 blades**

Electrolux 0L0941

Pumps

317491

**Drain pump 60W 220-240V 50Hz**

inlet Ø 35 mm; outlet Ø 30 mm; faston 6,3 mm

Electrolux 0L2740

339415

**Wash pump 3 phase 1700/1100W 230V 50Hz**

aspirazione Ø 2"; mandata Ø 62 mm; cable L=1080 mm ;2900 rpm

Electrolux 0E5962 0L1233

435081

**Wash pump 1 phase 480W 220/240V 50Hz**

Electrolux 0E5532 0K7997 0KS349

613800

**Wash pump 3 phase 1100W 230/400V 50Hz 3,6/2,1A [Kit]**

inlet Ø 63 mm, outlet Ø 53 mm; cable L=1060 mm with plug

Electrolux 0L0943 0L3873

613802

**Wash pump 3 phase 250/290W 230-240/400-415V 50Hz**

aspirazione Ø 50 mm, mandata Øext. 35 mm, int. 1" F; cable L=1100 mm

Electrolux 0L0944

Pumps

416524



Wash pump 3 phase 2200W 400/230V 50Hz

Electrolux 0E5343 0K8390

342457



Impeller Ø 135 mm

435047



Antivibration Ø 25x20 mm - M8x20 mm

342505



Wash pump 1 phase 745W 220-240V 50-60Hz
inlet Ø 28 mm, outlet Ø 26 mm; 0,8A 2750rpm

Electrolux 0E3007 0K8523 482772100

301675



Wash pump 3 phase 370W 220/415V 1,4/0,8A 50Hz
inlet Ø 45 mm, outlet 40 mm; cable L=800 mm

Electrolux 0L1195

533524



Replacement of Hanning pump PS40R [kit]
inlet Ø 63 mm - outlet Ø 48 mm - 0,55 kW - 220/240V 50Hz - pump FIR 1293

Electrolux 0E5194 0E5206 0E5334 0K8332
0TT170 482509100

428155



Impeller Ø 110 mm

342445



Wash pump 3 phase 550W 220-240/380-415V 50Hz
FIR 1293; inlet Ø 63 mm - outlet Ø 48 mm;
capacity 390 lt/min - 2800 rpm - CL.F

Electrolux 0E6012

362745



Shell for pump

342533



Impeller Ø 110 mm

342464



Gasket for pump FIR H=4x4 mm

342633



Gasket Ø 11,8x26x2 mm in rubber

342630



Drain pump plug M12x21 mm

412573



Shaft sealing Ø 24x11x15,5 mm / counter-seal Ø 26x13x8 mm

342185



Wash pump 740W 240/415V 50Hz

Electrolux 0K7459 0KJ797

Pumps

434966



Replacement of Hanning PS80S Kit pump
pumps FIR 4290 - inlet/outlet Ø 63 mm - 2800rpm - 1500W 3P 220-240/380-400V 50Hz

Electrolux 0E5169 0E5208 0E5335 0K8338

427992



Impeller

428147



Impeller Ø 126 mm

428145



Shaft sealing Ø 35x12x20 mm / counter-seal Ø 25x13x8 mm

318100



Wash pump 3 phase 1500W
220-240V/380-415V 50Hz
inlet Ø 70 mm - outlet Ø 61,5 mm; 2800 rpm

Electrolux 0L1735

342264



Wash pump 3 phase 1500W
220-240/380-400V 50Hz
FIR 4290 - 6,2/3,6A - IP54; inlet/outlet Ø 63 mm; capacity 600 lt/min - 2800 rpm - class F; with cable 900 mm

Electrolux 0L0039

434966



Replacement of Hanning PS80S Kit pump

342615



Shell for pump

342608



Impeller Ø 120 mm

342459



Gasket for pump Øint. 182 mm - H=5x4,5 mm

342632



Shaft sealing Ø 39x16x16 mm / counter-seal Ø 42x21x8 mm

342418



Wash pump 3 phase 1760W 220/380-415V
50Hz
inlet Øext 90 mm, outlet Øext 78 mm

Electrolux 047274 048102

459705



Wash pump 3 phase 2000W 230/400V
6.9/4A 50Hz
inlet Ø 63 mm, outlet Ø 54 mm, cable L=1050 mm - from S/N 3251

Electrolux 0L3037

Pumps

613799



Wash pump 3 phase 2200W 230/400V 6.9/4A 50Hz [Kit]
inlet Ø 63 mm, outlet Ø 54 mm, cable L=1050 mm - with formed hose and flange support - up to S/N 3241

Electrolux 0L0942 0L3036

418653



Wash pump 3 phase 2900W 220-254V 50Hz 8,3A
suction Ø 63 mm; outlet Ø 50 mm - 60 Hz Cos(fi) 0.82 (ste) 380/440V 4.8A

Electrolux 0E2972 0KU282 482778301

342447



Wash pump 3 phase 2700W 220/330V 50Hz
inlet Ø 62 mm, outlet 62 mm; 2800rpm

Electrolux 0E0009 0H2395 0K7893

301714



Wash pump 3 phase 1000W 230/400V 50Hz 3/1,7A SX
inlet Ø 62 mm - outlet Ø 48 mm

Electrolux 0L1234

538731



Replacement of Hanning PKS17 Kit pump
pump 280W 220-240V 1P 60Hz

Electrolux 0E2763 0K8344 0L0586

610904



Impeller Ø 100 mm

315663



Rinse pump 1 phase 230W 230V 50Hz (NEW MODEL)
FIR 5213; inlet/outlet Ø 28 mm; C=6,3 µF - cable 160 mm

Electrolux 0L2597

418090



Wash pump 3 phase 2700W 220-240/380-415V 50Hz
suction Ø 62 mm, outlet Ø 53 mm; 8,7/5A CL.F IP54 Q=700 l/min

Electrolux 0E2971 0K8525 482778300

418004



Capacitor for power factor correction 5 µF 400V 50/60Hz

427992



Impeller

315752



Shell for pump

428147



Impeller Ø 126 mm

610852



O-ring for shell Ø 4,00x80,00 mm EPDM

428145



Shaft sealing Ø 35x12x20 mm / counter-seal Ø 25x13x8 mm

Pumps

614015



Rinse pump 1 phase 280W 220-240V 50Hz
C = 6,3 uF, from SN 608...

Electrolux OL1104

315752



Shell for pump

342265



Rinse pump 1P 280W 230V 50Hz ONLY for
LS5WS /WT4WS-OLD
FIR 4213; inlet/outlet Ø 28 mm; capacity 110
lt/min - 2800 rpm - CL.F; C=6,3 µF - cable 160
mm; for other models see OL1079 - for new
undercounter see OL2597

Electrolux 049310 OL1030

342376



Shell for pump

360121



Impeller Ø 72 mm

412572



Shaft sealing Ø 24x10x14 mm / counter-seal
Ø 26x13x8 mm

435156



Replacement of Hanning CP50 Kit pump
rinse pump FIR 4213 - 280W 230V 50Hz; for
Duo Rinse

Electrolux 0E2746 0K8343 0L0149 482509300

342289



Rinse pump 1 phase 73,5W 220-240V
50Hz 0,8A
inlet Ø 28 mm, outlet Ø 27 mm

Electrolux 0E0013 0H2261 0K7482

613807



Rinse pump 3 phase 300W 400V 50Hz
0,6A - SX
inlet Ø 28 mm; outlet Ø 26,5 mm; 2800rpm;
cable L=210 mm; new RTM/WTM

Electrolux OL0947

317700



Rinse pump 3 phase 280W 400V 0.5A
50hz
inlet Øext 15 mm, outlet Øext 14 mm

Electrolux OL1384

325559



Rinse pump 3 phase 280W 230V 50Hz

Pumps

325559



Rinse pump 3 phase 280W 230V 50Hz
inlet Ø 15 mm; outlet Ø 13,5 mm

Electrolux 0L2124

317700



Rinse pump 3 phase 280W 400V 0.5A 50Hz

325673



Pump support

200002



Hose EPDM Ø 12x19,5 mm (sold by meter)

315752



Shell for pump
inlet Ø 30 mm; outlet Ø 26 mm

Electrolux 0L1885

342297



Pump flange

Electrolux 0H0908 0H2161 0K7255 0KB586

342610



Shell for pump
inlet Ø 63 mm; outlet Ø 53 mm

Electrolux 0H2160 0K7253 0KB584 0KD997

427992



Impeller

Electrolux 0E2916 0E2975 0KE112 0KE530

342466



Impeller Ø 102 mm
für pumpe FIR 0256

Electrolux 048628 0H2249 0H2524 0K7460

428155



Impeller Ø 110 mm

Electrolux 0E2750 0K8337 0KB641

428147



Impeller Ø 126 mm
for pump HANNING PS80S; hole Ø 8 mm

Electrolux 0E2723 0E2973 0K8342 0KN884

342457



Impeller Ø 135 mm
hole M12

Electrolux 049767 0E1305 0K7897 0W1801

Pumps

342506



Impeller Ø 124 mm 50Hz
for shaft Ø 12 mm; thread M8

Electrolux 0H2246 0K7440 0KD998 0KM548

325673



Pump support
dim. 170x120x32 mm

Electrolux 0L1394

342171



Gasket pump

Electrolux 0H2257 0K7472

438880



Pump support

Electrolux 0E5700 0KL885 0L0186

342464



Gasket for pump FIR H=4x4 mm
EPDM

Electrolux 033694 048626 0H2156 0K7248
0KM569

518688



Pump support
dim. 193x153x91 mm - sp. 1,5 mm

Electrolux 0L0144

342633



Gasket Ø 11,8x26x2 mm in rubber

Electrolux 049562 049563 0H2157 0K7249
0W1817

459815



Suction hose Ø 79x90x50 mm

Electrolux 0L0932 0L1550

Pressure Switches

435295



Pressure switch 1 level 60/20-110 mbar
contacts capacity 16A 250V; Tmax 85°C

Electrolux 037302 049305 049881

419806



Pressure switch support 53x35x15 mm

Electrolux 0K8551

343993



Pressure switch 1 level 160/80 mbar
contacts capacity 16A 250V; Tmax 85°C

Electrolux 046653 066113 0L1940

418853



Pressure switch support

Electrolux 0K7137

435069



Pressure switch 2 levels 40/15-55/35 mbar
contacts capacity 16A 250V; Tmax 85°C

Electrolux 0E3731 0E5565 0KU529

435273



Pressure switch 2 level 40/15-55/35 mbar [KIT]
contacts capacity 16A 250V; Tmax 85°C with braket

Electrolux 0E0014 0E2501 0K7150 0K8526
0KE552 0KS002 0KS003 476013807
490143700

322408



Analogic pressure switch 5VDC
dim: 35x60x50 mm; Ø 5,4 mm

Electrolux 0L2845

Heating Elements

415011



Boiler heating element 6000W 230V
L=490 mm; triangular flange ext.Ø 63 mm int.Ø 47,5 mm; with bulb housing - HQN

Electrolux 003409 003410 051632 052621
0K3491 0L1877

414450



Boiler heating element 6000W 230V
L=470 mm; flange Ø 57,5x72 mm; with bulb housing - WTF2W - WTF3W - WTF4W

Electrolux 0E5114 0K8249 0L1834

414383



Boiler heating element 4000W 230V
L=460 mm; flange Ø 75.6 mm - complet gasket and faston

Electrolux 0E5115 0K8250 0L1833

414901



Boiler heating element 12000W 230V
L=462 mm; flange Ø 57,5m ; with bulb housing Ø 7x24 mm - RT10 / RT180 / Z18 / WT90

Electrolux 0E5116 0H2515 0K8251 0L1837

414492



Boiler heating element 12000W 240V
L=450mm; flange Ø est. 72 mm Ø int 47,5 mm

Electrolux 0E5240

414779



Boiler heating element 8000W 230V
L=462 mm; flange Ø 57,5x72 mm; with bulb housing - RT100-140 / RT1800-2500 / D1700-1800 / H511-512

Electrolux 0E5113 0L1835

414505



Boiler heating element 12000W 220V
L=455 mm, flange Ø 72 mm, with bulb housing - D48 - D480

Electrolux 0E5213 0K7530 478040800

414906



Boiler heating element 10000W 230V
L=462 mm; flange Ø 57,5x72 mm; with bulb housing - RT100-140 / RT1800-2500 / D1700-1800 / H511-512

Electrolux 0E5066 0K8247 0KE516 0L1836

415310



Boiler heating element 6000W 240V
L=500; flange Ø 57,5 mm; complet gasket and faston - LS1080

Electrolux 045559 058011 0L1879

414743



Boiler heating element 12000W 254/400V
flange Ø 57,5 mm - RT100-140 / RT1800-2500 / D1700-1800 / H511-512

Electrolux 0KP335 0L1847

Heating Elements

318857**Boiler heating element 14000W 230V**

L=460 mm; flange Ø 57,5; with O-ring e faston, bulb housing Øint 6.5 mm - RT100-140 / RT1800-2500 / D1700-1800 / H511-512

Electrolux 0E5117 0K8252 0KE517 0L1838

415226**Boiler heating element 8000W 220V**

L=490 mm; flange Ø 72 mm; with triangular flange CT140 - CT141

Electrolux 047154

415039**Boiler heating element 4500W 230V**

L=320 mm; triangular flange 83,5x78,5 mm Øint. 47 mm; with bulb housing; faston 6,3x0,8 mm LS4 - C50

Electrolux 047847 0H2476 0K8125 0L1849

415223**Boiler heating element 8000W 230V**

L=390 mm; triangular flange 72x72 mm Ø int. 47 mm RT100-40/RT1800-2500/D1700-1800/H511-512

Electrolux 0617613900 0E5955 0L1851 617613900

613891**Boiler heating element 6000W 230V**

L=330 mm, triangular flange RTCS90/WTCS90 - RTCS140/WTCS140 - RTCS180/WTCS180 - RTCS250/WTCS250

Electrolux 0L1005

613930**Boiler heating element 10500W 230V Left**

L=340 mm; triangular flange; connection screw M4 RTCS90/WTCS90 - RTCS140/WTCS140 - RTCS190/WTCS190 - RTCS250/WTCS250

Electrolux 0L1039 0L2243 0L2736

613892**Boiler heating element 6000W 230V**

L=335 mm; triangular flange; with screw, nut and washer RTCS90/WTCS90 - RTCS140/WTCS140 - RTCS180/WTCS180 - RTCS250/WTCS250

Electrolux 0L1006

414927**Boiler heating element 10500W 230V**

L=390 mm; triangular flange 72x72 mm Ø int. 47 mm RT10 - RT180 - Z18 - WT90

Electrolux 0E5953 0L1852

415005**Boiler heating element 6000W 230V; from S.n 029....**

L=290 mm; triangular flange 83x83 mm Øint. 47,5 mm; connection faston 6,3x0,8 mm RT10/RT180/Z18/WT90

Electrolux 049116 058012 066110 076035
0L1878

613925**Boiler heating element 10500W 230V right**

L=340mm; triangular flange; connection a screw M4 RTCS90/WTCS90 - RTCS140/WTCS140 - RTCS180/WTCS180 - RTCS250/WTCS250

Electrolux 0L1035 0L2242 0L2759

Heating Elements

415054



Boiler heating element 12000W 230V
L=470 mm; triangular flange 72x72 mm
RT10 / RT180 / Z18 / WT90

Electrolux 0E5956 0L1853

414507



Tank heating element 3000W 230V
L=465 mm

Electrolux 0H2402 0K7926 0KV838

459445



Boiler heating element 12000W 230V
L=460 mm; triangular flange 83,5x78,5 mm;
with bulb housing L=284 mm; connection M5

Electrolux 0L0019

613886



Tank heating element 3000W 400V

Electrolux 0L1002

415195



Boiler heating element 14000W 230V
L=470 mm; triangular flange 72x72 mm Ø int.
47 mm
RT100-140 / RT1800-2500 / D1700-1800 /
H511-512

Electrolux 0E5957 0L1854

414497



Tank heating element 4000W 220V
connection M14

Electrolux 0E0147 0H2396 0K6684 0K7908

538795



Boiler heating element 14000W 230V
L=465 mm; triangular flange 84x78,7 mm; Ø 50
mm; with bulb housing L=275 mm; connection
M5; RT10/WT90 Asia

Electrolux 0L0650

414496



Tank heating element 5000W 220V
Ltot= 840 mm; connection M12

Electrolux 0E3525 0H2098 0K7117 0K7920

414926



Drying heating element 1375W 230V
dim. 170x370 mm; flange 23x13 mm;
connection faston
RT100-140 / RT1800-2500 / D1700-1800 /
H511-512

Electrolux 0E5126 0E5253 0K6825

414903



Tank heating element 6000W 220V
L=840 mm

Electrolux 0E0027 0H2398 0K7918

Heating Elements

414914**Tank heating element 7500W 230V**L=440 mm; flange Øest. 72 mm Øint. 57,5 mm;
attacchi M5

Electrolux 0E5161 0K8245 0L1859

336065**Heating element gasket 37x12mm**

Electrolux 0E5554 0K8134

414890**Tank heating element 9000W 230V**

L=450 mm; flange Øest. 72 mm Øint. 57,5 mm

Electrolux 0E5163 0K8244 0L1860

317947**Heating element gasket Ø 105x145x2 mm**

Electrolux 0L1559

414908**Tank heating element 12000W 230V**L=435 mm; flange Øest. 72 mm Øint. 57,5 mm;
attacchi M5

Electrolux 0E5162 0K8243 0L1861

414276**Heating element gasket Ø 110x140 mm**

Electrolux 0H2210 0K7354

419827**Tank heating element 12000W 230V**

Electrolux 0E2980 0K8506

438593**Contacts protection cover**

Electrolux 065560

414472**Tank heating element 15000W 230V**

L=485 mm; flange Øint. 57,5 mm

Electrolux 0E2979 0K8505 482748900

415102**Flange 90x90 mm**

Electrolux 049928

Heating Elements

440922**Flange for heating element**

Electrolux 0E5492 478085900

584725**Heating element support**
dim. 545x180 mm

Electrolux 0E5750 0L1062

412421**Flange for heating element**

Ø 50x90; 6 hole Ø 7,5 mm e 2 hole thread M4x1

Electrolux 003362 065558 0K2022 0K2917

440794**Bracket LS720**

Electrolux 048429

414871**Bush**

Øint 54.5 mm Hint 13.5 mm

Electrolux 0E5491 0K8320

317934**Flange Ø 146x3 mm**

Electrolux 0L1599

336748**Flange 190x120x2 mm**

Electrolux 0E5534

Thermostats

416057



Bi-metal thermostat Klixon

Electrolux 0K7538

432345



Safety thermostat 1P 126°C

coated capillary L=1800 mm; bulb Ø 6x129 mm
- with manual reset

Electrolux 0E1108 0E5086 0K6886 0K6888
0KX072 481950102

349227



Bi-metal thermostat 52-60°C

60L50F with yellow/brown point; contact C-2=NC; contact C-1=NO operating temperature 30/46°C; contacts capacity 16A 250V

Electrolux 045495 047508 048487 0H2569

432315



Safety thermostat 1P 134°C

Coated capillary L=900 mm, bulb Ø 6x70 mm

Electrolux 047236

432314



Operating thermostat 1P 30÷90°C

capillary L=1250 mm; bulb Ø 6x113 mm; 15A 250V

Electrolux 046524 048266 049243 068012
0L1633 0L2144

432487



Safety thermostat 1P 200°C

Coated capillary L=1430 mm; bulb Ø 6x77 mm

Electrolux 0E5080 0K7889

432344



Operating thermostat 1P 30÷110°C

capillary L=3000 mm; bulb Ø 6x112 mm; with gland nut M9x1

Electrolux 047285 0E5032 0H2117 0K7035
0KE345 475770402

507916



Bulb housing Ø 13,5x6,8 mm - L=100 mm

Electrolux 0E5479 0K8435

432543



Operating thermostat 1P 30÷110°C

capillary L=4400 mm, bulb Ø 6x115 mm, gland nut M9X1 mm

Electrolux 0E5138 0K7036

438733



Gland nut M12 - Ø 6,25 mm

L=18 mm

Electrolux 067899 0KX146

Thermostats

430474

Gland nut M12 - Ø 6,5 mm
L=18,5 mm

Electrolux 0E5033 0K7534 0KE421 478044600

435110

Gland nut M16xL16 mm

Electrolux 0L0280

441029

Gland nut M12x15 mm
inside thread Ø 11,2 mm interno Ø 6,6 mm
h=27

Electrolux 0E5548 0K8443

441776

Thermostat holder

Electrolux 048987

432339

Gland nut M12x0,75 mm for bulbe max. Ø 6 mm [kit cpl]
stuffing gland M9x1, joint in EPDM 7,8x7 mm

Electrolux 0E5619 0H2265 0K3863 0K7490

415426

Gland nut H=40 mm
Connection M/F 16.5/9 mm

Electrolux 067958

418985

Connection 3/8"MF with nut and gasket

Electrolux 0E5031 0H2066 0K7027 0K7791

Transformers

419008



Transformer 9VA 50/60Hz
 PRI.: 230V, SEC.: 11V 0,8A

Electrolux 0KU575 428068601

440707



Transformer 25VA 50/60Hz
 PRI.: 230V, SEC.: 12V

Electrolux 0E5290 0K8319 0KG588 0L0174

301705



Transformer 50VA
 PRI.: 200-230V, SEC.: 24V

Electrolux 0L1225 0L1408 0L2191 0L2526

410165



Transformer 100VA
 PRI.: 0-220-240-380-415V, SEC.: 12-24V

Electrolux 046993 068907

301640



Transformer 160VA 50/60Hz
 PRI.: 230V, SEC.: 24V

Electrolux 0E5104 0L0073 0L1159

301639



Transformer 400VA 50/60Hz
 PRI.: 230-400V ±15V, SEC.: 24-48V

Electrolux 0E5110 0E5247 0KK018 0L0074

Fans

436142



Fan blade cover Ø 215 mm

Electrolux 089770

519260



Flexible hose Ø 100x3000 mm

Electrolux 0E5557 0K8298 0L3093

421006



Axial fan Ø 200 mm 58/68W 230V 50/60Hz
0,26/0,30A, C=2-1,5 µF/400V with cable
L=5500 mm

Electrolux 0E0022 0K7494 477980000

318229



Compact fan 80x80x38 mm - 10/8W
220-240V 50-60Hz
cable L=190 mm; ball bearing

Electrolux 0L2175

531364



Compact fan 120x120x38 mm - 20W 230V
50/60Hz
no cable; faston connection 2,8x0,5 mm; 2550
rpm; ball bearing

Electrolux 087945 091277 0A9495 0A9640
0C4012 0C4106 0C4922 0CB143
0D6787 0E2261 0K7491 0W5643

338234



Compact fan 230V 50/60Hz
dim. Ø 190xh63 mm; cable L=460 mm

Electrolux 0E5666 0K8566 0KB650

Cables

317895



Communication cable L=6000 mm

Electrolux 0L3458

311239



Cable RJ-11 L=5 mt
WT44 / WT66

Electrolux 0L1396 0L2212

311248



Cable RJ-11 L=6 mt
ADT

Electrolux 0L1432

507414



Communication cable L=6000 mm

Electrolux 0L3152

Drain components

613813



Drain manifold

Electrolux 0L0953

519461



Drain manifold

Electrolux 0E5102

Drain components

440936



Drain hose sealing - Kit
Ø 30x54x30 mm

Electrolux 0E0141 0K7044 0K7045 0KJ720
475778300

440938



Flat gasket Ø 65x102x2 mm EPDM
holes Ø 7 mm

Electrolux 0E0112 0K7352 477739400

348036



Drain plate Ø 1" 1/2 H=46 mm
overflow pipe hole Ø 40.3 mm ,
chromium-plated brass

Electrolux 075624 0E5647

348107



Drain plate Ø 1" 1/2 H=46 mm
overflow pipe hole Ø 36 mm, chromium-plated
brass

Electrolux 046875

441006



Drain plate Ø 90x118x62 1"1/2
plastic body, with gasket and screw L=70 mm

Electrolux 0E5251 0K7225

348068



Drain plate Ø 2" H=50 mm
overflow pipe hole Ø 42 mm, chromium-plated
brass

Electrolux 047200

419558



Drain plate [Kit] - RT100-140

Electrolux 0E0113 0K7046 0L1862 475778400

441218



Ring nut for drain plate 1" 1/2

Electrolux 066079

440940



Overflow pipe Ø 30x330 mm

Electrolux 0E5020 0KE504 0L1880

418626



Overflow pipe Ø 30x295 mm
connection for drain plate Ø 29 mm, Htot=500
mm

Electrolux 0E2963 482788200

Drain components

323357



Overflow pipe Ø 40x310 mm from SN 713

Electrolux 0L1431 0L2296

348100



Overflow pipe Ø 40x270 mm
chromium-plated brass

Electrolux 046876 047116

440911



Overflow pipe Ø 33/40x80 mm

Electrolux 0E5149 0K8172

613766



Overflow pipe Ø 40x320 mm till SN 712

Electrolux 0L0909

438991



Overflow pipe Ø 33x43 mm

Electrolux 0E5518 0KI245

544635



Overflow pipe Ø 40x345 mm
new RT from SN 020, with O-ring

Electrolux 0L1430 0L2295 0L4048

613757



Overflow pipe Ø 33,5/36x125 mm

Electrolux 0L0904

508823



Overflow pipe Ø 47,5x257 mm

Electrolux 0L4053

613764



Overflow pipe Ø 36/40x355 mm INOX

Electrolux 0L0908

348039



Overflow pipe Ø 50x330 mm

Electrolux 047202

Drain components

441036



Discharge hose Ø 50x770 mm

Electrolux 0E5747

519455



Drain plug RT

Electrolux 0E5191 482266900

441043



Support for overflow pipe L

Electrolux 0E5684 0KI644

318109

Water drain fitting Ø 26 mm
flange Ø 82,5 mm

Electrolux 0L0938

Dispensers and Peristaltic pump

610871



Rinse aid peristaltic pump w/speed adj. (external use)
mod. PR-1; flow rate adj. from 0,15±1 lt/h
press. 3 bar; 230V 50Hz; protection IP65;
cable L=1200 mm; Hose in sekobril;
installation kit included

Electrolux 0S0671

610870



Detergent peristaltic pump w/speed adj. (external use)
mod. PR-4; flow rate from 0,6±4 lt/h press. 0,1
bar; 230V 50Hz; protection IP65; hose in
Santoprene; cable L=2750; installation kit
included;

Electrolux 0S0669

Dispensers and Peristaltic pump

700435



Detergent peristaltic pump w/conductivity probe

mod. PA-6; flow rate 6 lt/h press. 0,1 bar;
230V 50Hz; protection IP65; hose in
Santoprene; cable L=2750 mm + L=2750 mm;
installation kit included

Electrolux 0G3344 0S0670


317782



Washer 1-1/2x7/ 8x0,050 INOX
Ø 21,9x38x1,5 mm, H=2,3 mm

Electrolux 0L1087

610865

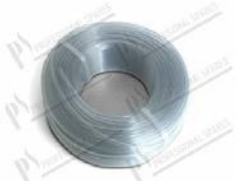

PVC transparent hose Ø 4x6 mm [hank
100 mt]

Electrolux 0S2772

317629



Detergent injector Ø 18 mm - 1/2"

Electrolux 0L1085

524153



Stiff polyethylene grey hose Ø 4x6
L=2660 mm, Tmax 130°C
suitable for detergent pump, working T. -20
+60°C, max pressure 10 bar.

Electrolux 049360 049905 0L1163

410378



Nonreturn valve 1/8" for hose Ø 4x6 mm

Electrolux 049358

532483



Stiff polyethylene blue hose Ø 4x6 mm
[hank 100 mt]
Feeding hose rinse peristaltic pump

Electrolux 0S2101

412192



Funnel for rinse

Electrolux 047548 049331

317619



Ring nut
for hose Ø 6 mm

Electrolux 0L3079 0L4400

Solenoid Valves and Reducers

349150



Solenoid valve 90° - 1 way - 24Vac 50/60Hz - Ø 14 mm
with fastons; inlet Ø 3/4" with filter; Tmax 90°C

Electrolux 0H2513 0K8226 0L0175 482373600

434655



Inlet pressure reducer 5 lt/min [black-Elbi]

Electrolux 0L0169

435073



Solenoid valve 90° - 1 way - 220/240V 50/60Hz - Ø 14 mm
with fastons; inlet Ø 3/4" with filter and inlet reducer 20 lt/min; Tmax 90°C; coil 90°

Electrolux 048898 0L3439

310829



Inlet pressure reducer 5,5 lt/min [black-Elbi]

Electrolux 0L0170

432364



Solenoid valve 180° - 1 way - 24Vac 50Hz - Ø 14 mm
with fastons; inlet Ø 3/4" with filter; Tmax 90°C

Electrolux 0E5070 0KI409 0KZB30 482412000

434658



Inlet pressure reducer 6,7 lt/min [green-Elbi]

Electrolux 0L0171

349298



Solenoid valve 180° - 2 ways - 24Vac 50Hz - Ø 14 mm
with fastons; inlet Ø 3/4" with filter; Tmax 90°C

Electrolux 046795 046796 047534 048180

438974



Inlet pressure reducer 8 lt/min [red-Elbi]

Electrolux 0E5961

434660



Inlet pressure reducer 4 lt/min [white-Elbi]

Electrolux 0L0168

200131



Inlet pressure reducer 10 lt/min [natural-Elbi]

Electrolux 049650

Solenoid Valves and Reducers

200132



**Inlet pressure reducer 20 lt/min
[orange-Elbi]**

Electrolux 0L0178

411805



**Inlet pressure reducer 5 lt/min
[violet-T&P]**

Electrolux 0E5549 0K8258

434657



**Outlet pressure reducer 1,2 lt/min
[natural-Elbi]**

Electrolux 0L0166

411800



**Inlet pressure reducer 8 lt/min
[black-T&P]**

Electrolux 0E5550 0K8260

434659



**Outlet pressure reducer 2,5 lt/min
[orange-Elbi]**

Electrolux 0L0167

411801



**Inlet pressure reducer 10 lt/min
[white-T&P]**

Electrolux 0E5551 0K8261 482412110

200122



**Inlet pressure reducer 5,5 lt/min
[yellow-Inv]**

Electrolux 0E5528

319367



**Inlet pressure reducer 20 lt/min [brilliant
red-T&P]**

Electrolux 0E5526 0K8262

411806



**Inlet pressure reducer 4 lt/min
[brown-T&P]**

Electrolux 0E5432 0K8257

616641



**Outlet pressure reducer 1,0 lt/min [light
blue-T&P]**

Electrolux 0E5588

Solenoid Valves and Reducers

411803



**Outlet pressure reducer 2,5 lt/min
[yellow-T&P]**
For T&P valve

Electrolux 0E5587 0K8265

532485



**Solenoid brass valve L182 - NC -
G3/8"-208-240V 50/60Hz**
L=60 mm; EPDM membrane - UL/CSA;
0,35-16bar

Electrolux 0L0488 0L0569 0L2656

349158



**Solenoid valve 90° - 1 way - 220/240V
50/60Hz - Ø 14 mm**
rast 5; inlet Ø 3/4" with filter and inlet reducer
5,5 lt/min; Tmax 90°C; coil 90°

Electrolux 049452 049983

585339



**Solenoid nickel-plated brass valve L182
NC 3/8" 230V 50/60Hz**
L=60 mm - membrana in EPDM - Fluid. Temp
-10°C++140°C

Electrolux 0L4427

533519



**Solenoid valve 180° - 1 way - 220/240V
50/60Hz - Ø 14 mm**
rast 5; inlet Ø 3/4" with inlet reducer 20 lt/min;
Tmax 90°C

Electrolux 0L0566 0L3445

417857



**Solenoid brass valve G1/2" - 10W 24V
50/60Hz [KIT]**
L=52 mm

Electrolux 0E0007 0K7959 0KZN72 482000009

301678



**Solenoid valve 180° - 1 way - 24V 50/60Hz
- Ø 14 mm**
rast 5; inlet Ø 3/4" with filter and inlet reducer
20 L/min; Tmax 90°C

Electrolux 0L1198 0L2327 0L3449

438451



**Solenoid brass valve - NC - G3/8" - 230V
50Hz**

Electrolux 049509

613808



**Solenoid brass valve L182B - NC - G3/8" -
24V 50/60Hz**
L=60 mm - NBR membrane - Fluid. Temp
-10°C++90°C; 0,35-16bar

Electrolux 0L0948 0L2516

350547



**Solenoid brass valve L145 - NC - G3/4" -
24V 50Hz**
L=79 mm - PTFE membrane (steam) - Fluid.
Temp +60°C+ +170°C

Electrolux 0L1481

Solenoid Valves and Reducers

436181



Solenoid brass valve L153 - NC - G3/4" - 24V 50Hz
L=79 mm - PTFE membrane (steam) - Fluid.
Temp -10°C ÷ +140°C

Electrolux 0E0029 0E1891 0E2200 0K6714
0K8128 0KE489 482174003

417396



Coil 24V 50/60Hz

Electrolux 0E2213 0K7960 0KA467

435996



Solenoid brass valve L153 - NC - G3/4" - 230V 50Hz
L=79 mm - PTFE membrane (steam) - Fluid.
Temp -10°C ÷ +140°C

Electrolux 0E5974 0KP279 0L1482

417590



Solenoid valve repairing EVSI 10 Kit

Electrolux 0E2214 0K7961 0KA463

418031



Solenoid brass valve E220 - NC - 3/4" - 24V - 60Hz
L=71 mm - P. steam 3,5 bar; P. Hot water 10 bar; Tmax +150°C; membrane in EPDM

Electrolux 0E2280 0K8129

318150



Support solenoid valve
dim. 30x58x41 mm

Electrolux 0L0899

417321



Solenoid brass valve 2/2 - NC - G1/8" - 230V 50/60Hz
dim. 26x22x54 mm - coil 230V 50Hz 9W; Pmin 0 bar, Pmax 10 bar

Electrolux 0H2496 0H2520 0K7260 0K8179

417611



Solenoid brass valve EV220 - NC - G1/2" - 9W 230V 50Hz
L=58 mm; Tmax -30/+100°C; 0,3-10bar

Electrolux 0H2412 0K6761 0K7060 0K7507
0KA629

Filters

441269



Water filter 3/4" - L=68 mm
bronze body and filter in INOX

Electrolux 053037 068121 0KL216

419154



Strainer for overflow Ø 101 mm
cable L=235 mm

Electrolux 0E0166 0E3006 0H2517 0K7429

507664



Filter Ø 45x78 mm

Electrolux 0L3982

441710



Filter

Electrolux 046850

325568



Filter support
dim. 55x20x12 mm

Electrolux 0K7698 0KB611

438881



Tank filter 450x240 mm
suitable for short tank L=475 mm

Electrolux 0E5691


317940



Protective grating
dim. 75x55 mm

Electrolux 0L2515

519404

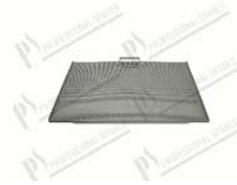

Tank filter 460x640 mm

Electrolux 0E5472 0KT580 482500400

441078



Filter Ø 100 mm

Electrolux 0E5186 0K8210 0KB634

317931



Tank filter 635x275 mm

Electrolux 0L1166

Filters

507678



Pump filter Ø 165 mm

Electrolux 0L4029

440908



Basket filter 635x105x115 mm

Electrolux 0E5183 482262800

519454



Filter basket 240x111x115 mm

Electrolux 0E5193

441893



Basket filter 230x155x70 mm

Electrolux 048252

613811



Pump strainer Ø 145 mm Htot=215 mm

Electrolux 0L0951

507351



Basket filter 327x180x100 mm

Electrolux 0L4051

429942



**Basket filter Ø 150x70 mm
for dishwasher table**

Electrolux 0E5376 0K7236


507350



Basket filter 325/350x182x70 mm

Electrolux 0L4050

433695

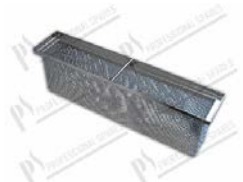

Basket filter 465x95x150 mm

Electrolux 0E0144 0K7702 0KE441

613843



Basket filter 440x110 mm

Electrolux 0L0972

Filters

613845



Basket filter 610x110 mm

Electrolux 0L0973

Shower units and Water columns

544763



Shower unit with one-hole mixer tap with taps heads
fitting Ø 3/4"; connection pipe Ø 1/2" L=350 mm; H=1100 mm; series Klarco

Electrolux 069570 069968 OS1036 855315

310503



Shower unit with one-hole mixer tap single-lever
connection Ø 3/4"; water delivery spout L=275x25 mm

Electrolux OS0874 855324

318744



Hand shower M1/2" - EUROP

347886



Hand shower STAR 1/2"M

586022



Water saving Hand shower NEW/4L - 3,8l/min - 3bar

318744



Hand shower M1/2" - EUROP

613574



Plastic support L=115 mm

586022



Water saving Hand shower NEW/4L - 3,8l/min - 3bar

348523



Spring for shower unit

348523



Spring for shower unit

613575



Tap head G1/2" 8x20 mm

348303



Water spout aerator 3/4" - Klarco

318741



O-ring 1,78x15,6 mm EPDM [10 Pcs]

412560



Mixing cartridge Klarco Ø 47x30 mm

Shower units and Water columns

538786



Shower unit with two-holes mixer tap with taps heads
connection Ø 3/4" - centre distance 155 mm;
Klarco serie

Electrolux 0L0643 855311

318744



Hand shower M1/2" - EUROP

586022



Water saving Hand shower NEW/4L - 3,8l/min - 3bar

348523



Spring for shower unit

348428



Piston for shower

540823



Knob symbol red with tap head 3/4"

540822



Knob symbol blue with tap head 3/4"

348326



Spring

312070



Shower unit MAXI Reel 10 m - without water-gun
with automatic hose-reel, in INOX 304

Electrolux 0S0877

312065



Shower unit MAXI Reel 15 m - without water-gun
with automatic hose-reel, in INOX 304

Electrolux 0S0878

347886



Hand shower STAR 1/2" M
dim: 245x90x50 mm

Electrolux 069973 0S0347

318744



Hand shower M1/2" - EUROP

Electrolux 069569 0L0640 0S1075 0S1102

311811



Hand shower NITO 1

Electrolux 0S0823

Shower units and Water columns

311812



Hand shower NITO 2

Electrolux OS1132

Wash units

317887



Wash arm Ø 18x557 mm

Electrolux OL1468

338650



Wash arm L=168 mm
3 nozzle

Electrolux 046867

419386



Wash arm L=615 mm

Electrolux 0E2248 0K7700

338605



Wash arm L=445 mm

Electrolux 046859

419560



Wash arm L=630 mm

Electrolux 0E0165 0K7701 0KG482

411295



Wash arm

Electrolux 048047

418948



Wash arm Ø 18x678 mm
hole Ø 8,8 mm

Electrolux 0KW781 428021001

317865



Wash arm L=525 mm
4 nozzle

Electrolux 0L0974

Wash units

317864



Wash arm
4 nozzle

Electrolux 0L0985

417937



Rinse arm Ø 18x465 mm

Electrolux 0K7841

318110



Lower washing ramp
dim. 525x485 mm

Electrolux 0L0694 0L0964 0L1750 0L3476

613835



Rinse arm L=532 mm

Electrolux 0L0966

418632



Wash ramp
hole with out tap 1"

Electrolux 0E2956 482789800

335854



Rinsing nozzle Nr 9505

418143



Rinse arm Ø 18x535 mm

433830



Wash ramp 5 arm

Electrolux 0E5015 0E5465 0E5466 0E5995

Electrolux 0K7842

317891



Rinse arm L=556 mm
4 nozzles

Electrolux 0L2631

440967



Lower wash ramp 590x195 mm - Ø 30 mm
Prewash

Electrolux 0E5202 0E5711 0E5965 0E5996

315884



Rinse arm Ø 18x555 mm

Electrolux 0L1467

Wash units

434961



Rinse arm L=537 mm
4 Holes Ø 9 mm without corks and ringe noozles

Electrolux 0E5521

414368



Support for lower jets

Electrolux 0H2162 0K7261 477617900

441009



Rinse arm Ø 18x535 mm
with noozles, Øint 15 mm

Electrolux 0E5946

414367



Support for upper jets 86x86xh56 mm

Electrolux 0H2163 0K7262 477617901

438444



Rinse arm L=537 mm
Ø 18 mm - 4 nozzles

Electrolux 0E5506 0K8448 0K8449 0KB645

415567



Support for jet

Electrolux 046851

440611



Rinse arm
6 nozzle

Electrolux 0E5945

613828



Support for lower jets INOX
flange Ø 110 mm, Htot=98 mm, Øext 59.5 mm

Electrolux 0L0961 0L1188

412044



Rinse Jet plug M11x1,5

524451



Support for lower jets dx pw
pipe-fitting Øest. 42 mm, Øest. 12 mm

Electrolux 049695

338648



Support for lower jets L=110 mm

Electrolux 046860

Wash units

349138



Connection pipe for jets

Electrolux 0E5680

418184



Plug M20

Electrolux 0E0123 741611324

318225



Wash pipe Ø 50 mm INOX
dim. 1020x240x340 mm; M600 NEWRT

Electrolux 0L1186

435157



Wash arm plug
Ø 28x42 mm

Electrolux 0E5997

418498



Connection pipe for jets

Electrolux 0E3012 482715800

301582



Wash arm plug Ø 50/29,5 mm

Electrolux 0L0978 0L1711

319901



Washing arm plug 1" F
brass-chromate

Electrolux 0E5016 0K9039

412184



Nozzle fastener

Electrolux 046273

337417



Washing arm plug

Electrolux 046266

441074



Plug

Electrolux 0E5227

Wash units

435186



Rinsing nozzle Nr 9504

Electrolux 0E5148 0K7995 0K8280 0KB625

335853



Rinsing nozzle M10

Electrolux 0E0163 0K6180

335854



Rinsing nozzle Nr 9505

Electrolux 0E2247 0E5101 0K7992 0KA703

335858



Rinsing nozzle

Electrolux 0E0164 0H2584 0H2585 0K6179

435106



Rinsing nozzle Nr 9506

Electrolux 0E5107 0H2378 0K7836 0K8282

418976



Rinsing nozzle H/78W-8004

Electrolux 0E3004 0K8528 482784601

441076



Rinsing nozzle Nr 9510

Electrolux 0E5215 0K8283 482425703

412133



Rinsing nozzle

Electrolux 048036

419523



Rinsing nozzle 8010
M10x1

Electrolux 0E3005 0K8527 482784600

432948



Washing nozzle

Electrolux 0H2321 0K7351 0K7652 0K7691
481666600 481706200

Wash units

412181



Rinsing nozzle

Electrolux 046272

315962



Cover

Electrolux 0L1370 0L2773

317722



Shutter Ø 29x52,5x1,5 mm

Electrolux 0L1185

519456



Flow reducer

Electrolux 0E5179 0K1408

318091



Shutter Ø 23x53x1,5 mm

Electrolux 0L1184

613759



Hook

Electrolux 0L0905 0L2087

585338



Shutter Ø 23x46x2 mm

Electrolux 0L3974

418572



Spraying arm support Ø6x690 mm

Electrolux 0E2955 482767800

613788



Knob rinse arm Ø 50 mm - L=65 mm

Electrolux 0L0929

418352



Lockhandle

Electrolux 0E5469 0KU309 482447000

Wash units

343195



Water distributor
L= 415 mm

Electrolux 046866

336289



Rubber gasket 120x35 mm

Electrolux 0H2382 0K7850

519204



Flange 100x80x3 mm

Electrolux 0E5025 0KU336

414976



Gasket 86x85 mm
Øint. 60 mm

Electrolux 046858

414333



Gasket Ø 6,5x14x1,5 mm

Electrolux 0E5470 0E5714

613763



Nut 1/2" H=25 mm

Electrolux 0L0907

317945



Gasket Ø 57,5x110x2,2 mm

Electrolux 0L0919

507725



Ring nut H=7,7 mm

Electrolux 0L4052

518952



Gasket Ø 50x78x10 mm

Electrolux 0E6005

440602



Hexagonal nut M20 L=29 mm

Electrolux 0E5507 0KL044

Steam element/Condenser and Evaporator

318141



Steam element for boiler Ø 105x390 mm
tube Øext. 13.5 mm; 3/4 "connections

Electrolux 0L1554

419720



Steam element
dim. 1200x100x120, flangia Ø 14.7x5 mm, tubi in rame Ø 22 mm with connection and double cone

Electrolux 0E0194 0K7238 0KE379

438998



Steam element

Electrolux 0E5358

318128



Heat exchanger assembly 445x600 mm

Electrolux 0L0902 0L1730 0L3573

432908



Steam element

Electrolux 0E0150 0K6707 0KE286

441027



Exchanger; condensing unit
600x320x160 mm; Ps=28 bar

Electrolux 0E5581 0KD958


438997



Steam element

Electrolux 0E5359

419390

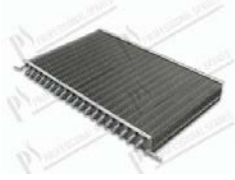

Evaporator
1000x585x105 mm

Electrolux 0E2289 0K7903 0KG476

418783



Steam element
Connection M21

Electrolux 0E3088 0KD943

Curtains

301574



Curtain 485x130H mm with shaft - in BIO PVBR
for RTM140 / WTM140, RTM165 / WTM165.

Electrolux 0L0874 0L1946

318911



Double curtain 520xh420/470 mm - PVC
without shaft

Electrolux 0L1765

318909



Curtain 578x294 mm - in BIO PVBR (from SN. 929)
without shaft

Electrolux 0L1733

613775



Double curtain 520xh475/420 mm - silicon blue
without shaft

Electrolux 0L0917 0L3209

613694



Curtain 580xh294 mm - in silicone blue
USDA Certified Biobased Product

Electrolux 0L0851 0L3208


613773



Double curtain 580xh300 mm - silicon blue
USDA Certified Biobased Product (SN until...928)

Electrolux 0L0916 0L3206

318907

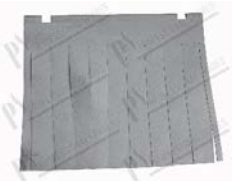

Double curtain 585xh490/490 mm in BIOPVBR (from SN. 929)
without shaft (from SN ...929)

Electrolux 0L1732

582439



Double curtain 580xh300 mm - silicon
USDA Certified Biobased Product (SN from 929...)

Electrolux 0L1767

613693



Double curtain 585xh490 mm - silicon blue
without shaft; USDA Certified Biobased Product (SN until ...928)

Electrolux 0L0850 0L3207

418010




Curtain 540xh325 mm

Electrolux 0H2131 0K7200 0KE370 476100300

Curtains

418071

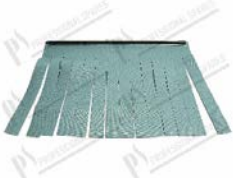

Curtain 540xh450 mm
with lock flange

Electrolux 0E5082 0H2132 0K7201 0KE371

414648



Curtain 550xh350 mm
with lock flange

Electrolux 0E5038 0KJ660 482346000

414717



Curtain 525x300 mm
axis Ø 6x580 mm

Electrolux 046883

414647



Curtain 545xh445 mm
with lock flange

Electrolux 0E5029 0E5268 0E5277 0H2508

414716



Curtain 645xh475 mm
with shaft Ø 6x645 mm

Electrolux 048042

435045



Curtain 550xh460 mm
without shaft

Electrolux 0E2728 0E5486 0K8514 0KE550

438681



Curtain 550xh150 mm
without shaft

Electrolux 0E2730 0K8516

435103



Double curtain 580xh480 mm
without shaft

Electrolux 0E5828 0E5966 0E6006 0K8592


435044



Curtain 550xh300 mm
without shaft

Electrolux 0E2729 0K8515

417992

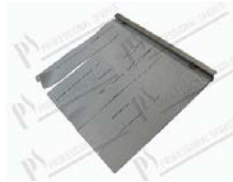

Curtain 550xh450 mm

Electrolux 0K8208 0K8209 0K8558 0KE572

Curtains

419524



Double curtain 650xh300 mm
without axis; for Mod. WT730/760/790 - FT72

Electrolux 0E2940 0K8568 490151100

419424



Curtain 700x420 mm

Electrolux 0E0211 0E2913 0K8101 0K8103

438683



Double curtain 650xh450 mm
without shaft

Electrolux 0E2921 0K8567 490151000

419823



Double curtain 650x420 mm
D750

Electrolux 0E0155 0G1663 0K8094 0K8096

419561



Curtain 700xh440 mm
without shaft

Electrolux 0E2995 0K8569 0KG582 490151200

419427



Curtain 653x301 mm
with shaft

Electrolux 0G5002 0K8098 0K8099 0KE486

419438



Curtain 650xh350 mm

Electrolux 0E0154 0K8095 0K8097 0W1790

418114



Double curtain 795xh440 mm
without shaft

Electrolux 0KU199 491489200

419426



Curtain 700xh420 mm

Electrolux 0E0214 0K8100 0K8102 0W1789

418113



Double curtain 800xh600 mm
without axis

Electrolux 0KU200 491489100

Curtains

418790



**Double curtain 850xh585/490 mm
without shaft**

Electrolux 0KK067

435018



Curtain shaft Ø 6x650 mm

Electrolux 0E2937 0K8518 482760301

317849



Curtain shaft Ø 6x490 mm

Electrolux 0L0873

418536



Curtain shaft Ø 6x700 mm

Electrolux 0E3000 0KI074 482760302

418441



Curtain shaft Ø 6x546 mm

Electrolux 0K8517

419573



**Curtain shaft 760x20x10 mm
with fixing hole Ø 4 mm**

Electrolux 0E3120

440923



Curtain shaft Ø 6x546 mm

Electrolux 0E5487

538722



Support for curtain

Electrolux 0E5825 0L0559

519014



Curtain shaft Ø 6x580 mm

Electrolux 0E5826

317829



**Support for curtain
dim. 70x20 mm**

Electrolux 0L1171

Curtains

318163



Support for curtain
dim. 42x20 mm

Electrolux 0L0997

613695



Curtain support L=600 mm

Electrolux 0L0852

319798



Support for curtain

Electrolux 0L0898

419422



Curtain support Ø 6 mm
dim. 570x64 mm

Electrolux 0E5160 0K8207

613718



Support for curtain
dim. 48,5x20x74 mm

Electrolux 0L0871

317938



Support for curtain
dim. 30x40x70 mm

Electrolux 0L0870

301652



Support for curtain
dim. 30,5x44x70 mm

Electrolux 0L1172

Air-gaps

435254



Air break 47x59xh26,5 mm
pipe fitting \varnothing 7 mm

Electrolux 048308 0K8750

508774



Air break 47x59xh26,5 mm [Kit]
pipe fitting \varnothing 7 mm; O-ring 2,62x15,54 mm

Electrolux 0L2362

435134



Air break \varnothing 44x113 mm

Electrolux 046631 0H2542 0K8662 542601001

318226



Pressure reducing
 \varnothing ext 4,5/3xL=26 mm

Electrolux 0L1283

438734



Ring

Electrolux 045507 046881 067930

Water conditioning

529584

**Automatic water softener 8 It valve
AUTOTROL 366**

dim. 245x450x440 mm; water connections Ø 3/4" - pressure 1+8 bar; power supply 230V 50/60Hz; AISI 304 tank 5,6 lt; flow rate at 20°F 1680 l/h

Electrolux OS0331 OS1077 OS1946

410068

**Manual water softener 12 It inlet Ø
3/8"-3/4"**

12 It AISI 304 stainless steel cylinder with 9 It resin; 4-50°C; regeneration salt 1,5 Kg; flow rate 1000 lt/h; dim. Ø 190x500 mm; with reduction inlet-outlet Ø 3/8"-3/4"

Electrolux OS0330

410190

**Automatic water softener 8 It AUTOTROL
255 Logix 740**

LOGIX TIMER, 8 It AISI 304 stainless steel cylinder with 5,6 kg resin; water connection Ø 3/4" temp. 4-50°C; power supply 230V 50/60Hz; regeneration salt 1 kg; dim. 245x480x540 mm

Electrolux OS0716 OS1079

545623

**Manual water softener 20 It inlet Ø
3/8"-3/4"**

20 It AISI 304 stainless steel cylinder with 15 It resin; 4-50°C; regeneration salt 2,5 Kg; flow rate 1000 lt/h; dim. Ø 190x900 mm; with reduction inlet-outlet Ø 3/8"-3/4"

Electrolux OS0329 860430

410189

**Automatic water softener 12 It-valve
AUTOTROL 255 Logix 740**

dim. 320x500x660 mm; water connections Ø 3/4" - pressure 2+8 bar; power supply 230V 50/60Hz; flow rate at 20°F 2520 l/h; fiber tank 9 lt, salt container 30 kg

Electrolux OS0332 OS1083

540863

**Manual water softener 8 It by pass,
water inlet Ø 3/8"**

8 It AISI 304 stainless steel cylinder with 5,8 It resin; 4-50°C; regeneration salt 1 Kg; dim. Ø 190x400 mm; with reduction inlet-outlet Ø 3/8"-3/4"

Electrolux OS0578 OS1074

515343

**Automatic water softener 24 It valve
AUTOTROL 255 Logix 740**

dim. 320x500x1120 mm; water connections Ø 3/4" - pressure 2+8 bar; power supply 230V 50/60Hz; flow rate at 20°F 5.040 l/h; fiberglass tank 17 lt, salt container 50 kg

Electrolux OS1089

540864

**Manual water softener - 12 It by pass,
water inlet Ø 3/8"**

12 It AISI 304 stainless steel cylinder with 9 It resin; 4-50°C; regeneration salt 1,5 Kg; dim. Ø 190x500 mm; with reduction inlet-outlet Ø 3/8"-3/4"

Electrolux OS0579 OS1076

535868

**Manual water softener 8 It inlet Ø
3/8"-3/4"**

8 It AISI 304 stainless steel cylinder with 5,8 It resin; 4-50°C; regeneration salt 1 Kg; flow rate 1000 lt/h; dim. Ø 190x400 mm; with reduction inlet-outlet Ø 3/8"-3/4"

Electrolux OC1903

339685

Funnel for salt tank

Ø 34x96 mm

Electrolux 047604

Water conditioning

301623



Water filter for manual water softener 3/4"
wound wire cartridge 5"

Electrolux OL1141

340451



Membrane for softener

Electrolux OC0048

301622



Water filter for manual water softener 3/8"
wound wire cartridge 5"

Electrolux OL1140

312910



Refil cartridge Purity 1200 Clean (blu)
capacity 13000 lt; partial demineralisation

Electrolux OS0802

316135



Wound wire filter cartridge 50 micron
Ø 28,5x62,5x130 mm (NK111 e NK112)

Electrolux OS1027

310336



Refil cartridge Purity 1200 Clean Extra (red)
capacity 3100 lt; total demineralisation

Electrolux OS0804

325024



Refil filter cartridge Profine blue (small)
capacity 15000 lt

Electrolux OS1821 864393

200288



Flow meter with digital 100-700 L
sensor 3/4" MF; L=83 mm; cable L=1500 mm;
4-60°C; Max 8,6 bar

Electrolux OS0945

410125



Cationic resin pack 25 lt

Electrolux OS0333

582443



Water purifier
JG pipe Ø 7x10 mm, JG pipe Ø 1/4 "x 0.170"
(Ø 4.3x6.35 mm 90 ° fitting JG MF10 mm, JG MF fitting 6.4 mm)

Electrolux OS0718 OS1822 864026 864388

Water conditioning

302068



**Descaling cleaning membranes osmosi,
mod. RO600C**
Complet 2 filter carboni e 1 descaling 200 gr

Electrolux 0S0730

Hoses

319776



Suction hose SX
Ø 25/80/100 mm

Electrolux 0L0928

459846



**Formed hose Ø 60x70 mm / Ø 78x88 mm
L=82 mm EPDM**

Electrolux 0L1354 544639800

318213



Pressure switch hose 90°
dim. 160x25 mm; those Ø 4,6x8x133 mm

Electrolux 0L3088

414268



Formed hose Ø int. 63 mm L= 60 mm

Electrolux 0E0130 0K7173

412514



Formed hose Ø 65x74 mm

Electrolux 046952

459763



SleeveSchlauch

Electrolux 0L0924 0L2545

414553



**Formed hose Ø 63x73 mm L=74 mm
for pump suction**

Electrolux 0E5023 0K7452 477921100

440319



Sleeve Ø 63x73 mm L=90 mm EPDM

Electrolux 0L0038

Hoses

439890



Sleeve Ø 78x68 mm L=65 mm

Electrolux 048203

318180



Hose 90° 3/4"
dim. 205x95 mm

Electrolux 0L0910

414736



Sleeve Ø 89x75 mm L=90 mm

Electrolux 046951

431061



Formed hose 90°

Electrolux 0E5153 0K7451 0KB594

315689



Sleeve Ø 40x50 mm L=70 mm EPDM

Electrolux 0L0939

301580



Formed hose 90°
dim. 445x180 mm

Electrolux 0L0930

315690



Sleeve Ø 54x65 mm L=50 mm EPDM

Electrolux 0L0934

317880



Formed hose 90° Ø 24x30 mm - L=125/50 mm

Electrolux 0E0134 0E5166 0H1998 0K4558
482458900

342003



Sleeve Ø 65x74 mm L=110 mm EPDM
working temp. -35°C÷120°C; Pmax 6 bar

Electrolux 046565

419317



Formed hose 90° Ø 24x32 mm
dim. 140x85 mm

Electrolux 0E0156 0K7578 0KB601 478087100

Hoses

439761



Formed hose 90° Ø 26x36 mm until SN ...607
dim. 170x52 mm

Electrolux 049880

411852



Formed hose 90° Ø 44x54 mm

Electrolux 0E5204 0KG462 0KI411 482420802

438993



Formed hose 90° Ø 32x42 mm
dim. 90x90 mm

Electrolux 0E5511

538555



Formed hose 90° Ø 45x55 mm

Electrolux 0H2103 0K7131 0KB578 0KZ936

438992



Formed hose 90° Ø 40x50 mm

Electrolux 0E5512 0K8353

325220



Formed hose Ø 53x63 mm EPDM
dim. 190x120 mm

Electrolux 0E2970 0E5024 0H2516 0K8271
0KE518 0KI410 482420701

318217



Hose 90° for overflow pipe Ø 22x32 / 37,5x47,5 mm
dim. 180x165 mm

Electrolux 0L0931

440932



Formed hose 90° Ø 56x63 mm PE-HD
dim. 185x115 mm

Electrolux 0E2969 0K8394 482597400

518944



Formed hose 90° Ø 26,5x38 mm / Ø 37x47 mm
dim. 143x120 mm

Electrolux 0E6011

440609



Formed hose 90° Ø 64x74 mm / Ø 54x64 mm
dim. 232x168 mm

Electrolux 0L0077

Hoses


440619



Formed hose 90° Ø 83x90 mm

Electrolux 0E5019 0E5474 0KL020

200004

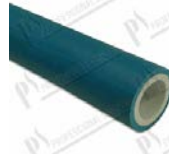

Hose EPDM Ø 11x19 mm - blue - (sold by meter)
Pmax 10 bar; Work Temp. -35°C+110°C; FDA approved

Electrolux 049379 0L3641 0U1051


613793



Formed hose Øint. 46/48xL180 mm

Electrolux 0L1267

419264

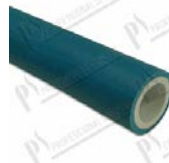

Hose EPDM Ø 12,5x22,5 mm L=1000 mm - blue
Pmax 10 bar; 120°C

Electrolux 0KU568

319338



Hose EPDM Ø 4x7 mm L=5000 mm
working temp. -35°C+110°C; Pmax 10 bar;
WRAS certified

Electrolux 072393 0C4205 0HM323 0K9162
0KC518

200002



Hose EPDM Ø 12x19,5 mm (sold by meter)
for hot water - not toxic - Pmax 10 bar -
working temp -35°C+120°C

Electrolux 045451 045807 045808 045942
048531 057763 057791 065535
066081 066082 069091 0E5053
0K8116 0K8670 0L3064 0T3901

524155



Hose EPDM Ø 5x12 mm L=600 mm

Electrolux 049904 0L1909

418178



Hose EPDM Ø 12x19,5 mm L=2000 mm
for hot water Tmax 110°C; atossic

Electrolux 0K8671

435233



Hose EPDM Ø 5x12 mm L=2300 mm
Tmax 110°C

Electrolux 048168 048225 048226 048883
068638 068792 068793 068794

438445



Hose EPDM Ø 15x23 mm (sold by meter)
Pmax 6 bar; Tmax 120°C

Electrolux 0E5509

Hoses

700448



Hose EPDM Ø 25,5x35,5 mm (sold by meter)
working temp. -35°C÷110°C; Pmax 10 bar

Electrolux 049773 0W0194 0W0195 0W01JR
0W1RL4 0W1RLK 0W3935 0W3953

200006



Hose EPDM Ø 25,5x32,5 mm (sold by meter)
working temp. -35°C÷100°C; Pmax 10 bar

Electrolux 049287 0L4453

411738



Hose EPDM Ø 45x54 mm L=160 mm
working temp. -35°C÷120°C; Pmax 6 bar

Electrolux 0E5698 0K1412 0K1492 482525600

416436



Flexible hose Ø 63x5 mm L=450 mm

Electrolux 0E0139 0K7697

335703



Flexible hose Ø 6 mm (sold by meter)

Electrolux 0H2358 0K7750

436434



Stiff polyethylene blue hose Ø 4x6 mm L= 2660 mm
Feeding hose rinse peristaltic pump

Electrolux 0L0481

431656



Hose PE Ø 10x15 mm(sold by meter)
Pmax 10 bar; Tmax 95°C

Electrolux 0H2650 0K6250 0K9166 0KJ557
701500003 743412794 877560103

431575



Hose PE Ø 16x22 mm (sold by meter)
Pmax 10 bar; Tmax 95°C

Electrolux 0K9167 877560104

318199



EPDM feeder hose Ø 11,5x19 mm L=1450 mm
straight connection 3/4"; Tmax 120°C

Electrolux 0L0987

519203



Drain pipe Ltot = 900 mm - pipe Ø 50 mm

Electrolux 0E5035

Hoses

414327



Formed hose Ø int= 42 mm, Ø ext=54 mm

Electrolux 046953

519446



Drain pipe Ø 40 mm - Ø 50 mm
dim. 1050x560 mm; with gasket 36,4x44,6x1,5 mm

Electrolux 0E5252

318206



Drain pipe EPDM Ø 11,5x19 mm L=2450 mm
connection 3/4"; Tmax 110°C; atossic

Electrolux 0L0988

318210



Flexible hose Ø 38x57 mm (sold by meter)

Electrolux 0L2505

Ball valves, Pipe fittings

318073



Nipple 3/4"÷1" - L=65 mm - brass
CH35

Electrolux 0L0906

519249



Nipple 1/2"÷1/2" - L=27 mm - brass

Electrolux 0E5583 0K9022

Ball valves, Pipe fittings

418848



Nipple 1/2"÷1/4" - L=24,5 mm - brass

Electrolux 0K9028

433725



Nipple 1"÷3/4" - L=37 mm - brass

Electrolux 0E5531

431859



Nipple 1/4"÷1/8" - L=16 mm - brass

Electrolux 0K9026 0KG595

435655



Nipple 3/4"÷3/8" - L=28 mm - brass

Electrolux 0L0479

441071



Nipple 1/2"÷3/4" - L=29,5 mm - brass

Electrolux 072454 0E3417 0E5431 0K9029

519269



Nipple 3/4" M - L=70 mm - brass

Electrolux 0E5523 0K1628

441725



Nipple 3/4"÷3/4" - L=30 mm - brass
Øint. 14/16 mm; CH30

Electrolux 049510

519266



Nipple 1" M/M 13 mm - L=40 mm - brass
with hole thread M10

Electrolux 0E5544 0H2331 0K7098 0K7681

322665



Nipple 3/4"÷3/4" - L=30 mm - brass

Electrolux 057862 072457 0E0446 0K9024
0KG596 0K1452 0KL750 0W3306

418313



Rubber holder 90° G1/2" - outlet Ø 14 mm
brass-nickel

Electrolux 0E5489 0E5510 0K8721 0K8723
552217100 552217300

Ball valves, Pipe fittings

518778



Rubber holder G1/2" - outlet Ø 14 mm
Ltot.=38 mm

Electrolux 0E5529 0K8718 0K8725 0L0040

439016



Rubber holder Ø 14 mm L=58 mm - brass

Electrolux 0E3080 552213900

440933



Rubber holder G1/2" - outlet Ø 15 mm

Electrolux 087918 0C1962 0E2895 0E5054

519194



Regulator L=80 mm

Electrolux 0E5591 0K7582

438446



Rubber holder F3/4" - Ø 14 mm
Ltot.=55,5 mm

Electrolux 0E5513

433571



Pipe fitting 90° 1/8" - rubber holder Ø 4,75 mm

Electrolux 0H2303 0K7612

318108



Rubber holder G3/4" - outlet Ø 25 mm - brass

Electrolux 0E0159 0E2594 552214028

418782



Pipe fitting 90° Ø 1/2" FF
dim. 38,5x38,5 mm

Electrolux 0E3016 0K9040 0KC485 742111320

435654



Rubber holder G3/8" - outlet Ø 12,5 mm
Ltot.=36 mm

Electrolux 0L0477

319206



Pipe fitting 90° Ø 3/4" FF
dim. 41x41 mm

Electrolux 0E0686 0HN504 0K9042 0KE705

Ball valves, Pipe fittings

441030



Pipe fitting 90° Ø 1" MF

Electrolux 0E5060

538797



T-connection 14-G1/2"-14 mm
dim. 65x40x30 mm

Electrolux 0E5508 0K8722 0L0652

431694



Pipe fitting 90° 1/2" x 15 mm

Electrolux 0E5068 0K9050 0K9061 0KX071

519318



T-connection Ø 1/2" - L=43x34 mm -
brass

Electrolux 0E5421

337708



Pipe fitting 90° 1/2" MF

Electrolux 027024 0G6161

419338



Special pipe fitting 1/2"MF

Electrolux 0H2010 0K6652 460816102

524461



Pipe fitting 90° 3/4" M/F

Electrolux 049679 089854

519271



T-connection 3/4" F - L=51x40,5 mm -
brass

Electrolux 072456 0E5522 0K9043 0W0ZYB

441002



T-connection Ø 14-14-14 mm

Electrolux 0E5423 0K8724

438482



Y-connection Ø 12-12-12 mm

Electrolux 048195

Ball valves, Pipe fittings

419296



Connection M21
 Ø 14 mm; Ø 20 mm; H= 25 mm

Electrolux 0KU607 428020700

441003



Bush 1/2" - L=27 mm - brass

Electrolux 0E5420

423547



Nut Øint 20 mm Htot= 65 mm
 flange Ø 45 mm

Electrolux 0E0135 0E0527 0H2141 0K6953

438990



Bush 3/4 " - L= 30 mm - brass

Electrolux 0E5525

518851



Pipe fitting

Electrolux 0E5495 0H2583

431872



Nipple Ø 18 mm - 1/2"M

Electrolux 0E0168 0K9062

441073



Double Pipe fitting
 dim 87x80x40mm brass / suitable for pipes of energy recover device

Electrolux 0E5231 0K7517

431858



Nipple Ø 22 mm - 3/4"M

Electrolux 0E0151 0K9064

418965



Bush M20 Ø26x32 mm - brass

Electrolux 0K9020

327254



Pipe fitting Ø 3/4"-1/2" MF

Electrolux 0E5055 0K9033 0KE704

Ball valves, Pipe fittings

439462**Mini ballvalve FF 1/2" - PN10 - L=48 mm**

Electrolux 082924 0L1351

427724**Mini ballvalve MF 1/2" - PN10 - L=48 mm
CH25**

Electrolux 0K3955 0KC228 0KJ305 475728502

441675**Backflow preventer dishwasher
rubber holder Ø 12 mm**

Electrolux 005762 049332 0E5648 0L1892

317132**Non-return valve**

Electrolux 0C9753 0L0264

438302**Non-return valve 3/4"FF**

Electrolux 0E5119 0K7576

Drain valves

613810



Electric drain valve NC 24V 50/60Hz
outlet thread M47, overflow pipe connection
Øext 38 mm/Øint 32 mm, inlet Øext 55 mm/ Øin 49 mm

Electrolux 0L0950 0L2506

349880



Motor-operated valve 3/4" FF 3W 24V 50/60Hz
cable L=250 mm with 3-ways connector MOLEX

Electrolux 059004 0L0949

301679



Motor-operated valve 3/4" FF 3W 24V 50/60Hz
cable L=250 mm; 3-ways plug INARCA

Electrolux 0L1199

Boilers

418432



Boiler 1 Heating element
WT730 - WT760 - WT790 - FT36 - FT50 - FT72

Electrolux 0E3086 0K8520

317860



Boiler 2 heating elements
Ø 200x475 mm

Electrolux 0L0990 0L1955

419339



Boiler 2 heating elements [Kit]
Ø 190x510 mm - RT100-140

Electrolux 0E5067 0K8171 0L1855 482256400

441007



Boiler 2 heating elements [Kit]
Ø 200x480 mm - new RT 10-180; 100-140

Electrolux 0E5954 0L1856

Boilers

414978



Gasket Ø 240x280 mm
holes Ø 9 mm

Electrolux 047153

418875



Support boiler
dim. 80x64x56 mm

Electrolux 0KU294


435061



Boiler insulation
415x655x9.5 mm

Electrolux 0E5541 0L1525

582392

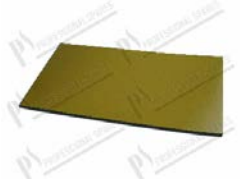

Boiler insulation 670x450x13 mm

Electrolux 049863

582208



Bracket
dim. 58x37 mm

Electrolux 0L3689

519215



Plug 1/8"
Ø 9,6 mm; h=10,7 mm

Electrolux 0E2887 0H2614 0K9034 0K9035

Hinges

419518



Hinge

Electrolux 0E5328

Lockings

613884



**Magnet 63x18x7 mm
RCT/WTM**

Electrolux 0L1001 0L2534

319788



Door latch

Electrolux 0L1528

418088



Magnet support

Electrolux 0H2287 0K7551

347774



Handle support

Electrolux 047730 075926 0E5096 0K2239

418599



Handle 130x47x3 mm

Electrolux 0E2978

Transmission components

317850



Shaft Ø 5x53 mm - M5

Electrolux 0L1449

301788



Shaft for finger link, compact new RT
shaft Ø 15x58 mm - Ø 20xh235 mm - flange Ø 130 mm - wedge 5x20 mm

Electrolux 0L1215 0L1308

430711



Shaft Ø 20x880 mm

Electrolux 0KV824 428068201

301789



Shaft for finger link, new RT
shaft Ø 20x95 mm, Ø 20xh330 mm - flange Ø 130 mm - wedge 5x20 mm

Electrolux 0L0845 0L1309

419316



Drive shaft

Electrolux 0H2172 0K7280

440942



Drive shaft Ø 20x140 mm
2 holes M8

Electrolux 0E5005

519001



Drive shaft

Electrolux 0E5839

434028



Glide shoe 60x40x15 mm
hole Ø 20,7 mm

Electrolux 0E5006 0K8173 0KE503 482257600

419632



Drive shaft Ø 20x562 mm
flange Ø 130 mm

Electrolux 0E5145 0K8287

418619



Motor shaft Ø 20/25xLtot. 187 mm

Electrolux 0E3575 491412700

Transmission components

537321



Shaft Ø 20x785 mm

Electrolux 0G3383 0K7706 481728500 ST0288700

429934



Chain for 180° curve L=4330 mm

Electrolux 0E5307 0K7231 0K8646

433390



Chain link flat

Electrolux 0E2394 0K8644

429548



Chain for 90 degr curve L=2370 mm

Electrolux 0E5296 0H2150 0K7232 0K8647

433089



Chain link with carrier

Electrolux 0E2395 0H2530 0K8645

435107



Toothed belt 61 teeth L=610x16 mm

Electrolux 0E5050 0E5188 0H2514 0K8235
48237601

418020



Toothed belt 65 teeth

Electrolux 0E5404 0KA524 0KG466 482376102

419336



Toothed belt 84 teeth L=1066,80x19,3 mm

Electrolux 0E0774 0HB226 0K6692

433327



Toothed belt 90 teeth L=114x20 mm

Electrolux 0E0001 0K6689 0K6691 461044303

419325



Pulley Øint 20 mm

Electrolux 0E0205 467607802

Transmission components

418177



Toothed pulley - 20 teeth
hole Ø 20 mm

Electrolux 0E5502 0K8230

440912



Toothed pulley Ø 97x31 mm - 30 teeth
hole Ø 20 mm - wedge 6x3 mm; lock screw M5

Electrolux 0E5146

419478



Toothed pulley Ø int 25 mm

Electrolux 0E3113 461044404

418241



Toothed pulley Ø 102x40 mm - 24 teeth
hole Ø 25 mm - wedge 8x3,5 mm; lock screw M5

Electrolux 0E3112 461044409

419717



Pulley Ø 35x19 mm
shaft hole Ø 8.3x25 mm

Electrolux 0E2193 482624300

441066



Toothed pulley Ø 105x31 mm - 32 teeth
hole Ø 20 mm - wedge 6x3 mm; lock screw M4

Electrolux 0E5051 0K8234 0KU562

435104



Toothed pulley Ø 83x31 mm - 25 teeth
hole Ø 20 mm - wedge 6x3 mm; lock screw M4

Electrolux 0E5147 0K8232

418392



Pulley Ø 20x186x27 mm

Electrolux 0E3748

441067



Toothed pulley 91x31 mm - 27 teeth
hole Ø 20 mm - wedge 6x3 mm; lock screw 4.5 mm

Electrolux 0E5049

433392



Gear wheel Ø 130x45 mm

Electrolux 0E5300 0E5412 0K7229 0KB582

Transmission components

419839**Gear wheel Ø 20x240 mm**

Electrolux 0E0105 0K6853 464367802

419572**Pinion Ø 89,50xh28 mm - 21 teeth**

Øint. 20 mm; for wedge 6 mm

Electrolux 0E3587 0KI424 491355000

Structural components

613678**Panel, user interface**RTM140/WTM140 - RTM165/WTM165 -
RTM180/WTM180 - RTM200/WTM200 -
WTM250 - WTM300

Electrolux 0L0834


508682**Right support 687x70x42 mm**
NEWRT

Electrolux 0L1047

301682**Cover 415x520 mm**

WT44 - WT66

Electrolux 0L1202

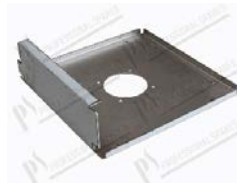434063**Support fan blade 285x288 mm**

Electrolux 049887

434256**Support motor 545x205 mm**

Electrolux 0E5751

301591**Protection 350x475 mm**RTCS90/WTCS90 - RTCS140/WTCS140 -
RTCS180/WTCS180 - RTCS250/WTCS250

Electrolux 0L1107

Structural components

419817



Mooving section

Electrolux 0E2914 491351500

301648



Splash guard
L=320 mm

Electrolux 0L1168

338602



Control panel

Electrolux 0E5947

318082



Splash guard L=885 mm

Electrolux 0L0868


583874



Protection
dim. 140x640x30 mm

Electrolux 0G3389 ST0282900

584957

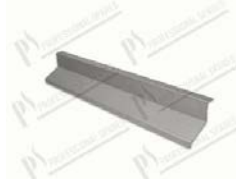

Splash guard
dim. 520x68x78 mm

Electrolux 0E5824

613911



Cover 522x412 mm

Electrolux 0L1023

418570



Gasket L=736 mm - INOX
dim. 30x736x24,5 mm

Electrolux 0E2941

613924



Cover 1011x411 mm

Electrolux 0L1034

438995



Splash guard

Electrolux 0E5490 0KJ650

Structural components

318080**Splash guard**

Electrolux 0E5848

583490**Splash guard L=1211**
dim. 1211x36x30,5 mm

Electrolux 0L0896

Bearings

429471**Bearing with flange Ø 20x59x37,3 mm**
flange 112x60,5 mm

Electrolux 0E3569 491354700

419464**Bearing Ø 40/14x20 mm**

Electrolux 0E0114 0K7709 481728900

Finger Links

301795**Basket finger link left**
dim: 73x36x3 mm - WT

Electrolux 0L0843 0L1315

301794**Basket finger link right**
WT

Electrolux 0L0842 0L1314

Finger Links

335786



Basket finger link

dim. 30x11x82 mm
RT 100 - 140 / RT 1800 - 2500 / D1700 - 1800
/ H511 -512 / WT 95 - 100 -140 / Z 180 - 250

Electrolux 0E5007 0K8166 482252100

432947



Finger link for dishes

LN 34-46-72

Electrolux 0K7068 475794703_

335787



Basket finger link

82x30x12 mm
D530-580-680

Electrolux 0H2107 0K0003 0K7138

417970



Finger link

dim. 116x70x82 mm; in white plastic
FT36-50-72W, WT730-760-790W

Electrolux 0E1607 0K8142 482191000

338656



Baskets finger link

A/CA, A/CMM90-180, CT

Electrolux 046842 0E2896 0K8637 520275200

433179



Intermediate connecting link

dim. 135x37x12 mm; in white plastic

Electrolux 0E0024 0K6666 0K6667

419441



Finger link

dim. 140x70x50 mm
WTF2-3-4. WT730-760-790, FT 36-50-72

Electrolux 0KU566 428083300

433971



Feeding ladder 460x450x70 mm

Electrolux 0E5779

418089



Finger link for dishes

dim. 140x87x72 mm; in white plastic
FT36-50-72W, WT730-760-790W

Electrolux 0E0023 0E2196 0K7067 0K8238
475794701 475794703 482383000

301786



Feeding ladder 480x430x45 mm

rinse M600 NEW RT, with swivel joints for baskets

Electrolux 0L0844 0L1306

Finger Links

318144



Feeding ladder
dim. 1320x480 mm; with 5 pushers

Electrolux 0L0956 0L1304

419011



Kit for cord welding

Electrolux 006956

519007



Feeding ladder 1405x482 mm

Electrolux 0E5834

430050



Roller guide - for shaft Ø 6 mm
Ø 8,5x30x21 mm; screw M8x12 mm

Electrolux 0E3530

301783



Runner 100x480 mm
M1165 New RT

Electrolux 0L0879 0L1303

417719



Roller Ø 50x71 mm
for conveyors belt; complete with screws and nuts

Electrolux 0E5297 0H2035 0H2176 0K7299
520279500

346121



Conveyor cord Ø 12 mm - green (sold by meter)

Electrolux 0HB073

418072



Roller Ø 50x71 mm
hole Ø 10,5 mm

Electrolux 0E5308 0K8642 520308900

418239



Conveyor cord Ø 15 mm - green
(sold by meter)

Electrolux 0E3584 0S1230

429903



Roller Ø 50x505 mm
shaft Ø 6x521,5 mm

Electrolux 0E3529

Finger Links

418438



Shaft Ø 8x640 mm

Electrolux 0K8588 490175800

419718



Connection plate WT730

Electrolux 0E2194 482441100

433393



Shaft for finger link Ø 8x650 mm ft (In)

Electrolux 0E0200 0K6685 0KE283

519192



Plaque 235x38 mm

Electrolux 0E5597

417946



Plastic rod 520x17x8 mm

Electrolux 0E1613 0E1658 0K8146 0K8147
0TT760 482197200 ST04821972
00

417972



Bracket
dim. 88,4x78x45 mm

Electrolux 0E5367 0KI556

300490



Shaft for finger link Ø 20x929 mm
with hole for wedge

Electrolux 0G4029 ST0288701

335793



Plaque 30x50x12 mm

Electrolux 0H2173 0K7282

419432



Protection 640x73x4 mm
with hole Ø 4.5 mm

Electrolux 0E3122 0K8521 0KB647

419604



Screw M6 L=32 mm - hub Ø 8 mm

Electrolux 046843 0H2532 0K8636 0KB864

Finger Links

430008



Protection pin Ø 10x14 mm M6 - Ltot. 24 mm

Electrolux 0KR628

429875



Screw M8x10 mm Ltot.=27 m

Electrolux 0KS663 491364700

Safety groups

417854



Pressure reduction valve 1/2"

Electrolux 0E0192 0H2291 0K7561 0K8529
0KE428 0KE553

317785



Water meter analogue Ø 15 mm Ltot=110 mm PN16

Electrolux 0K7904

435048



Chrome plated Safety valve MF 1/2" H= 65 mm
DN15; gasket Ø 12x18x2 mm

Electrolux 0E5530 0K8532 0L4508

585474



Flow regulator valve
L=77 mm; DN6

Electrolux 0L4083

420387



Safety valve 4,0 bar 3/4" F
tipo SYR 6104.4 - chrome plated

Electrolux 0E1622 0H2106 0K7134 0K8005

508423



Flow regulator 1/2"

Electrolux 0L4082

Slide Ways - Shelf Supports

429630



Glide rail 400x8x16 mm

Electrolux 0E5400 0K8439

419359



Right/left runner
RT10 / RT180 / WT90 / NERT / HAB / Z18

Electrolux 0E0215 0K7695 0KE440

429608



Glide rail L=1090x16x8 mm

Electrolux 0E5397 0K8440 0KE538 482617502

335693



Runner
D580

Electrolux 0H2208 0K7353

441041



Left runner support

Electrolux 0E5686 0KI207

613676



Left door runner 55x55x725 mm - new RT

Electrolux 0L0833

441042



Right runner support

Electrolux 0E5685 0KI208

613675



Right door runner 55x55x725 mm DX - new RT

Electrolux 0L0832

613706



Door catch

Electrolux 0L0861

440910



Runner 837x32x24.5 mm
RT190 / RT3400 / D2700 / H512

Electrolux 0E5151 0K8170

Slide Ways - Shelf Supports

519002



Runner RT Ltot=1500 mm

Electrolux 0E5838

459741



Basket guide L=1140 mm

M1165 NEWRT

Electrolux 0L1704 0L2593

459735



Basket guide L=575 mm

Electrolux 0L1324 0L2594

317956



Basket guide L=530 mm

Electrolux 0L1500 0L2300 0L2523 0L2591

Handles

412223



Plug

Ø27 mm - h 14 mm

Electrolux 081727 081778

Manometers, Safety Valves

416746



Manometer -1÷+3 bar Ø 60 mm
connection on vertical Ø 1/4"

Electrolux 0K8197

Knobs

435077



Knob Ø 44 mm
D shaft hole Ø 6x4,6 mm

Electrolux 048273 048288 048402 0E5217

435776



Knob Ø 55 mm
D shaft hole Ø 6x4,6 mm

Electrolux 048371 048920 0KG192

432409



Knob Ø 42 mm
D-shaft hole Ø 6x4,6 mm

Electrolux 0E3019 0H2189 0H2338 0K7442
0KC012

412063



Knob Ø 42 - h25 mm
D-shaft hole hole Ø 6x5 mm

Electrolux 047693 0E5284

Small Mechanical Parts

324268



Snap-ring Øint. 6.5x0,8 mm INOX

Electrolux 0L2522

418872



Insert plug

Electrolux 0E5379 0KU305 482515200

532735



Snap-ring Øint. 9x1 mm INOX (10 pcs)

Electrolux 027023 067004 0E5500 0K8964

582520



Gasket
dim. 79/41x31x13/39 mm

Electrolux 0L1471

325128



Snap-ring Øint. 18,5x1,2 mm - INOX

Electrolux 0E0108 0E0832 0HM630 0K8969

327251



Antivibration Ø 20 - M8x20 mm

Electrolux 0E5344 0K6790

438718



Snap-ring INOX Ø int. 28x1,5 mm

Electrolux 0E5152 0K8970

439019



Antivibration Ø 20xh20 mm - M6x16/9 mm

Electrolux 0E2251 0H2029 0K6787

317844



Snap-ring Ø 56,4x2 mm

Electrolux 0L1189

435047



Antivibration Ø 25xh20 mm - M8x20 mm

Electrolux 0E0129 0H2030 0K6786 0K6789
463977807

Small Mechanical Parts

419730



Flange bushing \varnothing 8x12 mm - \varnothing 16 mm -
H=8 mm

Electrolux 0E5321 0K8635 520197100

419394



Wedge 8x7x36 mm

Electrolux 0E0107 0K8975

431851



Flange bushing \varnothing 9x10xh16 mm

Electrolux 0H2619 0K9045

419727



Cotter pin \varnothing 2x16 mm

Electrolux 0E2291 0K8898

435066



Bushing \varnothing 20x25/33x41 mm

Electrolux 0E5043 0K8236

419647



Cotter pin \varnothing 3,2x40 mm

Electrolux 0E2294

439006



Wedge 6x6x25 mm - INOX

Electrolux 037284 0E5048 0E5267 0K8973
0KN078

518686



Hexagonal nut M24
H=18 mm; thread for grub screw M8

Electrolux 0L0151 0L1712

418258



Wedge 6x6x36 mm

Electrolux 0KU082

534076



Cap nuts M6

Electrolux 034496 0TH077

Small Mechanical Parts

358190



**Hexagonal nut M10 - H=8 mm INOX
CH17**

Electrolux 0E0662 0HA151 0K8938

519199



Hexagonal nut 3/4" - H=7 mm

Electrolux 0E5056

441924



Hexagonal nut M14x1,5 mm

Electrolux 049268

507468



Lock nut G1" 1/2 - H=8,5 mm

Electrolux 0L3130

336328



Hexagonal nut 3/8"

Electrolux 027414 0H2611 0H8269 0K9016

519321



Hexagonal flanged nut M5 INOX

Electrolux 091346 0A9554 0C5309 0C5317
0KG221 0L2469 0Q0010 0Q0011

440635



**Hexagonal nut M20 - H=5 mm
CH26**

Electrolux 0E5424

518852



Hexagonal flanged nut M6 INOX

Electrolux 0H2562 0KJ537

441728



**Hexagonal nut M20x1,5 mm
H=10 mm; CH30**

Electrolux 049436

440928



Hexagonal flanged nut M8 INOX

Electrolux 0E5063 0K8708 0W1S5X 0W4233

Small Mechanical Parts

418034



Hexagonal nut M6 - H=11,5 mm
INOX

Electrolux 0K8941 732311640

418209



Spacer Ø 6x10x9 mm

Electrolux 0KU220

438898



Spacer Ø 14,2x17,2x10H mm

Electrolux 0E5123 0E5801 0K7241 0KG459

419466



Spacer Ø 20x40x12 mm

Electrolux 0E0204 0K7696 0KG483 481716700

419287



Spacer Ø 20,5x40 mm

Electrolux 0KW777 428069500

310306



Double wire hose clamp Ø 7,8÷8,3 mm

Electrolux 0C7120 0E5993 0L0082 0L0815

321177



Double wire hose clamp Ø 9,3÷9,9 mm

Electrolux 0L0083

438480



Hose clamp Ø 12÷22/9 mm - INOX

Electrolux 007019 046797 048126 049888
065121 0835823600 0C5567 0G2046
0KF382 0KX145

441699



Hose clamp Ø 25÷40/9 mm - INOX

Electrolux 047578 049446 049772 070318
0K0198 0K8980 0KB300 0KG600
0L2280 0L2728

438464



Hose clamp Ø 32÷50/9 mm - INOX

Electrolux 046566 046878 060407 066056
0E2686 0KB302 0KX143 0L2649

Small Mechanical Parts

518655



Hose clamp Ø 40÷60/9 mm - INOX

Electrolux 0E3461 0L0193

416174



Hose clamp Ø 90÷110/12 mm - INOX

Electrolux 046950 047297 072389 072475
0E5558 0K8987 0KI942 0KL948

433052



Hose clamp Ø 16÷27/12 mm - INOX

Electrolux 0E0900 0E5120 0K8977 0KL951
0W0ZTU 0W1094 0W1CET 0W1M6X

317920



Hose clamp Ø 100÷120/12 mm - INOX

Electrolux 0L0915

438463



Hose clamp Ø 50÷70/12 mm - INOX

Electrolux 046855 065537 072582 072583
0K8983 0L2463 0W02A7 0W02A8
0W0ZT8 0W0ZU4 0W1CEX 0W1GA7

459506



Hose clamp Ø 200÷220/12 mm

Electrolux 0L2551 0TH122

329931



Hose clamp Ø 70÷90/12 mm - INOX

Electrolux 046909 0E0138 0K0200 0KB304
0KI583 0L0914

441606



Hose clamp Ø 210÷230/12 mm

Electrolux 048222 048436 0E2276 0K7106

441709



Hose clamp Ø 60÷80/12 mm - INOX

Electrolux 046478 046853 065047 0E0992
0K0199 0K8985 0K8986 0KZ022
0W1KBZ 0W3295

438477



Grub screw M4x5 mm

Electrolux 047846 0H2563

Small Mechanical Parts

419644



Grub screw M5x12

Electrolux 0E5301 728836609

418167



Shaft Ltot= 60 mm

Electrolux 0E0127 0K7711 481729200

582261



Bush for brand

Electrolux 075599

418781



Plug

Electrolux 0K9038 0KG594

317813



Plug M20x1.5 - Ø 28 mm

Electrolux 0L2114 0L3627

436273



Nut

Electrolux 0K8683 0K8943 0W1777

434253



Hose support Ø 11,5 mm

Electrolux 0E5730 475763204

433326

Locking ring 20x32x14 mm
with M6 locking screw

Electrolux 0E5384 0K8622

440618

Cross; suction protection
dim. 100x100x31 mm

Electrolux 0E5476 0L0382

301755

Glide shoe - New RT
hole Ø 14 mm - 80x40x18 mm

Electrolux 0L1275

Small Mechanical Parts

419472



Bearing 80x35x35 mm

Electrolux 0E0207 0K7704 0KG481 481728300

519258



Clamp

Electrolux 0E5566 0KX014

418092



Slidebearing
hole Ø 20 mm - 84x40x15 mm

Electrolux 0E3744 0K8595 491370400

301758



Bolt L=49 mm

Electrolux 0L0846 0L1278

440791



Plug M20x1,5

Electrolux 049502

430145



Bolt Ø 6,3x450 mm

Electrolux 0E0118 0K6734

418055



Steel cable L=1800 mm
for counterweight

Electrolux 0E0008 0K7976 482014300

441040



Bolt Ø 10x142mm

Electrolux 0E5693 0K8331

418975



Steel cable L=1830 mm
for Fligh type door

Electrolux 0E2951 0K8563 490145200

415783



Bolt

Electrolux 046870

Small Mechanical Parts

312809



Tooth lock washer M4

Electrolux 0TH043

432395



Flat washer Ø 5,3x15x1,2 mm

Electrolux 0C5312 0TH039

308243



Tooth lock washer Ø 5,3x10 mm

Electrolux 0Q0008 0TH044

435493



Set of rings 6,4x12,5 - 50 pz

Electrolux 027022 067332 0H2005 0L1670

200028



**Tooth lock washer M10 Ø 10,5x18 mm
DIN 6798A**

Electrolux 0KS502

432605



Flat washer M6 Ø 6,4x11,6x1,6 mm INOX

Electrolux 0K8947 0U2043 0W1TR8 734115309

438481



**Flat washer Ø 5,2x10x1 mm (10 Pcs)
UNI 6592**

Electrolux 048144 068024

434574



Flat washer M6 Ø 6,6x18x1,6 mm INOX

Electrolux 0KM402 0L0146

612770



Flat washer Ø 5,5x10x1 mm - INOX

Electrolux 0E1119 0K8946 0Q0012

319730



Flat washer Ø 8,4x17 mm

Electrolux 0C6789 0C6790 0E0124 0HN200
0K8948 0W1S2E 0W1S6V 74022053

Small Mechanical Parts

419639

Flat washer Ø 8,6x23,6x2 mm

Electrolux 0K8949

417868

Key

Electrolux 0E0185 0K7708 0KE443 0KL042

323377

Flat washer Ø 10,8x20 mm

Electrolux 0E1859 0K8950 0W0ZWX 0W10G7
0W1D96 0W1JNL**337646**

Screw M5x9 mm - Ltot. 20 mm

Electrolux 050168 088338

324264

Flat washer Ø 16x24x1 mm

Electrolux 0L2174

418446

Screw

Electrolux 0K7606 0K8744

418754

Flat washer Ø 21.3x36.5x3 mm

Electrolux 049435 0E0203 0E2292 0H2538
0K8952 0KG602 734119209**358174**

Screw M5x20 mm INOX

Electrolux 0K8745 0KI269

324270

Washer Ø 7,5x24xh2,7 mm

Electrolux 0L2521

419143Screw M8x16 mm
Ø 18.5 mm, Ltot 20 mm

Electrolux 0KJ540 0KK093

Small Mechanical Parts

429749



Screw TE M8x12 mm

Electrolux 0KE147

335842



Screw M4x9 INOX

Electrolux 0H2594 0H2595 0K8930 0K8931
0KD931

419319



Screw TE M8x35 mm

Electrolux 0K8920

430021



Screw TE M8x60 mm INOX

Electrolux 0KJ407 725246340

441034



Screw TE M8x76 mm - INOX

Electrolux 0E5792 0KI020 725246545

518830



Screw M6S 8x90 mm RFR

Electrolux 0E3104 0K8924

Springs

441901



Compression spring

Electrolux 049584

419425



Torsion spring

Electrolux 0E0198 0K7942 0KB619 481987500

439002



Compression springs Ø 15,5x51 mm

Electrolux 0E5045 0E5189 0K8211

419459



Tension spring Ø 10 mm - without hooks L=50 mm

Electrolux 0E0199 0K7269 0KE381 477627601

435153



**Roll spring W=25 mm Ø 45 mm
L=1600 mm; force 53 N**

Electrolux 0E5002 0E5158 0K8168 482252803

518685



Spring for motor-gear Ø 25,5x50xh3,5 mm

Electrolux 0L0152

435151



**Roll spring W=38 mm Ø 45 mm
L=1600 mm; force 79 N**

Electrolux 0E5167 0K8169 482252804

435154



Spring latch

Electrolux 0E5022 0E5157 0K8296

508004



**Roll spring W=38 mm Ø 49 mm
with flange 25,5x66x2 mm**

Electrolux 0L3118

613702



Shaft for bush Ø 10x48,5 mm

Electrolux 0L0857

Springs

441070



Spacer

Electrolux 0E5454 0K7600 478561001

519198



Spring 45x1 mm

Electrolux 0E5058

439007



Support M8
Screw L=75 mm, hole Ø 5 mm

Electrolux 0E5042 0K8213

301572



Bush teflon Ø 45x23 mm

Electrolux 0L0858

440920



Spring for rinse arms

Electrolux 0E5505

435068



Blade spring bearing L=58 mm
Ø 11x30 mm

Electrolux 0E5001 0K8167 482252700

438682



Spring retainer

Electrolux 0E2898 0K8295

301650



Bushing Ø 11x29,5/45x23 mm

Electrolux 0L1170

438894



Spring

Electrolux 0E5852

Doors

613681

Door assembly
dim. 710x445x50 mm

Electrolux 0L0837

613866

Door assembly 133,5x71 mm

Electrolux 0L0989

Rollers

412077

Roller Ø 32x33 mm

Electrolux 046841

311979

Roller Ø 15,5x40x17 mm
Rack type from ser. Nr 147

Electrolux 0L2520

418058

Roller Ø 8x40 mm

Electrolux 0E0126 0K7694 481716500

418665

Roller Ø 12x48/64x17 mm

Electrolux 0KU246

335789

Roller Ø 15,3x40x16 mm
Rack type up to ser. Nr 146

Electrolux 0E5046 0K7281 0K7307 0L2443

Thermostatic steam trap

425794



**Thermostatic steam trap 90° Ø3/4" MF
(with connection) brass**
PMA 16 bar - TMO 250°C

Electrolux 0E0153 0K6189 0KG499

421494



Kit capsules "E" for steam trap

Electrolux 0H6535 0H9961 0K2999 0K3699
0KB403 0KB410 0KJ781

Shaft sealing

412572



**Shaft sealing Ø 24x10x14 mm /
counter-seal Ø 26x13x8 mm**
for pump with shaft Ø 11 mm

Electrolux 048627 048983 0H2255 0H2523
0K8388 0L0490

412354



**Shaft sealing Ø 24x12x16 mm /
counter-seal Ø 26x12x8 mm**
shaft sealing in TEFLON, pump shaft Ø 13 mm

Electrolux 0H2154 0H2155 0H2522 0K7246
0KA834

610895



**Shaft sealing Ø 24x11x15 mm /
counter-seal Ø26x14x8 mm**

Electrolux 048188 0L0340 0L1437

342632



**Shaft sealing Ø 39x16x16 mm /
counter-seal Ø 42x21x8 mm**
for pump FIR 2275

Electrolux 049249 049764 0G1664 0K7896

610885



**Shaft sealing Ø 24x12x15 mm / contro
tenuta Ø 26x14x5,5 mm**

Electrolux 0L1367 0L1936

428145



**Shaft sealing Ø 35x12x20 mm /
counter-seal Ø 25x13x8 mm**

Electrolux 0E2721 0E2974 0K7741 0K8340

Thermometers

416427



Thermometer Ø 52 mm 0÷120°C
coated capillary L=2500 mm; bulb Ø 6x38 mm

Electrolux 048564 0E5477 0E5546 0E5793
0PE178

419975



Thermometer 0÷120°C 48x48 mm
capillare L=3000 mm; bulbo Ø 8x49 mm with bulbe housing

Electrolux 0E5084 0H2067 0H2068 0K7028

419357



Thermometer Ø 55 mm 40÷120 °C
capillary L=5000 mm, bulb Ø 8x50 mm

Electrolux 0E5097

435099



Thermometer 0÷120°C 58x25 mm
coated capillary L=3000 mm; bulb Ø 6x24 mm

Electrolux 048544 0E5478

438316



Thermometer digital Ø 59 mm
transformer PRI200V 500HZ SEC 10V 0.3A,
cable L=1200 mm, probe NTC Ø 6.5x47 mm
cable L=1800 mm

Electrolux 0E5234 0KN793

436188



Thermometer 0÷100°C 56x25 mm
capillary L= 4000 mm

Electrolux 0E5553

434976



Thermometer 0÷120°C 48x48 mm
mod. 915; coated capillary 5000 mm; bulb Ø 6x36 mm; for boiler and dishwasher tanks

Electrolux 0E5675 0K7790

416425



Thermometer 0÷100 56x25 mm
capillary Ø 2,4x2000 mm in PVC - dim. 58x25 mm

Electrolux 046553 066350

416426



Thermometer 0÷120°C 48x48 mm
mod. 915; coated capillary L=2900 mm; bulb Ø 6x36 mm; for boiler and dishwasher tanks

Electrolux 048525 0E5545 0K7789 0KB617

416444



Thermometer 0÷100°C 56x25 mm
capillary 1650 mm; bulb Ø 8,5x26,5 mm;

Electrolux 048084

Thermometers

435378



Digital thermometer LTS12PTI-2 with probe PTC L=3000
 PTC probe (-50+150°C); 24Vac/dc; capillary 3000 mm; bulb Ø 6x70 mm; mounting hole 71x29 mm

Electrolux 049943 0E5030 0K8269

435377



Digital thermometer LTS12PTI-2 with probe PTC L=5000
 probe PTC -50+150°C ; capillary 5000 mm; bulb Ø 6x70 mm; mounting hole 71x29 mm

Electrolux 049944 0E5090 482413401

418983



Thermometer
 probe Ø 8x50 mm - cable 5 mt - dima: 58x25 mm

Electrolux 0E5078 0E5093 0K8268

Handwheels

414366



Handwheel Ø 76 mm
 shaft hole 16x12 mm

Electrolux 0H2166 0K7266

Photocells

418390



Light barrier 250V
 cable L=1900 mm

Electrolux 0E3578 0KI255

Inverter and motor controls

301762

Inverter ATV11HU12M2E; deleted see details
supply PNC e serial number, replaced by 312782 e 312783

Electrolux OL1000 OL1282 OL1407 OL1913

613905

Inverter LUCA 12B 24Vac
3kW 230V 50/60Hz 12A; 5,5kW 400V 50/60Hz; dim. 110x45x154 mm

Electrolux OL1017

317980

Inverter ATV12H055M2 1 phase 200/240V 50/60Hz 8A
output 3 phase 0...200-240V 0...400Hz 3,5A; 0,55kW 3/4 HP 200/240V

Electrolux OL3457

301588

Inverter 3P 24Vac - 110-240Vac 50/60Hz
dim. 45x125x154 mm

Electrolux OL1036

324120

Inverter ATV12H055M2 1 phase 200/240V 50/60Hz 8A
output 3 phases 0...200-240V 0...400Hz 3,5A; 0,55kW 3/4HP 200/240V 50/60Hz; dim. 130x71x142 mm

Electrolux OL2511

613920

Inverter LUCA 18B 7,5kW 230V 50/60Hz 32A
15kW 400V 50/60Hz; dim. 110x45x153 mm

Electrolux OL1029

312782

Inverter ATV12H055M2 1 phase 200/240V 50/60Hz 8A [KIT]
output 3 phases 0...200-240V 0...400Hz 3,5A; 0,55kW 3/4HP 200/240V 50/60Hz

Electrolux OL2600

613904

Inverter LUCA 32B 7,5kW 230V 50/60Hz 32A
15kW 400V 50/60Hz

Electrolux OL1016

312783

Inverter ATV12H055M2 1 phase 200/240V 50/60Hz 8A [KIT]
output 3 phases 0...200-240V 0...400Hz 3,5A; 0,55kW 3/4HP 200/240V 50/60Hz

Electrolux OL2601

301702

Inverter LUCA 05B 3kW 230V 50/60Hz 12A
5,5kW 400V 50/60Hz - with switch breaker

Electrolux OL1018 OL1222

Inverter and motor controls

301777

Inverter LUCA 1XB 3kW 230V 50/60Hz 12A
5,5kW 400V 50/60Hz - with switch breaker

Electrolux 0L1297

Membranes

419567

Adhesive membrane 500x200 mm
WT100-WT150-WT730-WT760-WT790 HACCF

Electrolux OKU586 428050000

436010

Adhesive membrane 500x200 mm

Electrolux OKZP59 0L0244

507946

Adhesive membrane 160x255 mm

Electrolux OKZL30 0L0233

317827

Adhesive "ZANUSSI"
dim. 18x60 mm

Electrolux 0L1717

315227

Adhesive membrane 66x200 mm
[Electrolux]

Electrolux 0L1745

585663

Adhesive membrane 200x68 mm

Electrolux 0L3750

Printed Circuit Boards

435560



Button extension Ø 7x6,95 mm
for interface board

Electrolux 002670 0F0086 0G4921 0K8489

425198



Spacer (20 Pcs)

Electrolux 0C3750 0C3751 0G4212 0K5832
0K7071

435163



Motherboard
Alltronic RT HACCP dim. 435x170x20 mm

Electrolux 0E5979 0KI494 0W2283 428060100

301704



Motherboard, new RT
dim. 209x94 mm

Electrolux 0L1224

301771



Motherboard
MEC12R New RT

Electrolux 0L1291

311540



Motherboard
MEC12R RT SLAVE; WI

Electrolux 0L1738

315226



Motherboard
dim. 95x209 mm; WTCS - RCTS

Electrolux 0L1737

318130



Motherboard MEC12 RT 50/60Hz
dim. 250x70x130 mm

Electrolux 0L3461

301764



Motherboard
MEC12R New RT

Electrolux 0L1284

318131



Pcb MEC-12R without box
dim. 125x240 mm

Electrolux 0L3465

Printed Circuit Boards

324170



Motherboard
WTCS - RCTS dim. 208x93 m

Electrolux 0L1739

301676



Interface board
WT

Electrolux 0L1196

432426



Interface board
WT95-100-140 / Z180-250 / RT100-140 /
RT1800-2500 / D1700-1800 / H511-512

Electrolux 0E5289 0K8176

301614



Pressur sensor pcb
WT

Electrolux 0L1132

459758



Interface board
dim. 57x235 mm

Electrolux 0L3460

318129



Pcb

Electrolux 0L2510

315225



Interface board
dim. 57x235 mm; WTCS - RTCS

Electrolux 0L1736 0L2630

320836



PCB guard
for 301765

Electrolux 0L1484

301765



Interface board
HV NEW RT

Electrolux 0L0998 0L1285

317503



Cable L=6500 mm RJ11

Electrolux 0L2273

Probes

344978

**Temperature probe NTC**

bulb Ø 6x30mm; cable L=5000 mm; da -40 a +110 °C

Electrolux 0E5482 0K8278 482422302

417884

**Temperature probe PT1000**

bulb Ø 10x30 mm; Temp. -40 a +250°C

Electrolux 0E2234 0K7575 478086401

344758

**Temperature probe NTC**

bulb Ø 6x50 mm; PVC cable 2x0,35 mm; L=70 mm

Electrolux 049884

419486

**Clip**

Electrolux 0K6166 0KL600

344763

**Temperature probe NTC**

bulb Ø 10x44 mm; rast5 with faston 6,3x0,8 mm

Electrolux 049643 049666 0KR811

438988

**Pipe fitting for bulb**

Electrolux 0E5547 0K8442

431201

**Temperature probe PT1000**

D720-D780

Electrolux 0E0011 0H2293 0K7574

325057

**Temperature probe NTC -10/100°C**

dim. Ø 10x49 mm

Electrolux 0L2874

440939

**Temperature probe PT1000**

bulb Ø 6x50 mm; PVC cable 2x0,35 mm L=6000 mm

Electrolux 0E5990

436202

**Support 70x37x9 mm**

Electrolux 0L0366

Adhesive Gasket

440788



Velcro H=20 mm (sold by meter)

Electrolux 049931


435261



Adhesive EPDM gasket 8x3 mm (sold by meter)

Electrolux 046583 0L0689

441075

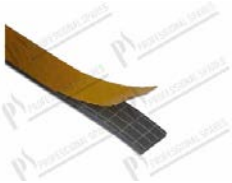

Adhesive EPDM gasket 20x4 mm (sold by meter)

Electrolux 0E2262 0E5225 0G5004 0K8669
0K9155

316488



Adhesive gasket (sold by meter)
maximum length of gasket 4mt

Electrolux 088581 0E5245 0K8587 0L0113

Gaskets for dishwashers

438479



Gasket 29x62x2mm

Electrolux 048070

311119



Gasket 70x50x50 mm
profil U

Electrolux 0L2311

Gaskets for dishwashers

311118



Gasket 70x51x51 mm
profil U

Electrolux 0L2167

317951



Gasket 36x25x12 mm
newrt

Electrolux 0L1597

613669



Gasket 560x565 mm

Electrolux 0L0827

441028



Gasket L=700 mm
profil U

Electrolux 047095 047513 047571 0E5559
0K8446 0W1306

613721



Gasket

Electrolux 0L0875

538754



Gasket RT10 L=680 mm

Electrolux 0L0611

Flat gaskets

329114



Flat gasket Ø 10x16x1,5 mm - Fiber

Electrolux 075646 0E5524 0KK028 552211000

349469



Flat gasket Ø 48x56x2 mm - Fiber

Electrolux 066088

336124



Flat gasket Ø 11,5x19x2 mm

Electrolux 0K6103 0K6660 0K8701 0W1778

441552



Flat gasket Ø 18x34x2,6 mm

Electrolux 048245

349462



Flat gasket Ø 11,5x24,5x2 mm - Fiber

Electrolux 067935

322586



Flat gasket Ø 30x43 mm

Electrolux 0E0136 0K6952 0KE329

440913



Flat gasket Ø 21,5x30x2 mm - Fiber

Electrolux 005921 0E5122 0G4147 0K6656
0KA777 0L1487 0L2402 552211003

317781



Flat gasket 1-1/2x7 / 8x3 /32 EPDM
Ø 21,3x38x2,3 mm

Electrolux 0L1088

344379



Flat gasket Ø 34x44x2 mm - Fiber

Electrolux 0E2240 0H2578 0K6137 0K8703

336288



Flat gasket Ø 14x24x4 mm - EPDM

Electrolux 0E5168 0K8270

Flat gaskets

414967

Flat gasket Ø 16x24,5x2 mm - EPDM

Electrolux 046925 049201

317953

Flat gasket Ø 15,2x24,2x2,8 mm

Electrolux 0L1560 0L2236

417847

Gasket Ø 4,4x8x2 mm

Electrolux 0E2976 0K6670 0KK144 0KL887

335933

Gasket Ø 7x22x2 mm in rubber

Electrolux 0H2211 0K7355

O-rings

**O-ring 1,78x**

435323	6,07 mm NBR	067898
531952	8,73 mm NBR	0Q0002
317701	9,25 mm SILICONE	0L2303
337070	11,11 mm EPDM	0U1041
534283	11,11 mm NBR	0E2836
435313	12,42 mm NBR	0Q0014
438361	14,00 mm NBR	047473
337098	15,60 mm EPDM	070347
415979	17,17 mm NBR	0K6222
438348	20,35 mm NBR	0L2166
416214	31,47 mm NBR	046861

**O-ring 2,40x**

441068	5,30 mm NBR	0E5034
431553	9,30 mm	0KR015
431451	15,30 mm EPDM	0KK043
432996	16,30 mm NBR	0K9001
438301	17,30 mm NBR	0E5118

O-rings

**O-ring 3,00x**

427860	19,20 mm NBR	OKR016
336208	22,00 mm NBR	OH2604
434029	28,00 mm EPDM	OE5062
438520	29,00 mm NBR	OE0142
337180	34,00 mm	070315
336059	49,50 mm NBR	OK9006
301756	50,00 mm NBR	OL1276
441759	64,00 mm EPDM	046865
431814	125,00 mm	OK9009

**O-ring 3,53x**

379455	32,93 mm EPDM	069468
589468	12,29 mm EPDM (20 pz)	OL1941
438223	26,57 mm NBR	027300
416280	34,52 mm NBR	027301
415640	41,28 mm NBR	047192
438592	42,86 mm NBR	065506
438483	44,45 mm NBR	048229
315338	50,80 mm NBR	075647
438737	60,33 mm NBR	068799
317841	65,10 mm	OL0923
438459	73,03 mm NBR	046366
416082	91,67 mm NBR	045462
416087	95,00 mm	047458
339998	102,00 mm	069531
438405	110,72 mm NBR	048327
441737	120,20 mm NBR	049033

441739**O-ring 4,00x110,00 mm NBR**

Electrolux 049894

438709**O-ring 5,70x44,20 mm VITON**

Electrolux OE0010 OHB234 OK7084 OKP724

Detergents

411085



Spray cleaner 500 ml

Electrolux OS0060

586777



Rinse C14 PLUS - 1 canister 5 lt

Product subject to some limitations of transport (ADR)

Electrolux OS2095

585498



Detergent powder C-23 (100 tabs)

Electrolux OS2392

589392



Liquid delimer; C30 - 2 x canister 5 lt
to eliminate residual calcareous; Product subject to some limitations of transport (ADR)

Electrolux OS2362

586774



Detergent C11 - 1 canister 5 lt

Product subject to some limitations of transport (ADR)

Electrolux OS2092

586775



Detergent C13 - 1 canister 5 lt

Product subject to some limitations of transport (ADR)

Electrolux OS2093

586776



Rinse C12 - 1 canister 5 lt

Product subject to some limitations of transport (ADR)

Electrolux OS2094

Dishwashing Baskets

441805



Basket 395x395xh200 mm - INOX for glasses

Electrolux 049365 867054

524348



Basket with saucers container 395x395x105 mm dim. 110x110x123 mm

Electrolux 049366 867055

441932



Basket 395x395xh100 mm - INOX for glasses plastic coated steel wire

Electrolux 049069 867053

412161



Basket 500x500xh120 mm - INOX for cutlery plastic coated steel wire

Electrolux 0S0058 983033

441733



Basket 395x395xh200 mm - sloped bottom for 16 glasses

Electrolux 049367 867056


441930



Insert for 14 saucers L=340xh90 mm

Electrolux 049071 867060


337352

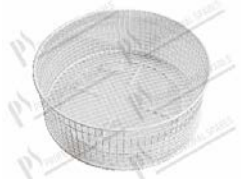

Round basket Ø 350xh135 mm

Electrolux 0HA031

440706

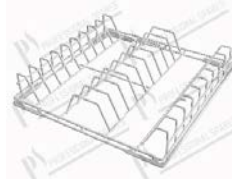

Basket 500x500xh100 mm - INOX 18 dishes plastic coated steel wire

Electrolux 0S0057

524661



Round basket kit with square frame 394x394 mm basket Ø 400xh140 mm

Electrolux 049269

610905



Basket 350x350xh150 mm - plastic, for glasses

Electrolux 0HA029 860138

Dishwashing Baskets

610907

Basket 400x400xh150mm - plastic, for glasses

Electrolux 0S1130 0U1033 860139

441823

Basket 500x500xh255 mm - with sloped bottom for 25 glasses

H=200 mm, Ø max 80 mm; made of: 438278+440488(3pz)+524648+524645

Electrolux 048975 069946

438417

Green 500x500xh105 mm - basket for 12 soup plates or cups
plates Ø max 240 mm; see item cod.610925

Electrolux 048891 0TH200

441842

Basket 500x500x155 mm - Blue with 16 cutlery containers
container Ø 110x145 mm

Electrolux 048965 069951

438540

Basket 500x500xh105 mm - Yellow, for 18 dinner plates
plates Ø max 240 mm; check item code.610925

Electrolux 048795 068702 867002

441850

Basket 500x500xh105 mm - Brown, cutlery basket
max capacity 100 pieces; check item cod.610909

Electrolux 048797 068467

441829

Basket 500x500xh155 mm - with inclined bottom for 25 glasses
H=100 mm, Ø max 80 mm; made of: 438278+440488+524648

Electrolux 048969 069944

337095

Container cutlery 55x130x100 mm
2 compart

Electrolux 0HA030

441825

Basket 500x500xh205 mm - with inclined bottom for 36 glasses
H=150 mm, Ø max 70 mm; made of: 38278+440488(2pz)+524644+524643

Electrolux 048973 069948

439807

Basket 500x500xh105 mm - plastic, for 8 trays
dim. 500x500 mm; check item cod.610910


Electrolux 048890 0L1963

Dishwashing Baskets

438418

**Basket 500x500x105 mm - blue for 16
soup or dinner plates**
plates max Ø 240 mm; check item
code.610925

Electrolux 048960

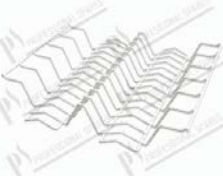524617

Insert 460x470x75 mm

Electrolux 048947

441844

Basket 500x500x150 mm - red for 5 trays
Stainless steel insert 5 sectors

Electrolux 048962

439530

Basket 540x490x110 mm for 6 trays - red

Electrolux 068701

Feet

349140

Foot support Ø 57 mm H=70 mm

Electrolux 045472 046506 046897 047731

440941

Adjustable foot
flange 130x100 mm - hole Ø 9mm

Electrolux 0E5009 0KL882 482255200

Feet

518653

Adjustable foot AISI 66x66 mm/Ø 57 mm
 - H=155÷230 mm
 flange 100x130 mm

Electrolux 0L0194

613696

Adjustable foot Ø 57 mm - H=150÷24
 L=708 mm

Electrolux 0L0853

349538

Foot inox Ø 2" - H=125 mm

Electrolux 053792 056927 080942
